

 


**Vehicle Blackbox DVR**  
**行车记录仪**

---

使用说明书  
USER MANUAL

### Product Structure

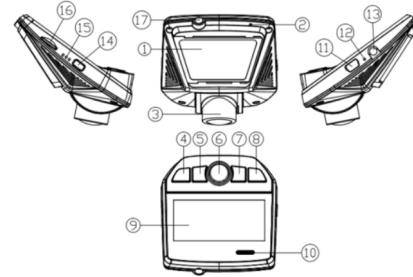

- |                |                 |   |
|----------------|-----------------|---|
| ① Back Clip    | ② MIC           | ③ HD Lens                               |
| ④ Menu Key     | ⑤ Down Key      | ⑥ OK Key                                |
| ⑦ Up Key       | ⑧ Mode Key      | ⑨ LCD Screen                            |
| ⑩ Speaker      | ⑪ USB Interface | ⑫ RESET                                 |
| ⑬ AV OUT       | ⑬ Power Key     | ⑮ Power/Working /<br>Charging Indicator |
| ⑯ TF Card Slot | ⑰ BMW line hole |   |

### **Key and Functions Instruction**

#### **Power Key**

**Function 1:** Power On and Power off. In Shutdown state, Short press to Power On; In Power on state, long press 3 seconds to Power off.

**Function 2:** The Screen Backlight open or close.

#### **Mode Key:**

**Function 1:** Mode Switchover. Short press to switch Mode circularly ( video mode, picture mode, playback mode)

**Function 2:** TV Switchover. Long press M key for 3 seconds to TV mode, then it will be displayed on the screen of TV, long press M key again for 3 seconds to display on the screen of dash cam from TV mode. (Need to connect TV OUT line to TV interface.)

#### **Menu Key:**

**Function 1:** Menu key. In the standby mode, press [ MENU ] key to enter the main menu setting. Press [ UP ] or [ DOWN ] to select the option you want to set, press [ OK ] to confirm. After setting, press [ Menu ] key to exit the menu setting function ( The menu setting method is the same in the video mode, picture mode and the playback mode ).

**Function 2:** Lock function. During recording, short press [ Menu ] key to lock the current file so that file will not be overwritten.

#### **Up key:**

**Function 1:** Page up. To page up In the menu settings and playback mode;

**Function 2:** Mute mode. In recording mode, press [ UP ] key to turn on / off the mute mode, icon in right corner of bottom will change accordingly.

**Function 3:** To open the WiFi function. In the standby mode, long press the [ UP ] key for 3 seconds to open or close the WiFi quickly. While there is a

WiFi icon  on screen.

**Down key:**

**Function 1:** page down. To page down in the menu settings and playback mode;

**Function 2:** Open Parking monitoring function. In the recording mode, long press **【 DOWN 】** key to turn on / off the parking monitoring function.

**OK key:**

In the menu interface, Short press **[ OK ]** is to confirm any opinion;

In the video mode, short press **[ OK ]** is to start or stop recording;

In picture mode, short press **[ OK ]** is to take picture;

In playback mode short press **[ OK ]** is to play or pause.

**Reset button:**

When the machine crashes, please insert a needle into the hole to press the

internal reset button, the machine can be reset.


**Tip:** This button is normally used in the crash state, not use under common state.

**Basic instructions for shooting Video / take picture**

**Video mode**


Dash cam will get into video mode after power on. Short press the OK button to start recording meanwhile a red dot blinking on screen. In this state, the menu will not be changed to other mode unless Press OK Key again to stop recording.

**Picture mode:**

In standby of shooting video state, press M key to enter into picture mode meanwhile icon  on the upper left corner. Short press the OK button to take pictures meanwhile screen flashes once, picture is completed; Short

press M key to switch to playback mode, Video / picture playback. In the picture mode, press the M key switch to playback mode, screen shows the playback icon on the upper left corner, Short press up key to scroll page up and select the file; Short press to scroll page down and select the file; Short press OK to play the selected video file; Short press the menu key to enter the menu settings, here you can delete or unlock the file.

### **Menu settings**

In the standby mode of the three modes(video 、 picture 、 playback), short press the menu key to call up the menu, then short press the key once again for switch to the setup menu  ;

Up or down key is to scroll up or down for select the options: If want to change setting content, press OK key to enter and change it; then press the menu key to exit the menu interface.

### **Time setting**

In any mode, Press M key twice continuously can enter the setting, short press the down key scroll to select the date setting, press the OK key to enter, short press the OK key again, you can switch between year/month/day/hour/minute/second, then Press the OK key to confirm the change; then press the menu key to exit!

### **USB mode:**

Connect the USB cable to the computer, press the Power button, USB menu will pop up automatically on dash cam screen, then following options will appear:

**Mass storage:** In this mode, dash cam can access and output video files or photo file from computer.

**Camera:** In this mode can be used as a webcam;

**AV OUT:** Connect video cable to AV OUT hole,dash cam will display to corresponding screen of the device.

**The instruction of installing APP for mobile phone**

**A. Android system mobile phone**

1. Open the "Google play store" search "Lerccenter" or scan the following two-dimensional code to download and install.



**B. IOS system Apple phone**

1. Open the "Apple store" search "Lerccenter" or scan the following two-dimensional code to download and install.



2. After the installation is completed, if you want "Lerccenter" access to cell phone photos, please click "OK" (Note: you must select "OK", otherwise you can not preview the pictures download by APP )

 
**WiFi Connection Instructions:**

**A. Android system mobile phone**

1. Open the APP "Lerccenter", click "Switch Connected Devices", then click on "WiFi settings" as shown beside:


2. Click WiFi Settings, enter the connection settings interface, search the machine WiFi, name A305-... .., then enter the password: 12345678. as shown below:

3. Click Connect, the phone and camera will be connected, click the back button to see the camera shooting screen.

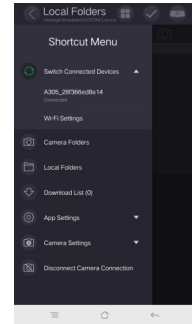

### B. Apple IOS system phone

 1. Open the phone WiFi settings, search the WiFi Hotspot, search the dash cam's WiFi, the name A305....., enter the password: 12345678. as shown below:
2. Then, open "Lerccenker APP" to preview or see video screen.

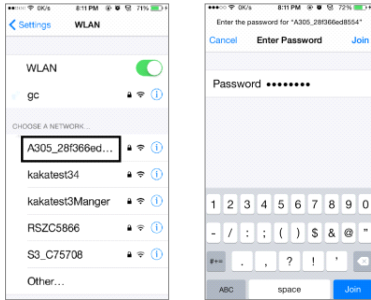

### Wireless control instructions

Click "Settings" to open the dash cam and set the shortcut menu, as shown below:

