

# Cell Phone

---

User Manual  
Model: PH201Q

Read this manual carefully before operation.

## Table of Contents

---

-----	0
-----	0
<b>User Manual</b> -----	<b>0</b>
<b>Table of Contents</b> -----	<b>1</b>
<b>Safety and Maintenance</b> -----	<b>2</b>
<b>Your Cell Phone</b> -----	<b>5</b>
1.1 APPEARANCE .....	5
1.2 KEY DESCRIPTION .....	5
<b>Instructions before Use</b> -----	<b>7</b>
2.1 POWER ON/OFF.....	7
2.2 MAKING PHONE CALL.....	7
2.3 ANSWERING THE CALL .....	7
<b>Menu Functions</b> -----	<b>8</b>
3.1 PHONEBOOK .....	8
3.2 CALL CENTER.....	8
3.3 SERVICES.....	8
3.4 MESSAGING.....	8
3.5 MULTIMEDIA .....	8
3.6 CAMERA .....	9
3.7 USER PROFILES.....	9
3.8 FUN .....	9
3.9 ORGANIZER .....	9
3.10 FILE MANAGER .....	10
3.11 SETTINGS .....	10
3.12 EMAIL .....	11

## Safety and Maintenance

### **While using the cell phone, please observe following points:**

- Before use, please read instruction manual carefully.
- Do not power on the cell phone when use of cell phone is prohibited or it may cause interruption or danger.
- Please keep your cell phone off when you are on a plane. If functions that will automatically power on your cell phone, such as alarm clock or calendar, are setup, please check and cancel the configuration before boarding the plane.
- While using the cell phone, please keep away from heat source and high voltage environment, such as electric appliances or electric cooking devices. Please use the cell phone under normal temperature. Use it under temperature above 55°C or below -10°C may damage the phone.
- Pay attention to fire prevention. Power off the phone while near flammable materials, such as gas-filling station and fuel storage.
- Do not hold the cell phone in your hand while driving. Do not put the phone above air bag or within reach of airbag so as to prevent damage when airbag is inflated.
- Please use Standard battery, charger and accessories provided by us. We are not responsible for any consequence caused by use of third party accessories.
- Cell phone may cause interference to nearby electronic devices, so keep it away from electronic devices such as radio, PC, pacemaker and hearing aid, etc. Do not place the cell phone near credit card or magnetic field. Please power off your cell phone in hospital and other special places according to specific regulations there.
- Keep the cell phone away from mechanic vibration or shaking. Do not hit the screen of your phone with sharp tool.
- If plastic cover or case is used for cell phone, surface coating may be damaged.
- Do not disassemble the cell phone boldly.
- Do not use benzene, thinner or alcohol to clean the cover of your cell phone. Keep your cell phone away from corrosive chemicals such as detergent. Use clean and soft cloth instead and wipe gently.

- Prevent your cell phone from insulation or places with excessive smoke or dust.
- Your cell phone is not water-proof, so please keep it dry. Do not use it in damp environment, such as bathroom. Keep it away from rain and moisture.
- If your cell phone has external antenna, do not touch the antenna when it is not necessary. Use original antenna only, for use of unauthorized antenna may cause damage to the phone.
- When you are to pull the charger away from your cell phone or cut off power supply of charger, please hold the connector tightly and then pull out. Do not drag the power cable.
- Do not rely on cell phone only as communication device for emergency, such as medical rescue.
- Keep the cell phone out of reach of children so as to avoid danger.
- **Do not place the battery in fire; follow local laws and ordinances in disposing used battery.**

**Check the model number of the charger before using it to charge the mobile. Only use approved battery, charger and accessories applicable to the specific mobile model. Using other types of battery, charger and accessories may violate the certification or warranty terms of equipment and may result in danger.**

**Return waste and used batteries to the supplier or specified recovery site.**

#### **CAUTION!**

**Risk of explosion if battery is replaced by an incorrect type.**

**Dispose of used batteries according to the instructions.**

**While using battery charger, please observe following points:**

- Before use, please read instructions for use and as well as label on the surface of the charger.
- Do not disassemble or modify the charger or use it when power cable is damaged; otherwise there will be electric shock or fire, or the charger may be damaged.
- Do not touch the charger with wet hands. If the charger contacts water or other liquid, immediately cut off the power supply.

- Do not short connect the charger and keep it away from mechanical vibration or shaking and direct sun shine. Do not use it in damp environment, such as bathroom. The battery charger is not waterproof; so keep it away from rain and moisture.
- Do not use the charger near electric appliances such as TV set and radio.
- When to pull out the plug, hold the charger instead of dragging the power cable so as to avoid damage of power cable.
- Keep the charger out of reach of children so as to avoid danger.

**§ 15.19 Labelling requirements.**

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

**§ 15.21 Information to user.** Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**§ 15.105 Information to the user. Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Body-worn Operation**

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **1.5 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

## Your Cell Phone

### 1.1 Appearance



### 1.2 Key description

Key	Description
Left soft key	In IDLE,press the key to enter main menu. Determine the operations and enter the selected menu.
Right soft key	In the menu, press back to the previous page. In IDLE, press the key to messaging.
Send key	SIM card call. Press the key to enter SIM card dialed calls interface.
End key	Press to return to the IDLE. Long press to power on/off.
OK key	Determine the operations and enter the selected menu.
F Key	Link the facebook.
Camera key	Enter the camera.
Alt key	FN key.

aA key	Switch size.
Space key	Input space.
Del key	Delete the character.
Sym key	Input symbolic.

## Instructions before Use

### 2.1 Power on/off

Ensure battery is properly installed.

Power on and hold [End key] button until boot screen appears.

Some SIM cards have PIN code protection. If there is prompt for input your PIN code, input your PIN code and then press [OK].

Default PIN code is 1234.

After power on, if SIM card inserted is valid, your cell phone will automatically search available network; If not, it will prompt: No SIM card is available.

### 2.2 Making phone call

Making phone call by dialing number

1. In the standby mode, enter the phone number you want to dial, and press the Dial key to make the call.
2. You can select a contact number from the phonebook and call the contact person.
3. To end the call, press the End Key.
4. In talk state, press “-,+” key to Adjust volume

### 2.3 Answering the call

Press Call Key to receive the incoming call. You can use the earphone to answer the call when the earphone or Bluetooth earphone is inserted in the phone



## Menu Functions

You can press left soft key in standby state to enter the main menu.

Once you have entered the main menu, you can select corresponding options by Navigation keys then pressing ok key to enter it.

Press [Right soft key] or [End key] to return to standby mode.

### 3.1 Phonebook

This phone can store 1000 phone numbers.

### 3.2 Call center

#### Call history

All calls/ Dialed Calls/ Missed Calls / Received Calls, You can view a list of the above.

#### Call settings

##### ■ SIM Call settings

Call waiting/ Call divert/ Call barring.

You can browse a list of above.

##### ■ Advanced settings

Through this function, you can set Auto redial, Call time display, Call time reminder, Auto quick end, Reject by SMS, Connect notice and Answer mode, etc.

### 3.3 Services

This phone supports the service function and STK .The specific items are depended by SIM card and network.

### 3.4 Messaging

You can send and receive text message or multimedia message.

### 3.5 Multimedia

##### ■ Image viewer

You can view the pictures or images through this function.

##### ■ Video recorder

Press OK to make a video.

##### ■ Media player

Playing all songs and Videos, press[-] [+] to adjust the volume .

## ■ Sound recorder

Use this function to record audio files.

## ■ FM radio

Once you have entered this function, you must insert the earphone firstly.

Press [-][+] to adjust the FM volume.

## 3.6 Camera

Enter this function, press ok key to capture pictures.

## 3.7 User Profiles

It provides five profiles: General、 Silent、 Meeting、 Outdoor and My style.

## 3.8 Fun

The phone supports JAVA function and some games.

## 3.9 Organizer

### 1. Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.

### 2. Tasks

Add or Delete task.

### 3. Alarm

On the handset may establish five alarm clocks, about the navigation keys may open and close the alarm clock, the motion high and low cursor input alarm clock time.

### 4. Calculator

In this menu, you can do basic calculations of addition, subtraction, multiplication and division.

### 5. Unit Convert

Your phone provides you with a unit conversion functions, facilitate the conversion. Including weight and length units.

### 6. Currency Converter

You input the rate first and then press OK to enter the window of input currency.

### 7. Stopwatch

You can use Typical stopwatch and nWay stopwatch, and save the timing record for future reference.

## **8. Ebook reader**

Read the book you saved

## **9. World clock**

Press arrow key may choose various countries the time, may open or close other urban start summertime according to the option.

## **10. Notes**

Add or Delect Notes.

### **3.10 File manager**

You can restore or delete the file where contain open, create or format the file.

### **3.11 Settings**

#### **3.11.1 Phone settings**

##### **1. Time and Data**

Set home city, time/data, format and on or off Update with time zone.

##### **2. Schedule Power On/Off**

Schedule power on/off from here

##### **3. Language**

This allows you to switch different languages

##### **4. Auto update of date and time**

Choose on/off.

##### **5. Flight mode**

Set on/off.

#### **3.11.2 Display**

1. Wallpaper: You can select the wallpaper you like.

2. Screen saver: select a screen saver for the phone.

3. Power on display: you select a picture for the power on.

4. Power off display: select a picture for the power off.

5. Show date and time: on/off.

6. LCD backlight: set the time and Brightness of the LCD Backlight.

#### **3.11.3 Network settings**

Network Setup helps you in Network Selection, selection of Preferred Network.

#### **3.11.4 Security settings**

1. SIM security setup: use the menu to open or close the SIM lock, and change the password of SIM PIN/PIN2. The default PIN code is 1234.

2 .Phone security: use the menu to set the phone lock. The default password is 0000.

3. Auto keypad lock: open the mode, and then choose the waiting time.

### **3.11.5 Connectivity**

1. Bluetooth

Enter the menu to set the followings: Power, Visibility, My device, Search audio device, My name, Advanced.

2. Date accounts:

GPRS: Add or edit the GPRS account.

3. Data service

Set on/off.

### **3.11.6 Restore Factory Settings**

Enter the password then the phone will restore factory setting.

## **3.12Email**

Support the email.