







POWER CHARGING

The device uses a built-in lithium battery. When charging, the red charging status light is always on. When the battery is fully charged, the red charging status light starts to flash. The capacity is 250mAh and the single charge time is 2 to 3

POWER ON/OFF

Press the power button for one second to turn on the device and the self-check information of the device will be displayed during this time. The device can only be used after the main window appears on the screen.

If there is no operation for 30 seconds, the device will enter sleep mode and could be waken up by tapping the power button or issuing transaction commands by the mobile client. The device will automatically shut down after no operation for 30



IMPORTANT

- 1. Please check the network connection status before opening the mobile client.
- 2. When using a magnetic stripe card, please swipe the card at a constant speed and stability.
- 3. When using an IC card, please do not pull out the card during transaction otherwise the transaction will fail.
- 4. Do not use the device in moist, extremely cold or hot environments.
- 5. Please turn off the device before cleaning and use a dry cloth to clean the device.
- 6. If any abnormality occurs, please hand the device to authorized professionals in time and do not maintain the device by yourself

CERTIFICATE OF QUALITY

Inspector Date



TRANSACTION

The cashier needs to verify the card account after swiping the card. After the verification is correct, the cardholder confirms the amount and then enters the password for the transaction. If the password is entered incorrectly, press the clear key(the yellow key) to re-enter.





E-SIGNATURE

Receipt generation after transaction complete

Dear customer

Within one year from the date of purchase, if the product has quality problems during normal use within the scope of specification and operation manual of this device, the company will provide free maintenance based on this warranty card and the purchase invoice.

The Company does not assume responsibilities for the following actions:

- Problems caused by use and maintenance without complying with the conditions specified in this guide:
- Problems caused by repair, modification, and disassembly by unauthorized personnel;
- Problems caused by accidents caused by the user's own transportation, such as falling, collision, shock, and water ingress;
- Problems caused by improper voltage, environmental pollution, and natural disasters such as fire, earthquake, flood, thunder and lightning;

- **WARRANTY & STATEMENTS**
 - Problems caused by improper maintenance and storage such as placing the device in an extreme hot, high humidity, toxic or corrosive environment:
 - This warranty card is not presented with the purchase invoice and the device together, or the warranty card is inconsistent with the device serial number:
 - The information on the warranty card has been. changed, such as the date of purchase, the name of the seller, the machine serial number:
 - The device is not purchased from authorized distributors.

材质: 157g铜版纸, 规格: 90x56mm

物料编码: 1049800122; 物料名称: MP45 说明书/海外通用/V2.0/HY

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- •Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.