 


Speaker Tower

user manual

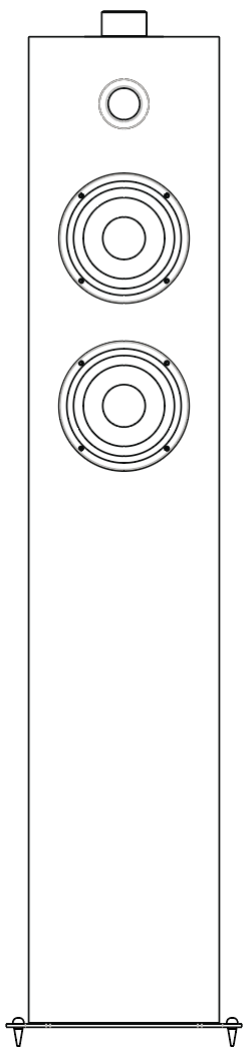

Tower Speaker

ENGLISH

Read these safety instructions before using your device and store them for possible future reference.

1. If the cord is damaged, have it repaired by the manufacturer, a technical service center or a similarly qualified person in order to avoid any hazard.
2. The power supply must be replaced by a new one in case of malfunction, because this power supply is not repairable.
3. The socket-outlet should be installed near the equipment and should be easily accessible.
4. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.
5. Children should be monitored to ensure that they do not play with the product.
6. When connected the cord should always be readily accessible.
7. The apparatus should not be exposed to dripping or splashing of water or liquids and no objects filled with liquids such as flower vases shall be placed on the product.
8. Do not impede the normal ventilation of the product when intended to use.
9. Always leave a minimum distance of 10cm around the unit to ensure sufficient ventilation.
10. Open flame sources, such as candles, should not be placed on top of the device.
11. The device is intended for use only in a temperate climate.
12. **CAUTION:**
Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
13. The battery should not be exposed to excessive heat such as sunshine, fire or similar.
14. Different types of batteries, new and used batteries should not be mixed.
15. The battery must be installed according to the polarity.
16. If the battery is worn, it must be removed from the product.
17. The battery must be disposed off safely. Always use the collection bins provided (check with your dealer) to protect the environment.

SAFETY PRECAUTIONS

Thank you for purchasing **Speaker Tower4**: Multimedia tower with *Bluetooth*, AUX in, USB play

This is your assurance of quality, performance and value. Our engineers have included many useful and convenient features in this product. Please be sure to read this instruction Manual completely to make sure you are getting the maximum benefit from each feature.

This product was manufactured using the highest quality components and standards of workmanship. It was tested by inspectors and found to be in perfect working order before it left our factory.

Model: **Speaker Tower4**

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



LIGHTNING FLASH WITH ARROWHEAD SYMBOL

The lightning flash with the arrowhead symbol within an equilateral triangle, is intended to alert the user of the presence of uninsulated dangerous voltage within the products' enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



EXCLAMATION POINT

The exclamation point within an equilateral triangle is used to indicate that a specific component should be replaced only by the component specified in the literature for safety reasons.

Notes:

- The images appearing in this manual are for reference only.
- Due to continual revision and improvement of our products designs and specifications are subject to change without prior notice.

SAFETY PRECAUTIONS

1. READ INSTRUCTIONS:

All the safety and operating instructions should be read before the product is operated.

2. RETAIN INSTRUCTIONS:

The safety and operating instructions should be retained for future reference.

3. HEED WARNINGS:

All warnings on the product and in the operating instructions should be adhered.

4. FOLLOW INSTRUCTIONS:

All operating and use instructions should be followed.

5. CLEANING:

- Turn Off the unit if it's on before cleaning.
- Unplug the unit from the wall outlet before cleaning.
- Do not use liquid cleaners or aerosol cleaners.
- Use a damp cloth for cleaning.

6. WATER AND MOISTURE:

Do not use this product near water.

For example:

Near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and similar.

7. ACCESSORIES:

Do not place this product on an unstable cart, stand, tripod, bracket, or table.

The product may fall, causing serious injury to a child or adult and serious damage to the product.

Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

When moving the product in a cart, it should be done with care - quick stops, excessive force and uneven surfaces may turn over the cart with the product causing damage.

8. VENTILATION:

Slots and openings in the unit are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided, or the manufacturer's instructions have been adhered.

9. POWER SOURCES:

This product should be operated only with the type of power source indicated on the marking label. If you are not sure of the type of power supply of your home, consult your product dealer or local power company. For products intended to operate with battery power, or other sources, refer to the operating instructions.

10. POWER-CORD PROTECTION:

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying special attention to the cords at the power plug socket and the jack plug socket.

During movement, please take care of the power cord.

For example:

Tie the power cord with a cable tie.

11. NON-USE PERIODS:

The power cord of the product should be unplugged from the outlet when left unused for long periods of time.

If the speaker has to be left unused for a long time, please leave the battery fully charged, otherwise it will cause damage to the battery.

12. LIGHTNING:

For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

SAFETY PRECAUTIONS

13. POWER LINES:

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuit. When installing an outside antenna system, extreme care should be taken to keep it from touching such power lines or circuits as contact with them might be fatal.

14. OVERLOADING:

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

15. OBJECT AND LIQUID ENTRY:

Never push objects of any kind into this product through the openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

Never spill liquid of any kind on the product.

16. SERVICING:

Do not attempt to repair this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all to qualified service personnel.

17. DAMAGES REQUIRING SERVICE:

Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions.

- When the power-supply cord, battery or plug are damaged.
- If the product has been exposed to rain or water.
- If liquid has been spilled, or objects have fallen into the product.
- If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions, as adjustments of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

- When the product exhibits a distinct change in performance it indicates a need for service.

18. REPLACE PARTS:

When parts require to be replaced, be sure the service technician has used official parts specified by the manufacturer or they have the same characteristics as the original parts, unauthorized substitutions may result in fire, electric shock and other hazards.

19. HEAT:

 
The product should be situated away from heat sources such as radiators, heat registers, stoves or other products that produce heat.

PREPARATION FOR USE


Carefully take out all the components from the carton and remove all packaging materials from the components. Make sure that nothing is accidentally discarded with the packing materials.

If possible, save the carton and packaging materials for the unlikely event that the product ever needs to be sent for service. Using the original carton and packing materials is the only proper way to protect the unit from shipping damage.


What's in the box

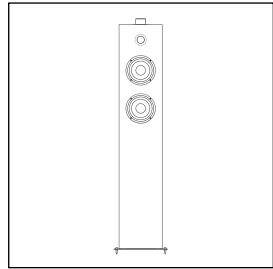

Bookshelf speaker x 1

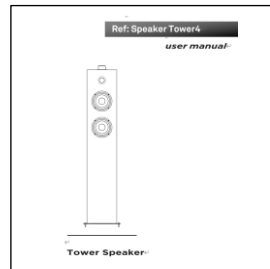 

User manual X 1

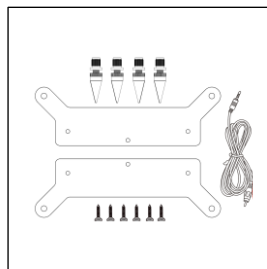 


AUX cable x 1
Feet x 2
Support feet x4
Screw x6

FEATURES OF THE TOWER

- Tower speaker System.
- High Performance Audio output: 50W RMS.
- 2x 4" Full Dynamic Range Speaker Drivers.
- 1x 5.25" Subwoofer speaker Drivers
- Compressed Wood Cabinet
- Bluetooth 5.0 Audio Receiver works with all mobile devices.
- USB player
- AUX in jack for external device playback


DESCRIPTION OF UNIT AND CONTROLS

 FRONT VIEW

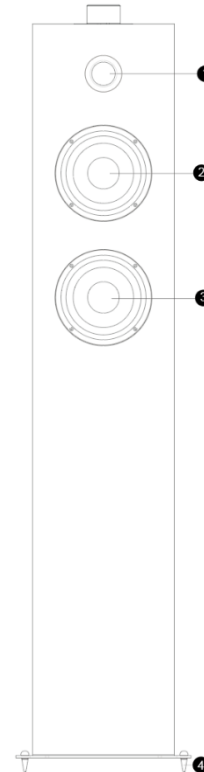

- ① AIRE HOLE
- ② SPEAKER L
- ③ SPEAKER R
- ④ FEET

 
REAR VIEW

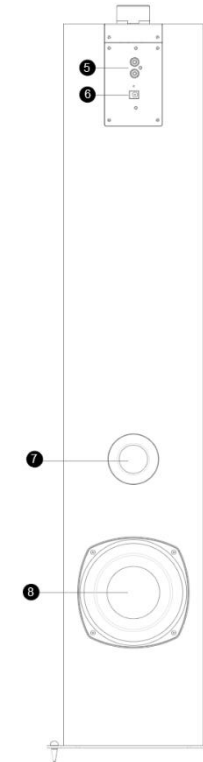

- ⑦ AIRE HOLE
- ⑧ Woofer speaker

DESCRIPTION OF UNIT AND CONTROLS

 TOP VIEW

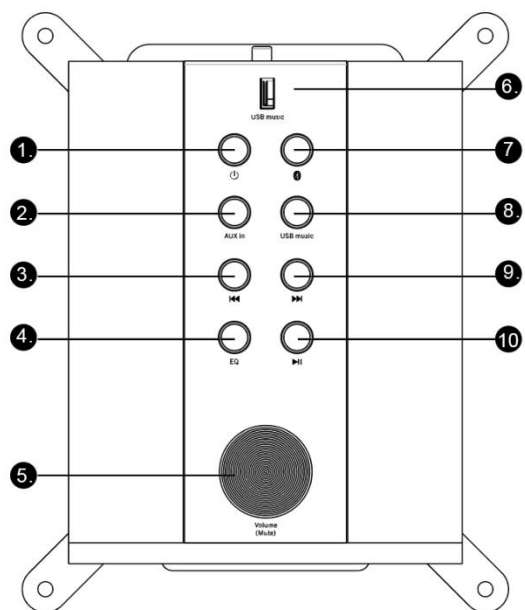

- ① POWER ON/OFF
- ② AUX -PRESS TO AUX MODE
- ③ PREV PLAY
- ④ EQ
- ⑤ VOLUME KNOB /MUTE
- ⑥ USB PORT
- ⑦ BT -PRESS TO BT MODE
- ⑧ USB -PRESS TO USB MODE
- ⑨ NEXT PLAY
- ⑩ PLAY / PAUSE

CONNECTIONS

MAINS CONNECTION




1. Check if the power voltage shown on the rating label located on the back of the set, corresponds to your local AC power supply.
2. Connect the power cord to the wall outlet.

Notes:

- Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.
- The power cord is used to disconnect the device, the power cord should remain easily accessible.

BASIC OPERATION

POWER ON & STAND BY MODE

1. Once the tower speaker has been connected to a wall outlet, turn on the power  button located at the top of the unit, then the LED in the red color .
2. Press the  button on the top panel of the unit
3. To put the tower speaker in standby mode, just press the  button on the top panel of the unit

PLAY MODE

Press the BT/AUX/USB button to switch among **BT** (*Bluetooth*) / **AUX** (*Aux in*)/**USB** modes.

VOLUME LEVEL

Rotate the VOLUME knob to adjust the volume level.



Press the [ or [] buttons to skip to a different track number

BLUETOOTH MODE

BLUETOOTH PAIRING

To use the *Bluetooth* function, your speaker should first be paired with your *Bluetooth* device. ("Pairing" means establish connection between *Bluetooth* devices such as mobile phone, tablets, pc, etc).

1. Press the **⏻** button to power on, the device will auto to *Bluetooth* mode.
2. In *Bluetooth* mode, a voice prompt will announce *Bluetooth* pairing mode.
3. The speaker will search automatically for *Bluetooth* devices.
4. Turn on the *Bluetooth* function on your device and make it visible (see your devices instructions to add or setup a *Bluetooth* device).

Search for *Bluetooth* devices and select "**Speaker Tower4**"
Enter the code "0000" if needed.

If the devices are paired successfully, will sound "connected" tone.
Having successfully paired, the device will be automatically connected next time.

5. Press and hold **▶||** for 2 seconds to disconnect the *Bluetooth*.

PLAY FROM A BLUETOOTH DEVICE

1. Press the **▶||** button to play.
2. To pause or resume play, press the **▶||** button again.
3. Press the **◀◀** or **▶▶** buttons to skip to a different track number.

Notes:

- Compatibility with all *Bluetooth* devices is not guaranteed.
- *Bluetooth* playback can be controlled from the external device, the top panel of the tower, or the remote control.

AUX-IN MODE

AUXILIARY INPUT FUNCTION MODE

This unit can be used as an active speaker for laptop computers, MP3 and other small audio players following the steps below.

1. Press the **⏻** button to turn on the unit.
2. Press the **⏻** button repeatedly until the "**AUX**" function appears on the display.
3. Connect an auxiliary cable ended in 3.5mm jack to the **AUX IN** socket.
4. Start playback on the external audio device. Adjust the volume on the audio device (do not set the volume to a high level in order to avoid distortion). You may also adjust the volume on the apparatus. To control playback function, use the controls on the external audio device.

Note:

- The auxiliary input mode only allows the user to control the volume from the unit.

USB PLAY FUNCTION MODE

USB MODE

This unit can be used as an active speaker for laptop computers, MP3 and other small audio players following the steps below.

1. Press the **⏻** button to turn on the unit.
2. Press the "**USB**" to USB mode.
3. Press the **▶||** button to play.
4. To pause or resume play, press the **▶||** button again.
5. Press the **◀◀** or **▶▶** buttons to skip to a different track number.

When playing media from a connected device,

the soundbar automatically switches to standby if:

1. No button is pressed for 10 minutes,
2. No audio from a connected device for 10 minutes.

AUTO STANDBY

TECHNICAL SPECIFICATION

MODEL:	SPEAKER TOWER4
Rated voltage:	AC 100-240V~ 50Hz 1.1A
Power consumption:	50W
Bluetooth version:	5.0
Audio output power (L+R+SUB):	45W (RMS)
AMPLIFIER	
Impedance: Input sensitivity:	4 ohms 310mV
Frequency response: Audio S/N:	300Hz~4kHz
ACCESSORIES	50dB
Auxiliary cable x1	
User manual x1	
Feet x4	
Support feet x2	
Screw x6	
DIMENSIONS & STUFFING	
Dimensions of the speaker drivers:	X2 (Ø88.9mm, 10W/4 Ohm) x1 (Ø133mm, 25W/4 Ohm)
Dimensions of the speaker tower:	W 200* D 270* H 320*mm
Net weight:	4Kgs
RF	
Bluetooth Frequency:	2402-2480MHz

END OF LIFE DISPOSAL

WARNING!



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.

Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

EN
15

IMPORTANT:



To avoid possible hearing damage, do not listen at high audio volume for long periods of time.



FCC ID:2ALLSOM-20018

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.