


Setting favorite positions

Once the open and close limits are set, the motor can store two favorite positions. After setting the favorite positions, hold **FAVORITE 1** or **FAVORITE 2** button for 2 seconds to send the motor to the favorite position 1 or 2. If you also use either Neo Smart Blinds app or Neo Smart Blinds Blue app to control your blinds, please read the related topic in the bottom of this page.

Setting favorite position 1

1. Use **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 1.

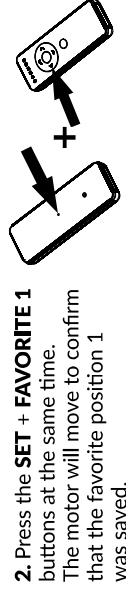

2. Press the **SET + FAVORITE 1** buttons at the same time. The motor will move to confirm that the favorite position 1 was saved.

Setting favorite position 2

 
1. Use **OPEN**, **STOP** and **CLOSE** buttons to go to the desired favorite position 2.




2. Press the **SET + FAVORITE 2** buttons at the same time. The motor will move to confirm that the favorite position 2 was saved.

Delete all remote controls

Attention: this procedure does not delete open and close limits or the favorite positions 1 and 2.



 1. Hold the **HEAD** button for 3 seconds, until the motor moves.



2. Hold the **HEAD** button for 7 seconds, until the motor moves.

Favorite position in the Neo Smart Blinds and Neo Smart Blinds Blue apps

The favorite position 1 and 2 are accessible to the Smart Controller through the Neo Smart Blinds app. None of the favorite positions set via remote control are accessible to the Neo Smart Blinds Blue app, however you can easily set up a favorite position in the app.

Remote control specifications

Transmission power: 10dBm


ASK 433.92MHz wireless transmission

Outdoor transmission distance: 200m


Indoor transmission distance: 35m

Working temperature: -20°C ~ +55°C

Battery model: CR2450

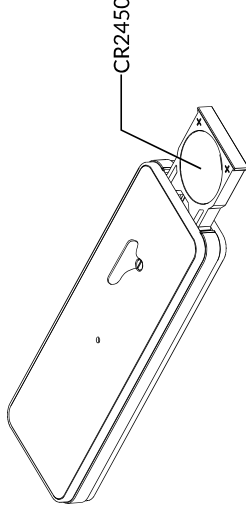


Compatible products to automate your home

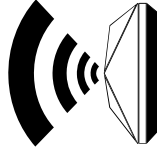

Smart Controller

Control your blinds from anywhere using your phone or tablet. Voice commands are available if integrated with Amazon Alexa, Google Assistant or Siri Shortcuts.

Blue Link

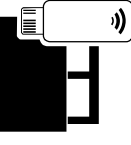

Local control of your motorized blinds using your phone or tablet. Set schedules to automate your home. No need to connect to your Wi-Fi or router.


For more information about our motors, remote controls and compatible products please visit our website. To buy one of these products, please contact your dealer.

neosmartblinds.com

In case of problem or doubt, please contact your dealer.

NEO REMOTE CONTROL

Compatible with all Neo motors
Version 5.0

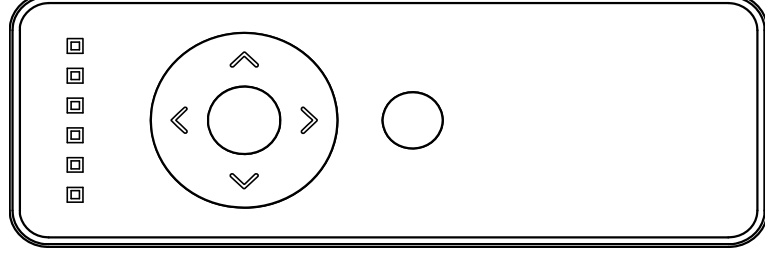


Models
RC-206-W
RC-206-B

powered by Neo Smart Blinds

ENGLISH

Getting to know your Neo Remote Control

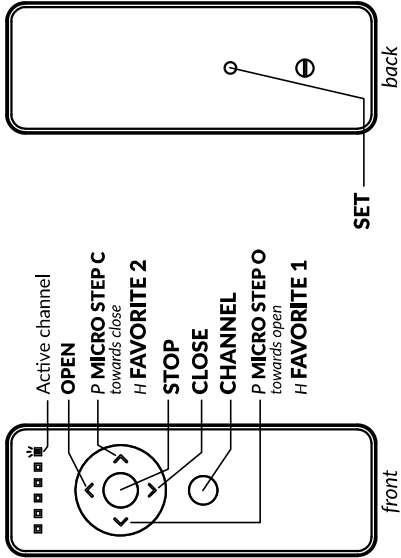

P - Press the button
H - Hold the button for 2 seconds

Basic operation

Unless noted, all commands are sent from a remote control to a motor, and will only have effect if the remote control's active channel has been paired with the desired motor.

Key	Description
Press OPEN	The motor moves all the way to the open limit ¹ .
Press CLOSE	The motor moves all the way to the close limit ¹ .
Press STOP	The motor stops any ongoing motion.
Press MICRO STEP O	The motor moves a small amount towards the open limit.
Press MICRO STEP C	The motor moves a small amount towards the close limit.
Hold FAVORITE 1 for 2 seconds	The motor moves to the favorite position 1.
Hold FAVORITE 2 for 2 seconds	The motor moves to the favorite position 2.
Press CHANNEL	The remote control cycles to the next channel (or group of channels), making it active ² .

1 - The motor will stop on button release if the limit is not yet set.
2 - This command is not sent to the motor, and affects only the remote control on which it is executed.

Choosing a channel

In order for a remote control to execute commands on a motor, its active channel must be paired with that motor. Use the instructions below to choose a channel, then proceed to the pairing process.

1. Press the **CHANNEL** button as many times as needed to select the desired channel to pair the motor.

Pairing process

Set remote control channel using the button on the HEAD

1. Hold the **HEAD** button for 3 seconds, until the motor quickly moves.
2. Press the **SET** button on the back of the remote control, the motor will move to confirm the operation.

Copy remote control channel

1. Using a previously programmed remote control (A), hold the **SET** button on the back of the remote control for 3 seconds, until the motor quickly moves.
2. Using the new remote control (B), press **SET** button on the back of the remote control, the motor will move to confirm the new remote/channel was paired.

Reverse direction

1. Hold the **SET** button on the back of the remote control for 3 seconds. The motor will quickly move to indicate the process has started.
2. Press the **CHANNEL + STOP** buttons at the same time, the motor will move to confirm the operation.

Setting or adjusting limits

The motor's open and close limits are set individually.

Open limit

1. Hold the **SET + OPEN** buttons at the same time for 3 seconds. The motor will move to indicate the process to set up the open limit has started.
2. Use **OPEN** and **CLOSE** buttons to go to the desired open position.
3. Press **SET** button on the back of the remote control, the motor will move to confirm that the new open limit position has been saved.

Close limit

1. Hold the **SET + CLOSE** buttons at the same time for 3 seconds. The motor will quickly move to indicate the process to set up the close limit has started.
2. Use **OPEN** and **CLOSE** buttons to go to the desired close position.
3. Press **SET** button on the back of the remote control, the motor will move to confirm that the new close limit position has been saved.

Delete limits

1. Hold the **SET + STOP** buttons at the same time for 3 seconds. The motor will move to indicate the limits have been deleted.

Don't forget to always select the correct channel of the motor you want to adjust.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Caution:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil a été évalué pour répondre aux exigences générales d'exposition RF. L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.