







 
 

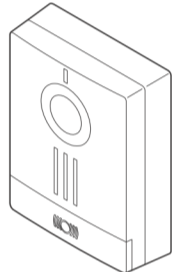




Quick Start Guide

All manuals for the WL-11 Series are available from our website (www.aiphone.net). Please ensure this information is provided to customers.

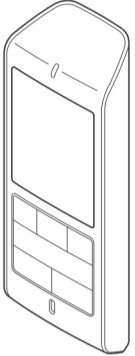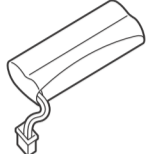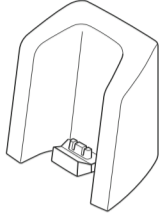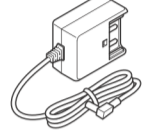AIPHONE

Package Contents


After opening the box, make sure that the following items are included.

Master station  Model name: WL-1ME.En	Battery pack  Model name: WLW-BT.E *Do not peel off the vinyl cover of the battery pack. *Ne retirez pas le couvercle en vinyle de la batterie.	Charging stand  Model name: WLW-C.E	
	AC adapter  Model name: BLJ06W050040P2-U	Wall mounting wood screws for charging dock x2 	
Plug A 	Plug BF 	Plug C 	Plug O 
* Use the appropriate plug in your region to the AC adapter.			
Video door station  Model name: WL-DA.En	Wall mounting wood screws for video door station x2 	Quick Start Guide (This manual) 	
	Wall mounting screws for video door station x2 (2) 	Handling Precautions Manual 	

n: Destination No For details of the destination, see the all manual.

Part Names and Function

Master station



Status indicator

Status	Notification content	Priority
Red flashing	The remaining battery power of the video door station is low. Replace the battery.	High
Blue flashing	There is an unviewed image recording. Can be configured not to blink.	Low
On red	Charging.	

* When there are multiple notifications at the same time, items are displayed in order to priority.

LCD screen
*Not a touch panel.
Remove protective film before use.

Function buttons (F1, F2, F3)

Talk button
Press to answer a call from the door station.

Monitor/Adjust button
Monitor the video from the video door station.
*For monitoring, change the setting.
If the subject is backlit or it is too dark to see clearly, the image will be adjusted for easy viewing.

Microphone

Antenna (internal)
Avoid covering the internal antenna with your hand. Doing so may worsen reception during communication.

Battery cover
Open when inserting or replacing the battery pack.

Charging stand


AC adapter
(Cord length: approx. 1.8 m)
Please fit the appropriate plug until it clicks.

Speaker
The handset ringtone and the voice of the other person can be heard from here.

Caution
• Loud sounds can occur suddenly, so keep this section away from your ear.

Part Names and Function

Video door station



Microphone

Illumination sensor


Camera
Remove protective film before use.

LED for night illumination
The LED light will automatically illuminate in low-light settings when a call is placed. The light will turn off at the end of a call. The light will also turn ON when [] of the handset is pressed at night.
*Change the setting to switch on the night illumination LED.

Speaker

Call button
Press the button to place a call to the handset.

Drain holes
These holes are intended for water to pass through. Do not obstruct them.

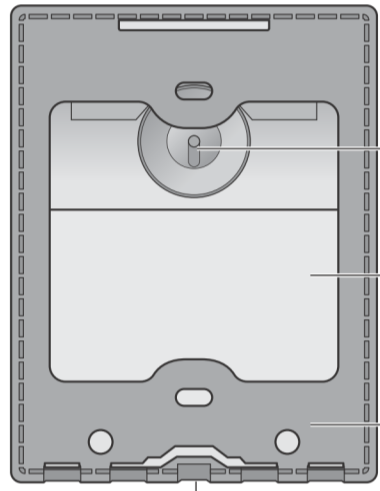

Camera angle adjustment lever

Battery cover
Open when inserting or replacing a battery.


Mounting frame

Locking screw

Using the function buttons (F1, F2, F3)

Functions manipulated by the function buttons (F1, F2, F3) are displayed on the screen when available.

* The functions displayed on the screen change in accordance with the status of this device.

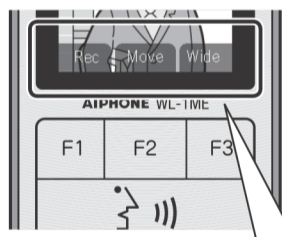

The functions displayed on the screen can be manipulated by the function button just below.

Example: During standby

Display recorded images stored on the handset.

Display the menu screen.

Example: When receiving a call

Record the displayed image to the handset.


Change the display position of the screen.

Change the screen to widescreen.


Charging the Master station

Charge the handset for 16 hours before using it for the first time.


1 Open the battery cover

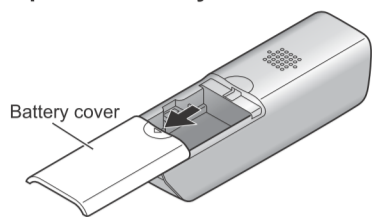

2 Connect the connector of the battery pack to the connector terminal inside the battery cover

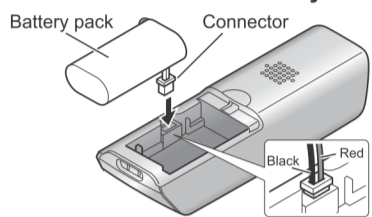


3 Set the battery pack, and close the battery cover

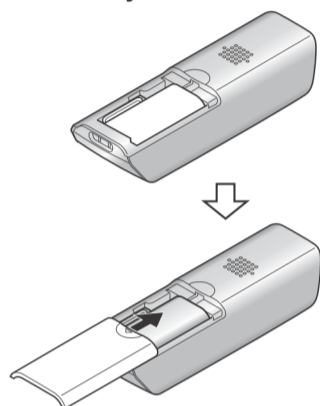

• Do not trap the connector of the battery pack.

4 Place the master station on the charging stand

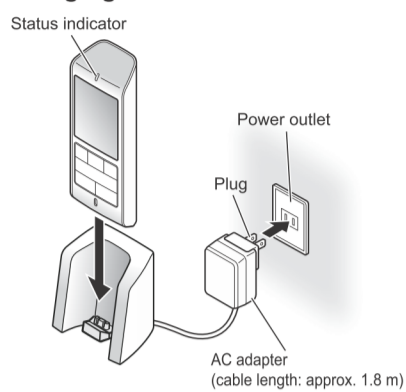

Use the appropriate plug in your region to the AC adapter.

- The status indicator switches on red during charging.
- After sufficient charging, the status indicator will be off.

Notes

- Charging time increases in the following conditions.
 - The operation temperature is low.
 - The AC power voltage is low.
 - The handset was used during charging
 - The reception status of this unit is "Out of range"

• Set the master station on the charging stand when it is not in use. Overcharging does not occur even when the handset is always on the stand.

• The status indicator may not switch off immediately when this unit is removed from the charging stand.

• The remaining battery power displayed just after the battery pack is installed may be lower than the actual value.


• "AIPHONE" is displayed on the screen after the handset is switched on, and the status indicator switches on red.

Warning

- Do not peel off the vinyl cover of the battery pack.
- If this unit will be removed from the charging stand or the power adapter will be unplugged for one week or more, remove the connector and remove the battery pack. (This maintains the battery pack performance and prevents consumption of the battery pack.)


Installing the video door station

1 Remove the mounting frame from the video door station

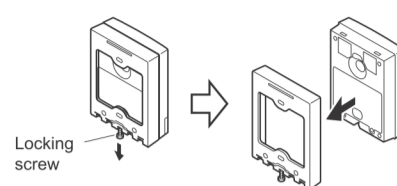

Loosen the locking screw on the bottom and remove the frame.


2 Remove the battery cover

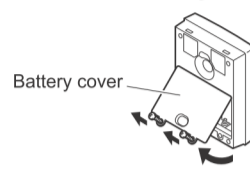

Loosen the two screws and remove the battery cover.


3 Insert six AA batteries (batteries not included)

Power supply: 6×AA size batteries (Ni-MH batteries with 2500mAh)

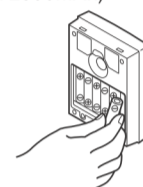


Align the plus (+) and minus (-) terminals correctly.

4 Attach the battery cover

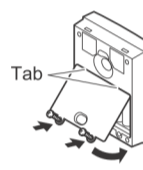


- Set the hooks of the upper section of the battery cover and attach the battery cover.
- Tighten the two screws.
- There is rubber packing attached to the rear side of the battery cover. Make sure that the rubber packing is not removed during attachment.

5 Adjust the camera angle

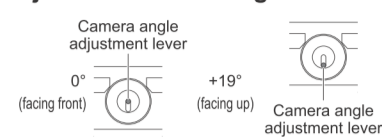


The camera angle can be adjusted from 0° through 19°.

6 Attach the mounting frame to a wall

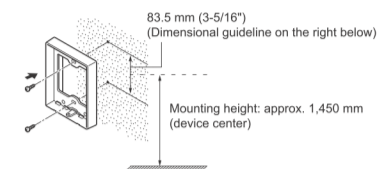

Secure the stand using the two included screws or wooden screws.

7 Attach the video door station to the mounting frame

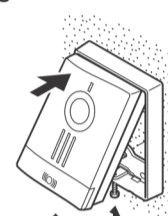

Insert the top section of the video door station into the mounting frame and push in the bottom section. Tighten the locking screw on the bottom to secure the video door station.

Notes

- Do not use wood screws when attaching to a switchbox.
- Mounting may not be possible depending on the wall surface.

Reference for attachment hole width


Setting the Date and Time

Set the date and time before using it for the first time. This date and time is used for the listed dates and times of recordings.

Notes

- The date and time may revert back to the default setting when, for example, the battery pack is removed, etc. In such cases, set the date and time again.
- Clock accuracy may deviate as much as ±1 minute per month. We recommend configuring the date and time periodically.

1 Press [F3] (Menu) on the standby screen

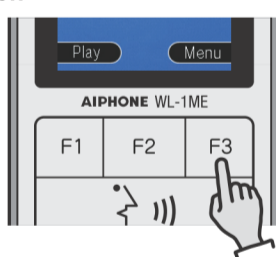

The menu screen will be shown.

2 Select "Date & Time" using [F2] (V) and press [F3] (Select)




3 Configure the current date and time using [F1] (A) or [F2] (v) and press [F3] (Select)




- The item to be configured flashes in yellow.
- How to change the date and time
 - [F1] (A): Increases the value by 1.
 - [F2] (V): Decreases the value by 1.
- If [F1] is pressed when the maximum value is displayed, the value returns to the minimum value.

4 Repeat Step 3 and configure the month, year, hour, and minute

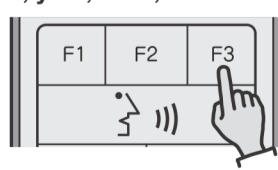

A "beep" is heard when the configuration is finished.

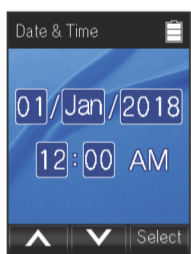

The date and time configuration screen will be shown.


Receiving a call

Answering a door call and communicating

When the call button of the video door station is pressed



1 View a visitor by looking at the screen

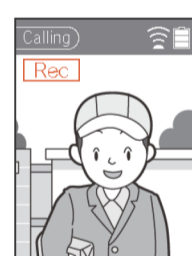

- When the screen is difficult to see due to backlighting, adjust the screen brightness.


2 Press [F3] (Talking), and speak with other party



- Communicate with the other party after "Talking" is displayed.
- Speak with the other party in turns. If both parties speak simultaneously, voices may be cut off.
 - If the voice of the other party cannot be heard well, adjust the volume.
 - When approx. 50 seconds passes from the start of communication, "Extend" will be displayed. It is not possible to switch the screen or record images manually during this time.


Extending the talk time

After "Extend" is displayed the screen, press [F3] (Extend)

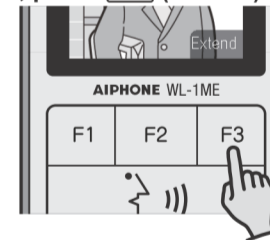

Communication will be extended approx. one minute.

3 When the communication ends, press [F3] (Standby)

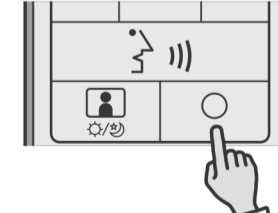

Notes

- When there is no response after the master station ringtone starts, the call will be ended after approx. 30 seconds. The screen will return to the standby screen.
- Communication time is approx. 1 minute. Communication can be extended twice.
- When the ambient noise is loud enough to interrupt the audio, communicate using push-to-talk.
- When a call is received from the video door station, image recording will start automatically. During recording, "Rec" (Recording video) is displayed on the screen.
- The night illumination LED of the video door station can be switched on at night.
- It takes approx. six seconds from when the call button of the video door station is pressed until images are displayed.
- When the master station is placed on the charging stand during communication, the screen will return to the standby screen.