

Operation Manual

(With installation instructions)

AIPHONE

Wireless video intercom

Device No. **WL-11.En**
n : Destination No



- Always charge the handset before use.
- When the handset is not in use, always set it on the charging stand.



Always read this manual (operation manual) before use to ensure you use the equipment correctly. Furthermore, after reading the manual, store it carefully in a readily accessible location.

*The illustrations and images used in this manual may differ from the actual items.







 
 

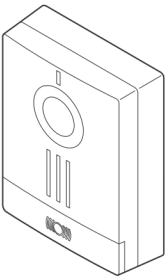



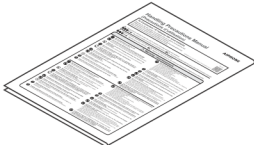
Use a nickel-hydrogen battery for the rechargeable battery. A nickel hydrogen battery is a valuable resource that can be recycled. Please recycle nickel-hydrogen batteries.



The warranty term of this product is two years.

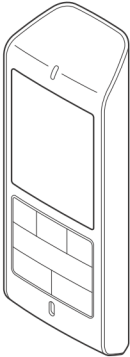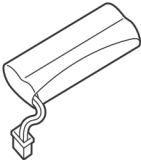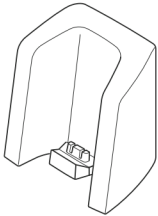
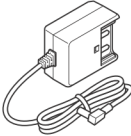
Package Contents

After opening the box, make sure that the following items are included.

Master station	Battery pack	Charging stand	
 <p>Model name: WL-1ME.En</p>	 <p>Model name: WLW-BT.E *Do not peel off the vinyl cover of the battery pack. *Ne retirez pas le couvercle en vinyle de la batterie.</p>	 <p>Model name: WLW-C.E</p>	
	<p>AC adapter</p>	<p>Wall mounting wood screws for charging dock x2</p>	
	 <p>Model name: BLJ06W050040P2-U</p>		
<p>Plug A</p>	<p>Plug BF</p>	<p>Plug C</p>	<p>Plug O</p>
			
<p>* Use the appropriate plug in your region to the AC adapter.</p>			
<p>Video door station</p>	<p>Wall mounting wood screws for video door station x2</p>	<p>Quick Start Guide (This manual)</p>	
 <p>Model name: WL-DA.En</p>			
	<p>Wall mounting screws for video door station x2 (2)</p>	<p>Handling Precautions Manual</p>	
			

Part Names and Function

Master station

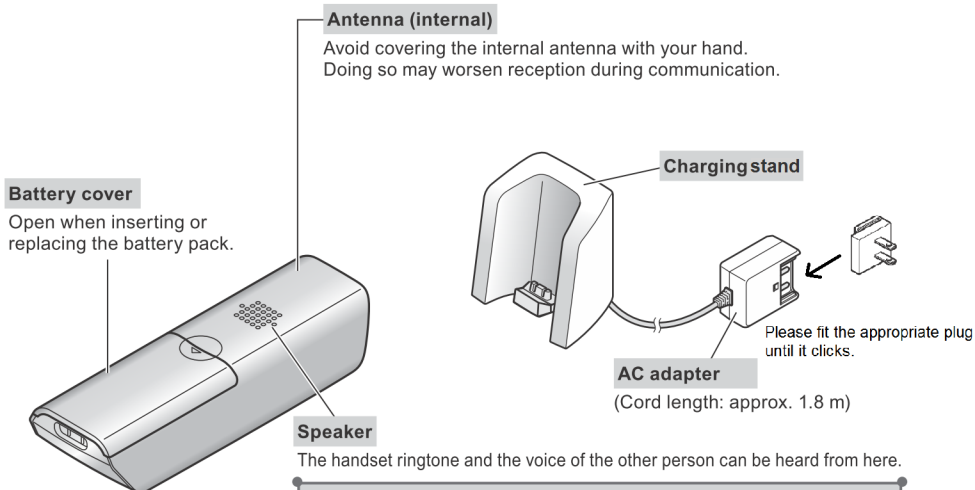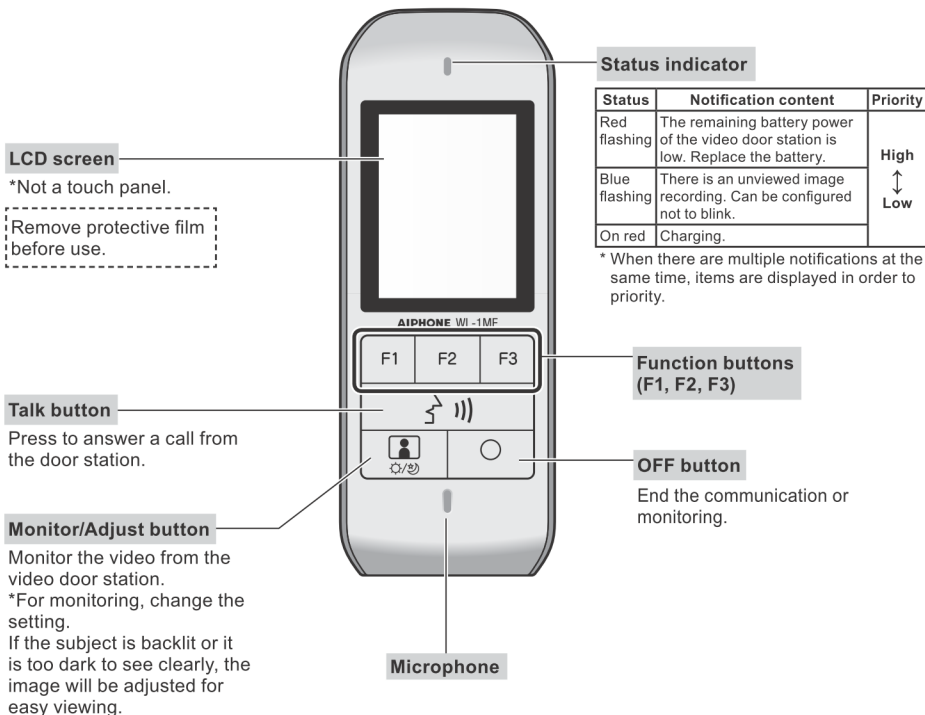


⚠ Caution

- Loud sounds can occur suddenly, so keep this section away from your ear.

Charging the handset


Charge the handset for 16 hours before using it for the first time.

1 Open the battery cover

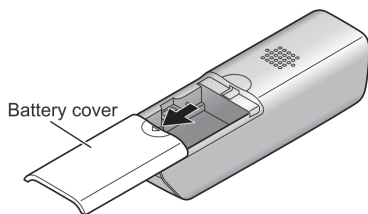


2 Connect the connector of the battery pack to the connector terminal inside the battery cover

Battery pack (Device No.:WLW-BT.E)

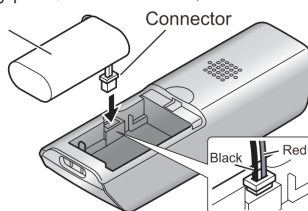


3 Set the battery pack, and then close the battery cover

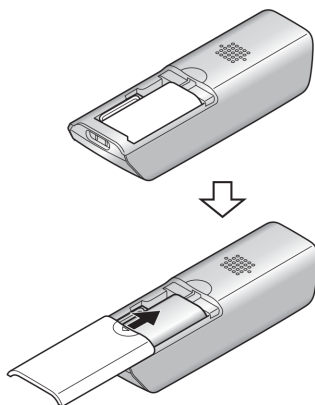

- Take care not to trap the connector of the battery pack.

4 Place the handset on the charging stand

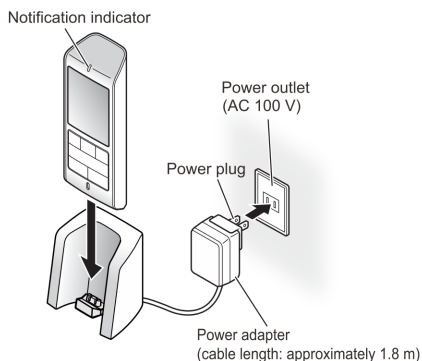

- The notification indicator switches on red, which indicates a charging state.
- After sufficient charging, the notification indicator switches off.

Notice

- Charging time increases in the following situations.
 - When the usage environment temperature or power voltage is low
 - When the handset was used during charging
 - When the reception status of this unit is "Out of range"
- **When the handset is not in use, always set it on the charging stand. Overcharging does not occur even when the handset is always on the stand.**
- The notification indicator may not switch off immediately when this unit is removed from the charging stand.
- Immediately after the battery pack is installed, the displayed remaining battery power may be lower than the actual value.
- If power is supplied to the handset, "AIPHONE" is displayed on the screen, and the notification indicator switches on red.

Request

- Only use the designated battery WLW-BT.E for this device.
- Do not peel off the vinyl cover of the battery pack.
- If this unit will be removed from the charging stand or the power adapter will be unplugged for one week or more, remove the connector, and then remove the battery pack. (This maintains the battery pack performance and prevents consumption of the battery pack.)