

User Manual

BLE Sensor

Brand: PROSPACE

Model:Sensor 2.0 BLE

Mmanufacturer	PROSPACE PTE. LTD.
Address	113 Bishan Street 12, #09-116 Bishan View Singapore (570113)

Sensors



Sensor front

All front of the sensor will have a label. For Example, L31-M6-8 in the picture(Sensor front).

L31 is equal to Floor 31, M6 is equal to Meeting Room 6 and "8" is equal to the seat number



Sensor Back

All Sensor back have 3M double sided tape for pasting under the table

All Sensor need to have at least one 4V button batteries in order to work properlu



Sensor Label = Each Sensor have an unique number. This number is recorded in our system to process the seat utilization.



Every BLE Sensor need to be place at every seat correctly. According to the label of the sensor.

The Recommended distance of the sensor pointing toward the seats is 25cm.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.