





 








User Manual

SAMMIX R92 remote control is infrared + Bluetooth Dual channel

 Please install brand new 2xAAA batteries according the polarity make in the battery box



-  +  While hold to connection Bluetooth
-  POWER : Press to standby.
-  HOME : Fast key to go back to main menu.
-  RETURN : Press to return back to previous menu.
-  MENU : Press to choose function menu of corresponding application in video, music, photo and website.
-  VOL : Press to increase/decrease the volume.
-  Cursor : Press to use the navigation button as cursor.
-  Navigation : Press to navigate left/right/up/down. Press OK to confirm your choice.

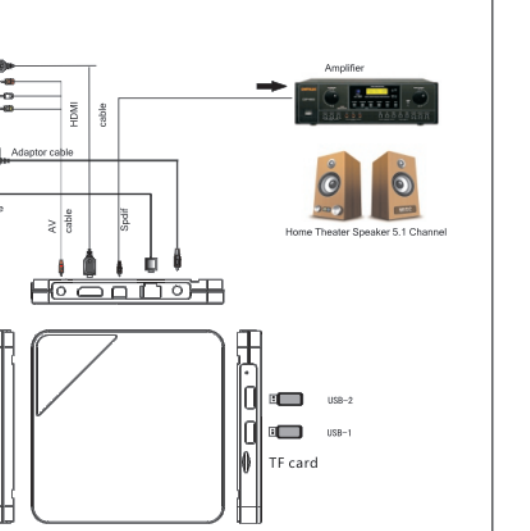 

Turn on the TV box while indicator light is blue. Enter into main menu at about 30 seconds.



 
There are apps which you usually use. You can add the apps according to your own preference. Please tick the apps you need. Tick it again when you don't need it.




Move to "My Apps", Press OK to enter in. You can see icons referring to different function on the picture.




Move to "Browser". Press OK to enter in. It is a convenient way for you to go to your desired website. Notice: Please go to the system setting to set the internet connection before entering into the website.

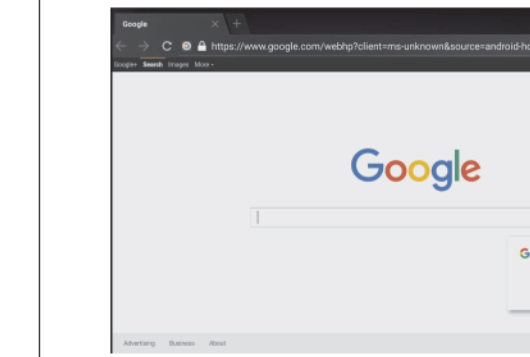

 Move to "Apk Installer". Press OK to enter in. You can install software by this app installer function. Please first download your desired software by apk formats from the computer to the USB. You will choose your desired device in order to scan the apks. Press OK to install your desired software. After the installation finished, the software icon will be shown on the applications menu.

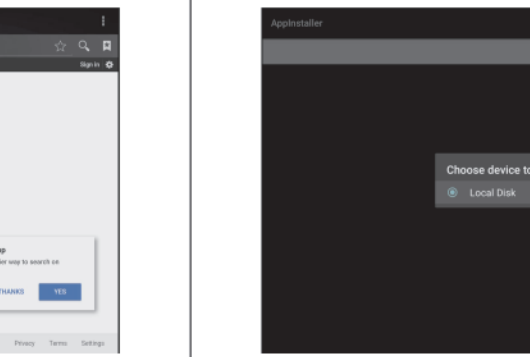

 Change language :setting--Language Choose the language you need

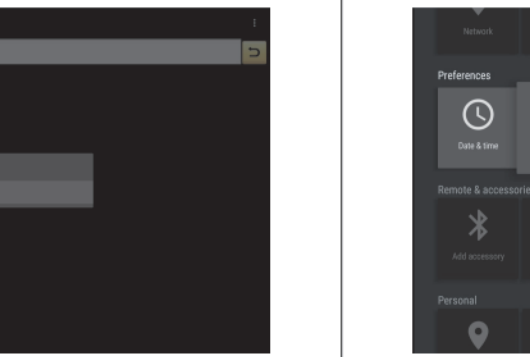

Under no circumstances should you try to repair the TV Box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV Box. -Press the power on the remote control to turn on the power.
No picture	-Reconnect with HDMI cable or AV cable. -Check if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.
The box does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV Box. -Reduce the distance to the TV Box. -Replace the batteries in the remote control.
Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.
No sound during movies playback	-The audio codec may not be supported by the TV Box. You can change to the supported audio on playing menu. -Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV Box for 30seconds and restart the TV Box.
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDMI connection	-Check the connection between the TV and the HDMI jack of box. -Check your TV system setup. -Check the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV Box, wait 30 seconds, turn it on again. -If under HDMI status, check if HDMI connections correct or change another HDMI cable set the output resolution of this TV Box into 720p.

Federal Communication Commission (FCC) Radiation Exposure Statement

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.