


User guide / Guia de usuario / Guia do utilizador / Guide de l'utilisateur
Guida all'uso / Benutzerhandbuch / Gebruiksaanwijzing / Podręcznik użytkownika

PIC 01

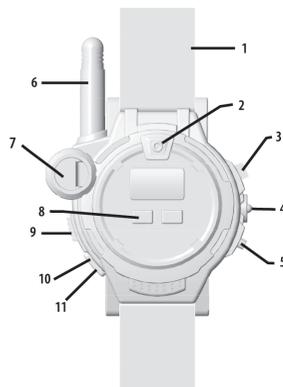

PIC 02



FRONT

THIS BOOKLET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION / ESTE FOLLETO DEBE CONSERVARSE YA QUE CONTIENE INFORMACIÓN IMPORTANTE / ESTA BROCHURA DEVE SER RETIDA UMA VEZ QUE CONTÉM INFORMAÇÕES IMPORTANTES / CE LIVRET DOIT ETRE CONSERVE CAR IL CONTIENT DES INFORMATIONS IMPORTANTES / QUESTO LIBRETTO DEVE ESSERE CONSERVATO IN QUANTO CONTIENE INFORMAZIONI IMPORTANTI / DIESE BROSCHÜRE MUSS AUFBEWAHRT WERDEN, DA SIE WICHTIGE INFORMATIONEN ENTHÄLT / DIT BOEKJE MOET BEWAARD WORDEN AANGEZIEN HET BELANGRIJKE INFORMATIE BEVAT / NINIEJSZA BROSZURA MUSI BYĆ ZACHOWANA, PONIEWAŻ ZAWIERA WAŻNE INFORMACJE

WATCH WALKIE-TALKIE

RELOJ WALKIE-TALKIE / RELÓGIO WALKIE-TALKIE / HORLOGE TALKIE -WALKIE
OROLOGIO WALKIE - TALKIE / UHR WALKIE-TALKIE / KLOK WALKIE-TALKIE / ZEGAR WALKIE-TALKIE

ENGLISH

INSTRUCTIONS FOR USE

PLEASE CHARGE THE PRODUCT WHEN YOU RECEIVE IT TO ENSURE THAT THE PRODUCT HAS ENOUGH POWER TO USE!
WARNING: This product has a built-in lithium battery, please keep away from fire and water, do not place in wet places. Do not clean directly with water, just clean the dirty area with a wet rag. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

PRODUCT FUNCTION DESCRIPTION (Pic 01, 02)

- | | |
|----------------------------|------------------------------|
| 1. Watch band | A. USB charge (x1) |
| 2. MIC | B. Walkie -Talkie watch (x2) |
| 3. Walkie-talkie switch | |
| 4. Flash light | |
| 5. Flash light button | |
| 6. Antenna | |
| 7. Compass | |
| 8. Clock adjustment button | |
| 9. TALK button | |
| 10. Charging port | |
| 11. Dust plug | |

This toy is only to be connected to equipment bearing of the following symbol:



Intercom mode: After the Walkie-talkie switch is turned on, the indicator on the watch lights up, indicating that it is in the intercom state. If there is no need to talk, please turn off the Walkie-talkie switch. You can save Walkie-Talkie power.

Steps to use the intercom function: 1. Push up the two Walkie talkie switches to turn on
2. Press and hold the TALK button to speak

Note:

- When one walkie talkie presses and speaks, the other one cannot press the TALK key, otherwise the other one cannot be heard.
- Press the TALK key twice quickly, both walkie talkie's watch will ring.
- The communication distance in the open area is greater than 200M. When there are many obstacles, the communication distance is about 100M.
- When using a strong radio signal nearby, it may be affected by interference and affect the call quality.
- Do not use too much force to pull out the dust plug.

6. To avoid hearing damage from loud ringing, keep a distance of more than 10CM between your ears and the intercom.

Note about 402030 batteries:

- Before the battery runs out, charge it in time; otherwise, the battery life will be reduced.
- If the battery runs out and shuts down, please charge it within 30 days, otherwise the battery will be scrapped; Please find a professional to replace the battery.
- Please use a 5V1A charger. Using a high power charger may damage and reduce battery life. The battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure, or other parts, and in the event of damage, it shall not be used until the damage has been repaired.

When the red light on the circuit board goes off, it means the walkie-talkie is fully charged

DISPLAY FUNCTION DESCRIPTION

Display screen (C): Normal time display, hours and minutes

Middle two keys function:

Left key (A): Setting

Right key (B): 1. Press (B) once: Month and date automatically return to normal time display.

2. Press (B) twice: Seconds (press (B) again to return to normal time display).

Setting the watch:

- Month: Press (A) twice to display month and set the month with (B).
- Date: Press (A) to display the date and set the date with (B).
- Hour: Press (A) to display the hour and press (B) to set the hour ("A" for AM and "P" for PM time).
- Minutes: Press (A) to display the minutes and set the minutes with (B).
- Press (A) once more to return to normal time display.



TECHNICAL SPECIFICATIONS

BATTERIES REQUIRED (per unit):

Watch: LR41 - 1.5V (x1) (replaceable and not rechargeable)

Walkie-Talkie: 402030 LiPo (x1) (rechargeable and non-replaceable)

Rated voltage: 3.7V; Rated capacity: 150mah; Watt-hour rating: 0.555Wh

Charging time: 2 hours

Standby time (Only the red light is turned on and there is no operation): 2 hours

Available time (using them all the time): 45 minutes

INPUT≤5V≤1A

CIRCUIT BOARD INFORMATION:

1. Maximum output power:1.5mW

2. Frequency: 462.5625MHz

3. Overdischarge protection, 2.8V

4. Overcharge voltage protection, 4.2V

5. Current-limiting protection, 107mah

6. Short-circuit protection

The supply terminals are not to be short-circuited.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries should be charged under adult supervision. Different types of batteries or new and used

batteries are not to be mixed. Batteries are to be inserted

with the correct polarity (+ and -). Exhausted batteries

are to be removed from the toy.


BATTERY REPLACEMENT

1. Unscrew these two screws.

2. Remove the cover and you can see the movement.

3. Use a tool to remove the transparent shell and you can get the movement

4. Unscrew these two screw. Remove the cover and you can change the battery

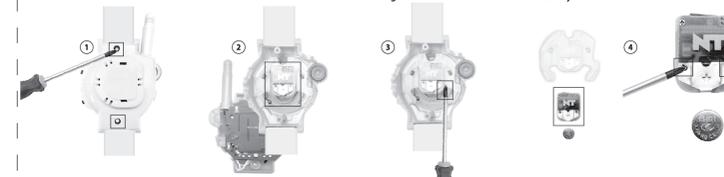

ESPAÑOL

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Accutime watch Corp

1001 avenue of the Americas new York, NY 10018

Questions or comments please email INFO@accutimewatch.com

