

Smart Watch Phone

User Guide

Please read the manual before use.

- ◆ The information in this document won't be modified or extended in accordance with any notice.
- ◆ The watch should be charging 2 hours at least before use.

1. Product specification

- ◆ CPU MTK2502D
- ◆ Memory:RAM 32Mb+ ROM 32Mb,
- ◆ Capacitive touch screen 1.44" 128*128 pixel
- ◆ Bluetooth version 4.0
- ◆ Function: BT Call , BT SMS, Anti-lost, Alarm, Pedometer, Sleep monitor, Sedentary reminder, Information notification etc.
- ◆ Battery Lithium-ion 3.7V 230mAh

2.Product details:

2.1 Product details

Power Key: Power On/Off ; Awaken/turn off screen ; Back to main menu

Touch screen: Each function (main menu) will be shown and displayed on capacitive touch screen.

2.2 Products quick into :

You can enter into next page by sliding screen up, and return to last page by sliding screen down; enter into the sub-menu after clicking selected menu, and return to upper menu after sliding from left to right. It will be in mistake for a click if the drag distance too short.

2.3 Clock Display



Setting method :

Method 1: Power on the device, when the watch is in clock mode, please long press middle screen and set different clock interfaces as you like by sliding screen right or left.

Method 2: Power on the device, Enter the main menu: settings--clock—clock type, then choose the clock mode if you like.

3. Product quick use

3.1 Download and install:

You have to download and install the "Fundo Wear" App from APP Store or Google

Play Store;

Open the App and add your email account .



3.2 Connection and Synchronize data

3.2.1 Bluetooth connection

First, go to your watch main menu and select Settings>BT Settings and make

sure that the power is on.

ANDROID™:

- Before you begin, download the Fundo Wear app from the Google Play store.
- Go to your ANDROID device's settings menu and make sure that your Bluetooth is turned on and that you check the box to make your smart phone visible to other devices.
- Go to the Fundo Wear app you downloaded and open it.
- Select the plus sign and then select the Bluetooth icon. A new window will pop up. Tap the Start Search button and a list of visible Bluetooth devices will appear. Select your X02D from the list.
- A window should pop up saying "Pair with bluetooth device". Select "Pair" and the phone will pair with your X02D. You will now see a Bluetooth icon that is half Green and half Blue on your watch letting you know that your device is fully connected via the app.
- Your notifications will begin to load on the watch.

iPhone™:

- Before you begin, go to the Apple Store, search for and download the Fundo

Wear app.

- To turn on Bluetooth on your phone, go to your Settings menu>>Bluetooth>>make sure it is switched on.

- Once you have confirmed that Bluetooth is on, you should see the device in your Devices list. It should show as X02D. Select this device to connect. You will see a blue Bluetooth icon on the watch to let you know that you are connected to your device

-Once the device shows as connected, go to the Fundo app you downloaded and open it.

-Select the plus sign and then select the Bluetooth icon. A new window will pop up. Tap the Start Search button and a list of visible Bluetooth devices will appear. Select your X02D from the list.

-A window should pop up saying "Bluetooth Pairing Request". Select "Pair" and the phone will pair again with your watch. You will now see a Bluetooth icon that is half Green and half Blue on your watch letting you know that your device is fully connected

via the app.

-Your notifications will begin to load on the watch.

After you have connected your watch to the "Fundo Wear" APP, you can edit the watch name(for Android device), and search the position of your watch.




Notice :

The Sync software can open in sync APP already installed and Accessibility, the mobile will show Bluetooth connected done after 2-5min;the watch will inform you the time of Sync with phone, than the Sync switched on. The message will sync to you watch when it incoming to mobile .

3.2.2 Synchronizing data

When you stop walking then go to your Smart phone and open the "Fundo wear"

App. and Press "Sync Data" and your steps will show exactly how it shows in your smart watch.

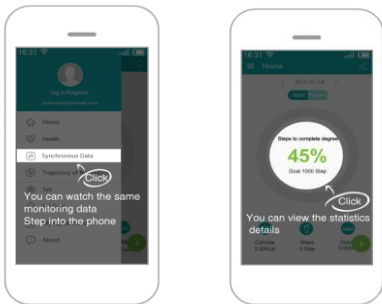


3.3 Enable Notifications

This will allow your smart watch to send you notifications from apps you have installed on your iPhone or Android device.

For example: if you want your email notifications send to your smart watch, enable the app on the "Fundo Wear" App. When an email is received it will notify you on your

smart watch.(Only for Android device)

(See illustration images below)

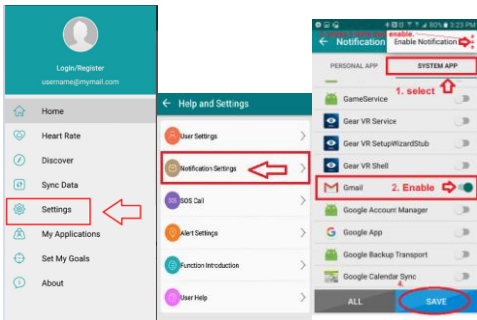

Notice :

Please don't shut the Bluetooth notify service when you are clearing software by background or close background application software. It will affect the sync function between watch and phone if shut it.

3.4 Base function

3.4.1 Message

Sync phone message.

3.4.2 Call logs

You can check your phone call records after you connect with the Bluetooth.

Shown all records including miss call, dialed calls and receive call; You can check the date, time and phone number of the miss call after you choose it, but only can call this number.

3.4.3 BT

Paired devices from smart watch

3.4.4 Remote notifier

When there is SMS (only for Android device), incoming messages from Skype and other applications on the connected phone, the watch phone will alert you to read them.

3.4.5 Remote cameras

Use phone camera take photos, but remote by watch, it's need switch on the camera of phone in advance.

3.4.6 Pedometer

It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as steps, distance, time, etc., to control exercise.

3.4.7 Sleep

Show your sleep quality base on your sleep times.

3.4.8 Sedentary remind

You can set a time to remind you up to do exercise, we suggest you the time could be one hours.

4. Notice

4.1 Full charge before use, the charge time need 2 hours.

4.2 Use the accessories cable and charger, or your android phone accessories .

4.3 Bluetooth will disconnect when exceed the distances, after switch on the Find my device, the smart search function can't be use before reconnect with Bluetooth.

4.4 Please reconnect with BT if it's disconnected occasionally (please Manual connect if the Bluetooth disconnect over 2 minutes) .Please agree the phone book Sync otherwise there is no called phone book.

4.5 When playing the music,some of music's name can shown and some can't, it is normal, because android phone are difference.

5. Common trouble shooting

Please refer below key function for any problems with the watch,if the problem is still unsolved,please contact with our dealer or serviceman appointed.

5.1 Unable to switch on

The time of press the power button too short,please keep it more than 3 seconds.

Low power,please charge it.

5.2 Shut down automatically

If it's in low power, please charge the watch

5.3 Using time too short.

When the battery is not full, please make sure it is full power (full charge need 2 hours at least).

5.4 Unable to charge.

The battery's life will be reduced after few years. Please check if the battery are work.

Change a new charger if it is unworkable.

Please check the USB slot connecting good. If no, please try again.

5.5 No caller's name when incoming call

Forgot to choose upload the phone book when connected with BT, or unselected keep upload the phone book.

Forgot to sync the phone book when reconnected, please pair the device and connect BT again.

5.6 Bad phone call voice.

Watch and phone are separated too far, please be more close ; Bad signal of BT.

FCC Warning This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

* RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.