WIRELESS **SPEAKER**

LISER MANUA

This manual will help you operate the Bluetooth Wireless Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Bluetooth Wireless Speaker.



Package includes How to use



Bluetooth™ Wireless Speaker




Micro USB Charging Cable 3.5mm Aux-in Cable



User Manual

Speaker Diagram

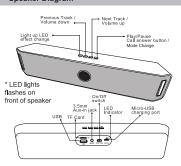

To use your Bluetooth speaker, you must first pair your speaker with a phone or a computer.Once your Bluetooth speaker is paired to a specific device, they will remain paired and automatically recognize each other whenever they are within range.

General Functions

Desired Result	Required Action	
Turn on & Enter the pairing mode	Switch the On/Off button at the back.	
Play / pause	Press C**II/M to play when the device is paused and press C**II/M to pause when the device is playing.	
Next	Press ▶I is for next music.	
Previous	Press I◀ is for previous music.	
Vo l ume up	Long press the VOL+ for volume up .	
Vo l ume down	Long press the VOL— for volume down .	
Charging	Plug the charger to micro-USB port at the back of the device. (Red LED is on)	
Input Mode change	Long press ← II/M to change the audio input mode.	
TF (micro SD card) playback	Insert TF card to the TF card slot, the speaker will switch to TF card mode automatically and play the music from TF card.	
USB flash drive playback	Insert USB to the USB slot, the speaker will switch to USB Audio mode automatically and play the music from USB.	
Answering a Call	Press C►II/M to answer the call and press again to end the call when the speaker is paired to your mobile device.	
Rejecting a Call	Press and hold CNII/M to reject the call when the speaker is paired to your mobile device.	
Last Number Re-Dialing	Press C►II/M twice to redial the last number when the speaker is paired to your mobile device.	
Light up LED effect change	When the speaker is in standby mode and LED effect is on, press the * button twice to turn it off. When the speaker is playing the music and LED effect is on, press the * button to change the LED light mode and press again to turn it off.	

Pairing to your Bluetooth™ Devices

Pairing to a mobile device:

- Turn on your phone and ensure its Bluetooth™ function is activated
- Turn on the speaker to go to the pairing mode.
- Look through the available Bluetooth™ devices on your phone by following the phone's instructions.
- ** Refer to your phone's user manual for more information.
- The speaker will show on your device as BT-SPEAKER
- ** If a passcode is requested, enter 0000
- 5. The voice prompt will tell you if the pairing is successful.
- ** If no device is successfully paired, the speaker will be turn off in approximately 5 minutes.

Pairing to a computer without Bluetooth™:

- ** If there is no Bluetooth function supported by your computer, a Bluetooth™ adapter and associated software is necessary to utilize these instructions.
- 1. Connect the adapter to your computer.
- Open the Bluetooth software (such as Blue Soleil) installed on your computer, and ensure its Bluetooth™ discovery mode is activated.

Pairing cont.

- Select the "Search your Bluetooth devices" function.
- ** Refer to user manual of the Bluetooth™ software for more information.
- 4. Turn on the speaker to get into the pairing mode.
- 5. After a few seconds, "BT-SPEAKER" will be listed in the Bluetooth software of your computer as a discovered device. Select this icon and click right button of your mouse to select "pairing" item, then select "connect with audio device" with the same operation.
- If the speaker is not connected to Bluetooth enabled device, the speaker will turn off in approximately 5 minutes.

To play music without bluetooth functionality:

- Use the included AUX in cable to plug one end into wireless speaker and the other end into your music device.
- Press play on your music device and it will begin playing on the wireless speaker.
- ** Note: Speaker controls do not work through the AUX connection, control on your device.

FM Radio Mode

- Plug in the included Micro USB charging cable, this will serve as an antenna
- 2. Long press the **?►**II/M button to go to FM Radio mode.
- Short press the
 C▶II/M button, and the speaker will search through and preset all the available frequencies.
- 4. Press the Next or Previous track buttons to search through the preset frequencies.

Technical Specifications

Bluetooth Specification	4.1
RF Range	33 feet
Frequency Response	20Hz-20KHz
Loudspeaker Output	6W
Play Time	Up to 3 hours*
Charging Time	Around 2 hours
Dimension (L×W×H)	320mm x 52mm x 65mm
Weight	1.2 lbs.

* Approximate playback time. Battery life depends on the individual use and may be slightly more or less than the time specified.

Charging the Speaker

- The speaker easily to connects to a USB charger via its Micro-USB port.
- Make sure that your speaker is fully charged for at least 6 hours before your initial use.
- While charging, the red LED light is constantly on. When charging is completed, the LED turns off.
- You must charge the wireless speaker if it has not been used for more than 12 months.

Safety Rules

- Be wary of the edges, uneven surfaces, and metal parts to avoid possible injuries or product damages.
- Do not modify, repair, or dismantle this speaker. Doing so may result in fires, injury, or speaker breakdown. This kind of damage is not covered by the warranty.
- Do not clean with any volatile liquids, only use a dry cloth.
- Do not use the speaker in a hazardous location, or in bad weather, near bodies of water, or high heat (even a hot car.)

Safety Rules cont.

- ** Your wireless speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, igniting, or bursting, which can cause injury.
- The wireless speaker is not a toy, please keep it out of reach of small children.
- Do not disassemble or throw away the wireless speaker. Consult your local waste collection agency for proper disposal or recycling of batteries and electronic equipment.

Frequently Asked Questions

- Q: "Why is there no power when the speaker is powered on?"
- A: Ensure the battery has been charged for at least 6 hours before first use.
- Q: "Why is there no sound when playing?"
 A: Check the connection between the
- A: Check the connection between the speaker and your mobile device. The Bluetooth™ may need to be re-paired, or if using AUX, check that it is securely plugged in at both ends.

FCC Info FCC ID: 2ALR9-KDL-BT1512

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving equipment.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.