

Wireless Speaker



INSTRUCTION MANUAL

READ THIS INSTRUCTION MANUAL BEFORE OPERATING THE APPLIANCE AND SAVE IT FOR FUTURE REFERENCE.

 
Getting started

Remove the unit from the box
Remove packaging and place inside the box to either store or dispose of safely.

Box Contents

Instruction Manual
Tower speaker
Wireless Remote Control
3.5mm auxiliary cable
Base and screws to attach the unit

Setting up the speaker tower-Attaching the base

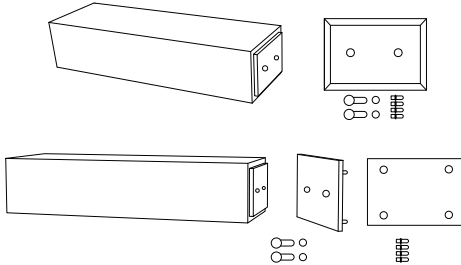

1. Take the tower body and base carefully out of the packaging.
2. Take the screws and washers out.
3. Attach the base to the body aligning the holes on the base with the holes on the tower.
4. Screw the base onto the main unit.
5. Place the tower upright on the floor and it is now ready to use

Follow all instructions and retain them in a safe place.

Do not use this apparatus near water or in wet/damp environments.
Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
Protect the power cord from being walked on or pinched particularly at plugs.
Only use attachments/accessories specified by the manufacturer
Unplug this apparatus during lightning storms or when unused for long periods of time.
All servicing must be carried out by fully qualified service personnel.
Servicing is required when the apparatus has been damaged or has malfunctioned
This product is not intended for use by children or the infirm without adequate or training by the person responsible for their safety.
For Household use only
Do not immerse in water or any other liquids
This product is not a toy
Do not leave this product unattended
Please ensure that the appliance has adequate ventilation
Ensure that the appliance is compatible with the host electrical system
There are no user replaceable parts
Clean only with a dry cloth.
The appliance shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Warning:
The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

 
Features
Bluetooth
External Aux input
USB port for playing MP3
DC12V adaptor for charging
SD card slot for playback
FM radio
top with groove to place smart phone &tablet PC
Wireless Remote Control

Using the remote control
The battery
To get your remote control working initially, pull the clear tab from the battery compartment located at the bottom of the remote.
If your remote becomes intermittent or you find you have to move closer the unit to operate, then probably batteries need to be replaced.
To replace batteries, slide the holder out from the base of the remote.
Remove the battery and replace with a Volt Lithium CR2025.

Features


Bluetooth
External Aux input
USB port for playing MP3
DC12V adaptor for charging
SD card slot for playback
FM radio
top with groove to place smart phone &tablet PC
Wireless Remote Control

To play the speaker
Insert the plug of the supplied power adaptor into the unit's DC input socket and then insert the adaptor plug into a mains power socket.

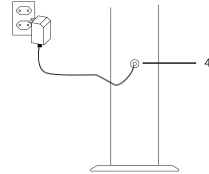


Parts identification

 - Top panel**
1. USB port for playback
 2. SD card slot
 3. Aux in jack
 4. DC input socket
 5. Power indicating light
 6. Mode button
 7. Volume - button
 8. Volume + button
 9. Power button
 10. Play / Pause button
 11. Skip - button
 12. Skip + button

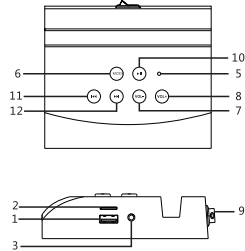

Remote control

 1. Power switch
2. Mode button
3. 1-9 number keys (0-9) (effective under USB/TF mode)
4. Play / Pause
5. Skip - button
6. EQ + button
7. EQ - 6 Preset EQ Function
8. Vol - button
9. Vol + button
10. CBO switch
11. Repeat A-B
12. Radio scan

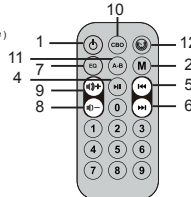

Using the remote control

The battery
To get your remote control working initially, pull the clear tab from the battery compartment located at the bottom of the remote.

If your remote becomes intermittent or you find you have to move closer the unit to operate, then probably batteries need to be replaced.

To replace batteries, slide the holder out from the base of the remote.
Remove the battery and replace with a Volt Lithium CR2025.

Instruction for USB

Turning the unit on
Position the unit where it is going to be used. Plug the adaptor into AC power outlet to the power of speaker tower. Press the power button on the unit or the remote.

USB port for playing MP3

1. Power on the unit and insert a USB Flash Drive (not supplied) into the USB Port, ensuring the plug is fully inserted at the correct way.
2. The tower will play music from the USB.
3. Press the Skip - / Skip + button to select the desired music or inputting the track number via the number keys on the remote control.
4. Press play / pause button to play or pause the music.

Playing the FM radio

1. Press the "POWER" button to turn the unit on.
2. Ensure the FM Antenna has been fully extended and press "MODE" button on the remote to adjust to "FM" mode.
3. Long press "Play/Pause" button ,the unit will scan the radio station. During the scan the radio station , the FM indicator light will flash ,then stop once found one , when the indicator light up all the time that means all the radio station have been saved .And it will start to play
4. Press the "Skip +" and "Skip -" to select the desired FM radio station. Press "Skip +" or "Skip -" and hold, the unit will scan the radio station, and stop once found one.

Aux in line in type

- Requires a 3.5mm cable (included)
1. When the tower is powered on, press "Power" button to turn the unit on, the unit will enter into AUX mode automatically, the AUX LED light will light up.
 2. Connect a 3.5mm cable to the Aux in jack. Connect the other end of the 3.5mm cable to an MP3 player or other audio source
 3. Use the controls on the device to begin playing audio routed through the unit.

Note: If the USB/SD card inserted in the tower also, press the "MODE" button on the top panel or "AUX" button on the remote to change to AUX in mode.

Card of the appliance

Disconnect the appliance from the power source when cleaning.
If the unit becomes dirty, wipe it with a soft and dry duster. Use a soft cloth to clean this appliance. Do not use any wax, polish sprays, or abrasive cleaners on the unit.

Caution

Never allow any water or other liquids to get inside the unit while cleaning. Dispose of used batteries in an environmental responsible manner. This product is not intended for commercial use. Household use only.

Safety instruction

1. Unplug the equipment from the power outlet when not in use and before cleaning.
2. Do not play music at excessive volume levels as damage to hearing and / or equipment may occur.
3. Do not use this equipment in wet or damp surroundings.

Care and maintenance specifications

1. Always disconnect the equipment from the power supply before cleaning.
2. Clean the equipment with a soft, damp, lint free cloth.
3. Do not use abrasives or harsh cleaners.

DC 12V adaptor

1. To turn on the speaker , Connect DC adaptor to the charging port . Switch the power ON/OFF button

SD card slot for playback

1. Power on the unit and insert a SD card (not supplied) into the SD card slot, ensuring the plug is fully inserted at the correct way.
2. The tower will play music from the SD card.
3. Press the Skip - / Skip + button to select the desired music or inputting the track number via the number keys on the remote control.
4. Press play / pause button to play or pause the music.

USB port for playing MP3

1. Power on the unit and insert a USB driver (not supplied) into the USB port ensuring the plug is fully inserted at the correct way.
2. The tower will play music from the USB driver .
3. Press the Skip - / Skip + button to select the desired music or inputting the track number via the number keys on the remote control.
4. Press play / pause button to play or pause the music.

Note: When USB and SD card inserted at the same time, the posterior inserted one will be played in priority. And press the USB/SD button and hold on the remote to change between USB and SD mode, the corresponding LED indicator on the top panel will be on.

Bluetooth functions

1. Power on the unit, press MODE button on the unit or Mode button on the remote control to switch to the Bluetooth mode, the LED will lit and blinking.
2. Long press "Play/Pause" key on unit around 3-5 second, the LED will fast blinking, it means the speaker unit ready to Pairing mode.
3. Activate the Bluetooth® feature on your phone , and set the phone to search for wireless devices . The speaker will show on your device as tower speaker
4. Once the unit is found, enter password 0000 to connect with smart phone/tablet (some devices may not need password).
5. The LED will lit if connect was success if the smart phone/tablet cannot find the unit or cannot pairing, please power on again and repeat again the above step.
6. It will auto reconnect the previous paired device when each time power on the unit.
7. If the unit cannot auto connect the previous paired device, please power off the speaker and turn on again after 10 seconds , or restart the Bluetooth in the smart phone/tablet, then follow above steps to finish connection.
8. Manually turn off the Bluetooth in smart phone or the smart phone is far away from the unit (over 10m), the connection between speaker and smart phone will lose, the unit will go back to Bluetooth standby mode
9. Ensure the Bluetooth in your smart phone at "searching device" mode, press and hold "Play/Pause" on the top panel, and then follow above steps to reconnect it.

Specification

| | |
|------------------------|---------------------------------|
| Power supply | DC 12V 2A |
| Speaker Units | 1x 4" Speaker + 1x 66mm Speaker |
| Speaker output | 2x 15watts |
| Operation temperature: | 0°C to +40°C |

Note: As a result of continual improvements, the design and specification of the product within may differ slightly from the unit illustrated on the packing.



This symbol on the product or in the instruction means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.

There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.