
# KARAOKE MIC & SPEAKER

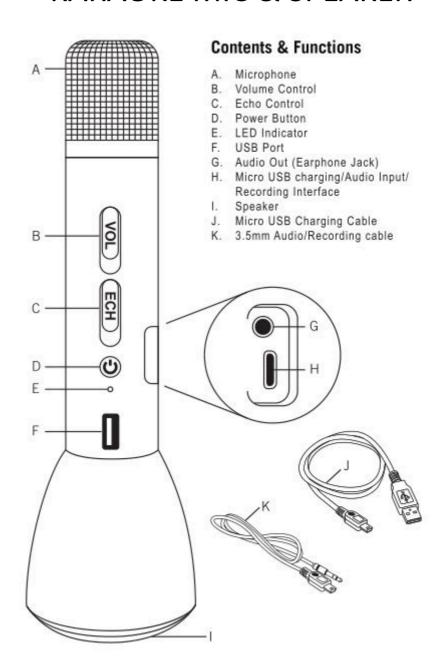

# **Charging the Microphone**

- 1. When the battery requires recharging the microphone will shut off.
- 2. Plug the micro USB charging cable into the micro USB port on the side of the Karaoke Mic & speaker and connect the other end of the cable to either a computer USB port or a USB-compatible car or wall charger.
- 3. The red LED light will flash during charging.
- 4. When the battery is fully charged, the red LED indicator will turn on.
- 5. Charging time is approximately 2 hours.
- 6. 1200mAh battery provides approximately 3 hours of singing time and can additionally be used

as power bank to charge your phone.

#### Turn On/Off

- 1. Press the Power Button to turn on and the LED turns blue.
- 2. Press the Power Button to turn off and the LED turns off.

#### Bluetooth Connect with a new device

- 1. Turn on the Karaoke Mic & speaker and enter into Bluetooth mode.
- 2. Active the Bluetooth feature on your device, and set the device to search for wireless devices.
- 3. The Karaoke Mic & speaker will show on your device as SL KARAOKE MIC. (If passcode is requested, enter 0000 or 1234)
- 4. The voice prompt will tell you if the pairing is successful.
- 5. Once your device is paired to the microphone, it will automatically pair with it whenever they are both on, and your device isn't paired to another wireless device.
- 6. If using AUX input feature, when the Karaoke Mic & speaker is ON, connect one end of 3.5mm Audio/Recording Cable to the Micro USB port and the other end to the 3.5mm jack on your device. Connecting this cable disables Bluetooth functions.

#### **How to Sing**

1. Once you have connected to your Bluetooth enabled device open an audio or karaoke playing source on your device, and begin playback.

Note: accompaniment volume can be adjusted via your device

- 2. Adjust your singing volume and echo on the microphone.
- 3. Begin singing.

#### **How to Record**

- 1. When the Karaoke Mic & speaker in ON, connect one end of 3.5mm Audio/Recording Cable to the Micro USB port of the Karaoke Mic & speaker.
- 2. Connect the other end to the 3.5mm jack on your device. Connecting this cable disables Bluetooth functions.
- 3. Open an audio recording app on your device, such as "Sing party" and begin recording.
- 4. Select your song from the app you used to sing in the instructions above and start singing.
- 5. When you're finished, hit stop in the app you used to record yourself.

# **Power Bank**

- 1. When other devices requires charging, then this device as a power bank.
- 2. Plug the micro USB charging cable into the standard USB port on the side of this device and connect the other end of the cable to a micro USB port of other devices.
- 3. The red LED light will be on during charging.

# **Specifications**

Pickup device: Capacitance

Output Power: 10mW (headphone output)

3W (speaker output)

Frequency Range: 100Hz - 10KHz

Max Sound Pressure: >115dB 1KHz THD<1%

Reverb Mode: Echo Sound Reverberation

Power Supply: Rechargeable Lithium-ion Battery

Battery Capacity: 1200mAh Charging Source: DC 5V

### **Battery information**

- 1. Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- 2. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.
- 3. Never use any charger that is damaged.
- 4. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15  $^{\circ}$ C and 25  $^{\circ}$ C (59  $^{\circ}$ F and 77  $^{\circ}$ F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- 5. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.
- 6. Always dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

# **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The micro USB port only support charging function and analog audio input, not support data transmission connect to PC; and the standard USB port only support charging to other devices, not support data transmission connect to PC.