# RECHARGEABLE PARTY SPEAKER BP1836

# User instruction

Please read this manual before use


#### **Matters need attention**

- 1.Don't put this product under high temperature and wet environment and it will be worse when it is in the rain or crashed strongly.
- 2. To reduce the risk of electric shock or fire, do not remove the cabinet cover simply contact a service professional.

In the rear occurrence of malfunction do not attempt to repair the unit on your own. Contact a certified service professional for a proper diagnosis and repair.

- 4.If fragments or liquids fall into device box, please cut off the power right away. And it can be used only after professional staff checks it.
- 5. Power grid off switch such as: switch, battery socket, appliance coupler. Should install the unit on a horizontal, flat and firm surface with good ventilation.
- 6.Don't install the unit in or near a place where it may come in contact with rain, moisture or other liquids.
- 7.If the battery is incorrectly replaced then explosion would happen, so please replace it with the same type or equivalent type of battery.
- 8. To avoid charging accident, it must to use the original adapter of this product to charging. If the accident or machinery damage caused by other original adapter, it will void warranty.
- 9. To prevent battery explosion, do not install in areas of extreme heat, fire or in areas with direct exposure to sunlight.

## Control Panel Function Description

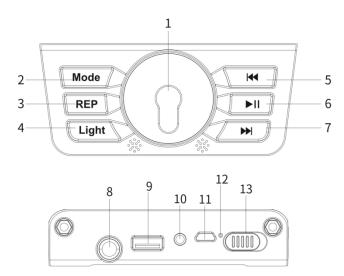

- 1. Master Volume
- 2.Mode
- 3.Repeat
- 4.Light
- 5.Previous track
- 6.Play/Pause
- 7.Next track
- 8.Mic in
- 9.USB card slot
- 10.AUX in port
- 11. USB 5V Charging port
- 12. Charging indicator
- 13. Power switch

# **General Function Description**

### **MP3 Function Description:**

- 1. Insert USB, playing the stocked music with MP3, WMA format automatically.
- 2. Play/Pause key: Short press to play/pause.
- 3. Previous/Next track Key: Short press to Previous/Next track.
- 4. Repeat: Short press Repeat to repeat tracks in various ways in USB card mode, in order of ONE-FOLD-RAN-ALL.

#### **FM radio Function**

- 1, Short press mode key switch to FM mode;
- 2, Play / pause key: Press and hold for automatic searching, short press to mute or cancel mute.
- 3, Previous/Next Song Key: short press to stocked previous/next radio station.
- 4, Note: Please automatic searching radio when first use.

#### **Bluetooth Function Description**

- 1. Press mode button to enter Bluetooth mode.
- 2. Using your Bluetooth device to scan for available devices and select "iDance Blaster 20K" to connect. Speaker will ring prompt voice once paired successfully.
- 3. Play/Pause key: Short press to play/pause. Press and hold to disconnect or connect again.
- 4. Previous/Next Song Key: Short press to Previous/Next Song.

# **Microphone Description**

- 1. Wired Mic: Insert the mic then it works.
- 2. Wireless Mic: Turn on the unit and wireless mic, they will connect automatically and works.

#### **Light Description**

- 1. The light default is on when the unit turn on.
- 2. Press Light key to turn on/off the light.

#### **Charging and low Battery Description**

- 1.Power charging is required once the battery symbol space flashed which means low battery power, meanwhile, the volume will drop to around 70% of the master volume automatically, please use the original adapter for charging, the red lights up when charging, and turn off once fully charged.
- 2.Note: The charging time can't be less than 12 hours for the first use, please keep the battery on power once long time no work, otherwise it will be easy damaged.
- 3. Please strictly control the charging time, do not continue to charge for a long time, will lead to battery power loss and can not save power.

#### **Specifications**

Power output :5W

R. Frequency:90Hz-20KHz

Drive unit :6.5"3Ω\*1 S/N Ratio≥60dB DC Input: USB 5V Battery: 3.7V 1200mAh

Power supply :AC 100-240V Dimension:L241\*W147\*H311mm

#### What in the box

1.Main unit \*1pcs

2. Wired Mic\*1pcs

3.USB Cable \*1pcs

4.User manual \*1pcs

5. Wireless Mic\*1pcs

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.