

M87FX Manual



Charging:


1. Connect the speaker's Micro USB socket with the power source's USB port with the provided charging cable.

(Note: The Micro USB port is located on the back of the speaker)

2. The Power indicator will show red while the battery is charging. When a full charge has been achieved the LED will turn off.

3. Disconnect charging cable when finished. Do not leave charging cable inserted into the devices when not in use.

Function:

- ◆ To turn on Speaker, Switch  button to on, switch back to turn off
- ◆ To increase volume press the Volume Up button **+**.
- ◆ To decrease volume press the Volume Down button **-**.
- ◆ Press button **▶▶** to play next track.
- ◆ Press button **◀◀** to play the last track.
- ◆ To disconnect, long press **▶||** button two seconds for disconnect.

BT MODE:

1. When the Speaker is powered "On" it is automatically in searching/ pairing/ reconnect mode, the Bluetooth LED indicator on the front of the fabric will flash blue quickly.

2. Now, turn on the Bluetooth function of your device.


3. Search for "Tommy hilfiger" and select it to pair.

(Note: for the first time pairing or pairing a new mobile device)

4. The Speaker will reconnect automatically if your mobile phone has been paired previously.

(Note: Depending on the device's type and configuration, manual reconnection maybe require.)






5.If pairing is successful, the Speaker will make a tone to confirm that it has connected with your mobile device,and the LED indicator in the front of speaker will keep on.

(Note: If you cannot search for the Speaker, this means the last device is reconnecting automatically. long press button  two seconds until the Bluetooth LED indicator flashes quickly, this will put the speaker into pairing mode)


LINE IN MODE:

1.With the speaker powered on, connect the included Auxiliary cable into the Auxiliary port on the pack of the speaker and plug the other end into your phones auxiliary port.

2.The speaker will now enter Aux-in mode and play media from the connected mobile device.

(Note: When using "Aux-in" mode,button  and  was not workable,pls change the track from the mobile device. But others like button    was workable)

HANDS FREE:

1.To answer an incoming call press the Function button  for to answer,and press again to end the call

2.To reject an incoming call pls long press to hang up.

FCC Statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the device.
2. Increase the separation between the equipment and device.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user' s authority to operate the device.