

70mm

**Tips:**

- Please make sure the speaker is in power off mode when trying to activate the pairing mode.
- Turn on your mobile phone and activate the bluetooth function.
- Search for Bluetooth devices Find Your Magic will show.
- Pair your device with Find Your Magic. If password is needed, type in "0000". After Find Your Magic is paired with your device, connect it to your device.
- Fully charge speaker before first use.

This speaker is IPX4 splash proof. Under no circumstances should the unit be submerged in water, doing so will result in permanent damage.

**IMPORTANT:** To ensure that the speaker is splash proof, please remove all cable connections and tightly close the silicon plug before use, exposing the speaker to liquids without doing so is likely to result in permanent damage. Do not expose the speaker to water while charging, as doing so is likely to result in permanent damage to the speaker or power source.

Once this speaker is paired and connected to your mobile device, next time when you switch on this speaker, it will connect to your mobile device automatically as long as the bluetooth in your mobile device is on.

**Troubleshooting**

Symptoms	Causes	Solutions
Cannot switch the speaker on	Battery empty	Charge the battery
Unable to pair the speaker	Speaker is already switched on and it is not in pairing mode	Refer to the section of "Pairing Find Your Magic to mobile phone or other device"

**Technical Specifications**

Bluetooth version	4.2
Hardware	Ver 1.0
Range	10 meters (equal to 33 feet)
Frequency range	2.4-2.48GHz
Charging input power	DC 5V/1.0A
Max. output power	2W
RF max. output power	0dBm
Battery	3.7V, 300mAh lithium
Charging time	Approx. 3 hours
Working time	Approx. 4 hours
Unit weight	Approx. 129g
IP grade	IPX4
Bluetooth firmware	Ver 3.2
Bluetooth software	Ver 4.0

Supplied by Brand Addition Ltd., Broadway House, TraffordWharf Road, Manchester M17 1DD, United Kingdom  
Made In China

Model number: BTS-06B  
SO Number: 2951048  
FCC ID : 2ALSKBTS-06B

BC

50mm

**FCC Compliance Statement\***

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

AXE



Wireless Shower Speaker

70mm


**Safety instructions**

Read this manual carefully before putting the appliance into operation and keep this manual for future reference.

- Under no circumstances should you attempt to repair or remove the battery from the unit yourself. (CAUTION: Danger of explosion if the battery is incorrectly replaced). Repairs or battery removal must only be undertaken by an authorised specialist using the correct tools and equipment.
- The battery cannot be subjected to during use, storage or transportation at high or low extreme temperatures and low air pressure at high altitude.
- Replacement of the battery with an incorrect type can defeat a safeguard.
- Disposal of the battery into fire or a hot oven, or mechanically crushing or cutting of the battery can result in an explosion.
- Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Do not insert any metal object into this device to avoid the risk of short circuit

- To avoid a static charge, do not use the device in an extremely dry climate.
- Do not immerse this product in any liquid to avoid the risk of short circuit.
- Do not place the speaker in direct contact with flowing water.
- For best results apply suction cup to a smooth, flat surface.
- Do not charge the speaker for longer than 3 hours. Avoid charging overnight or leaving the product unattended.
- Ensure that the USB cable is removed from the device after charging is complete.
- Only use the cable provided to charge this product.
- Do not use excessive force when inserting or removing the cable from the speaker to avoid damage to the socket or your devices.
- Please only use an adapter with the output of 5.0V/1.0A to charge this product
- Recharge the speaker once every 3 months if it has not been in use.
- Before use, Please ensure that the silicon cover is fully in place covering the USB charging socket.
- The cable provided should only be used to charge the supplied product.

**Product overview**

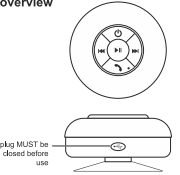

plug MUST be closed before use

**Button description**

- ⏻ On/off, to switch on or off.
- ⏮ Short press for the previous song, long press for turning down the volume.
- ⏭ Short press for the next song, long press for turning up the volume.
- 📞 Phone, to pick up or hang up a phone call.
- ⏸ Play /Pause the music.

**Notes & tips**

- You can press phone button twice quickly to redial the last phone call.

**Package contents and parts**

1) Wireless speaker 2) USB charging cable 3) User manual leaflet

**Integrated battery**

This Wireless speaker is powered by integrated rechargeable lithium battery.

**Charge the integrated battery as follows**

- Lift the silicon plug which covers the USB socket and check to ensure that there is no water or moisture present. If there is water or moisture present, do not charge your device.
- Connect the speaker to a suitable power adaptor, using only the USB cable provided. The power adaptor should have a maximum output of 5.0V/1.0A to charge this product, using the wrong adaptor or cable could result in the product malfunctioning.
- The LED light will turn red when the speaker is being charged. When the battery is fully charged, the red LED light will go out.
- When charging has completed, remove the USB cable and push the silicon plug back into position ensuring that it is in place before using again. Never charge your device whilst in use in the shower or the bathroom.

**Pairing BTS-06B to mobile phone or other device**

Activate the Wireless Speaker's pairing mode in power off mode, press and hold the on/off button for about 6 seconds until the red LED is flashing. Now the speaker is ready for pairing.

## AXE

wireless speaker, manual, English, USA

author	Harman Gill
date	26.04.2019
version	1
scale	1:1
key	<span style="color: blue;">○</span> trim line <span style="color: yellow;">○</span> safe line <span style="color: red;">○</span> bleed line <span style="color: purple;">○</span> fold line
colours	none
finishes	none
fonts	none
notes	none

If you need help or have any questions please contact us in the design studio via [londondesign@brandaddition.com](mailto:londondesign@brandaddition.com).