

sapphire *Tablet*

 
User Manual



TravelWifi 



Product Overview	3
Startup Guide	4
Configuration	5
Charging & Cautions	7
Gesture & Operation.....	9
Functions.....	15
Warning.....	23

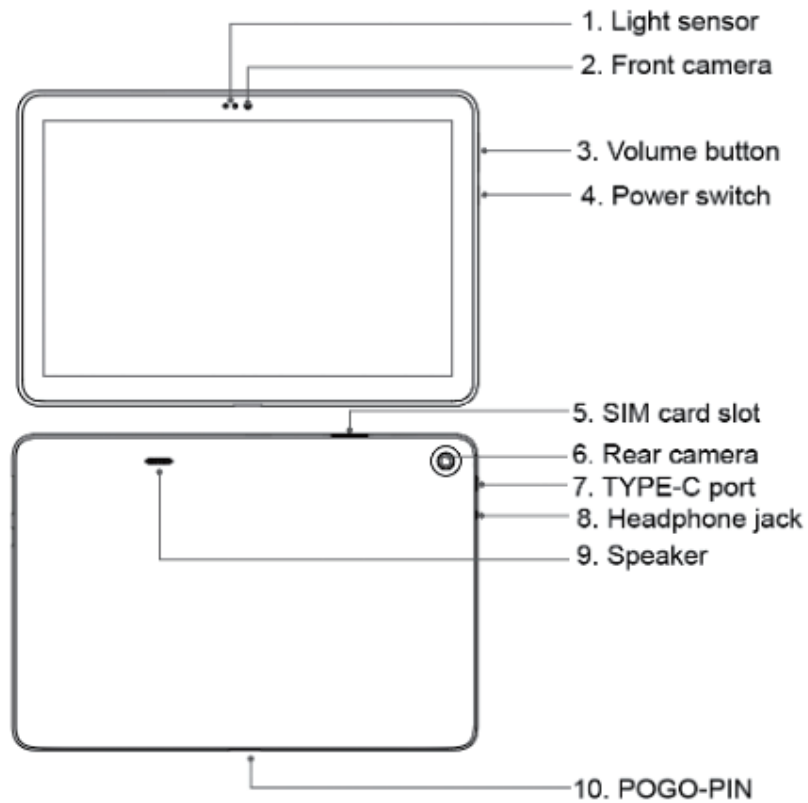

- 1.** Light sensor
- 2.** Front camera
- 3.** Volume button
- 4.** Power switch
- 5.** SIM tray
- 6.** Rear camera
- 7.** TYPE-C port
- 8.** Headphone jack
- 9.** Speaker
- 10.** POGO-PIN

*The device adopts “three buttons” for navigation control by default. Click Settings > System Navigation to choose different navigation modes.


The device supports OTG function, please use standard OTG data line in order to ensure the normal use of this device.

STARTUP-GUIDE

Long press the power switch to turn on the device. You can perform basic Settings on the device according to the screen guide when it is powered on for the first time.

1. Choose the language and country based on your actual needs, then click start.
2. Search for available WLAN networks. If there are WLAN networks around, the system will automatically identify them. Click the one you need, and enter the correct password to connect to a WLAN. If there is no available WLAN network around or you do not want to connect temporarily, you can use mobile network or set the WLAN in offline mode. After the device is powered on, set WLAN network in Settings > Network and Internet.
3. After setting the date and time in offline state, click Next to enter the Google service interface, read the relevant content carefully, and accept the Google Terms of Service and Google Privacy Policy. You do not need to worry that your privacy will be leaked when using this device. We will keep your privacy strictly confidential.
4. For security, you are advised to set screen protection PIN code. If you do not want to set, click skip.


CONNECT TO WLAN NETWORK

1. Swipe down from the status bar to open the notification panel.
2. Long press [] to enter WLAN setting interface, detected networks will be listed here.
3. Click the WLAN network you want to connect to, if it is encrypted, you need to enter password to access.

HOW TO SWITCH PHYSICAL SIM CARD

1. Switch to use the SIM card: Tap Settings>Network and Internet, then turn off Cloud SIM, and then insert the SIM card to use it.
 2. Switch to use Cloud SIM: Click Settings>Network and Internet, and then turn on Cloud SIM.
- Cloud SIM is used by default initially.

PHYSICAL SIM CARD INSERTION INSTRUCTIONS

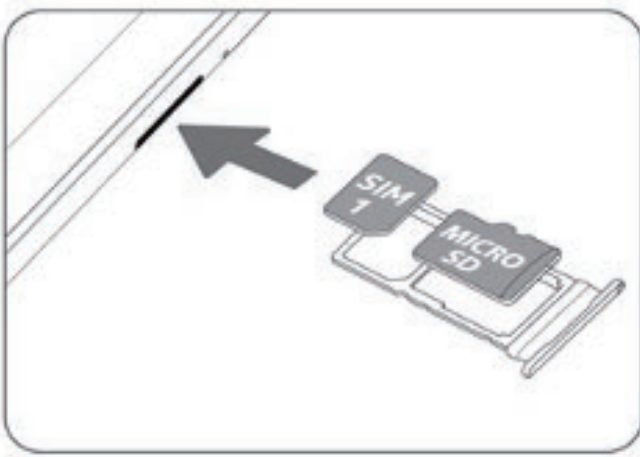

- Do not remove or insert SIM card when the device is on.
- When inserting the card, pay attention to the notch direction of the card and ensure it is installed to the SIM tray first.
- Use a standard Nano-SIM card. Inserting a non-standard card may damage the card holder (slot) or fail to recognize the card.
- If your SIM card does not match the device, please contact operator for help.
- When using the retrieve card pin, be careful to avoid poking your finger or damaging the device.
- Please keep your retrieve card pin well and out of reach of children to prevent them from ingesting accidentally or being stabbed.

CHARGING AND CAUTIONS

Connect the power adapter of the charger to the socket and the other end to the device for charging



- This charging diagram is for reference only.
- The charging voltage range of the device is AC 100V-240V, 50/60Hz.

It is normal if the device surface gets hot when charging or using for a long time.

1. The device is equipped with built-in battery, do not disassemble it without authorization.
2. Use the original power adapter of the device. Other power adapters may cause failure or permanent damage to the device.
3. Batteries should not be disassembled, short-circuited, squeezed, bumped, or exposed to fire.
4. Do not place the battery in an overheated (over 60 °C), damp, or corrosive environment.
5. Do not use the battery if it is soaked or swollen.

CHARGING AND CAUTIONS

Connect the power adapter of the charger to the socket and the other end to the device for charging




- This charging diagram is for reference only.

On-screen gesture

Control the icons, buttons, menus, keyboard and other items using your gestures.


Tap

Touch one finger lightly on the screen once.

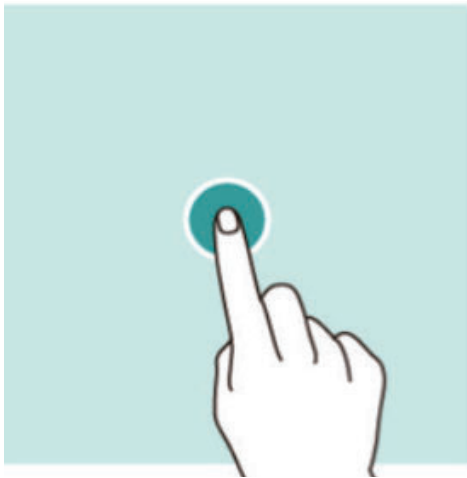


Touch and hold

Touch and hold items in screen or list area to enter edit mode or pop up menu.

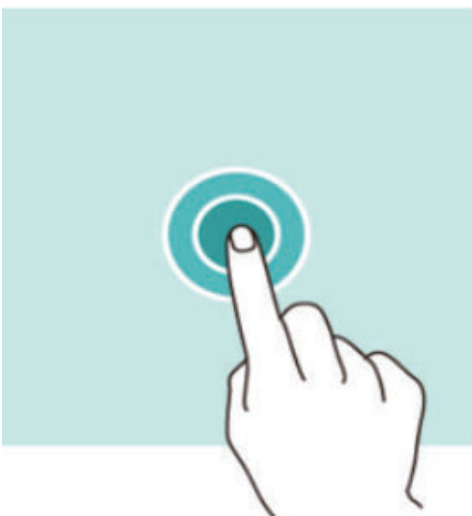


Swipe

Tap on the screen lightly and slide, the target area such as lists or web pages will follow the direction of your finger.

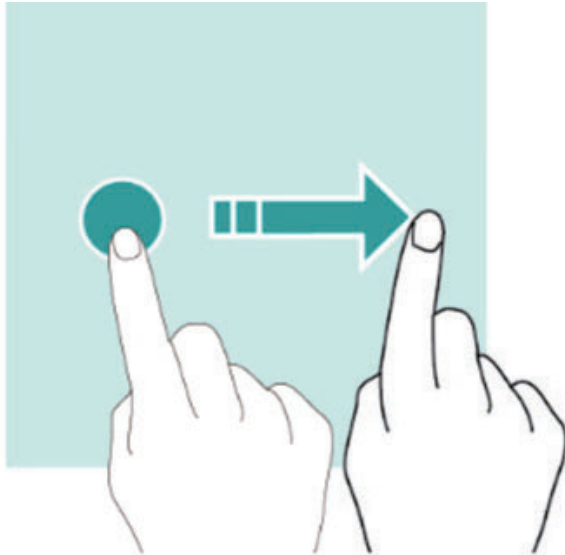


Zoom

 In gallery and other apps, you can place two fingers on the screen near each other, spread them apart to zoom in or move them toward each other to zoom out.

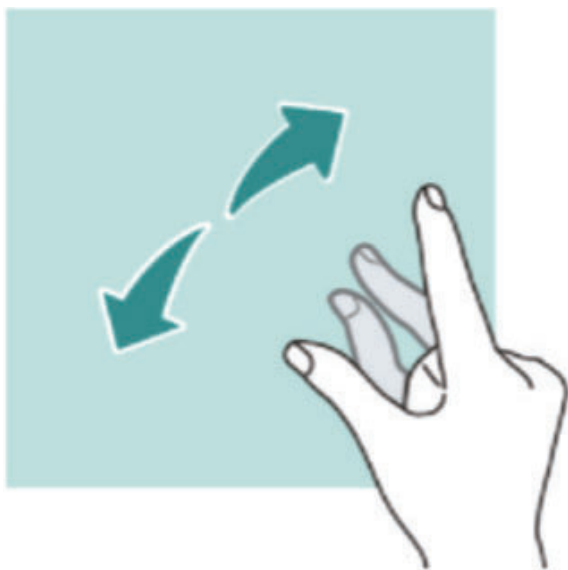

Drag-and-drop

 To drag an icon, press and move it with your finger.

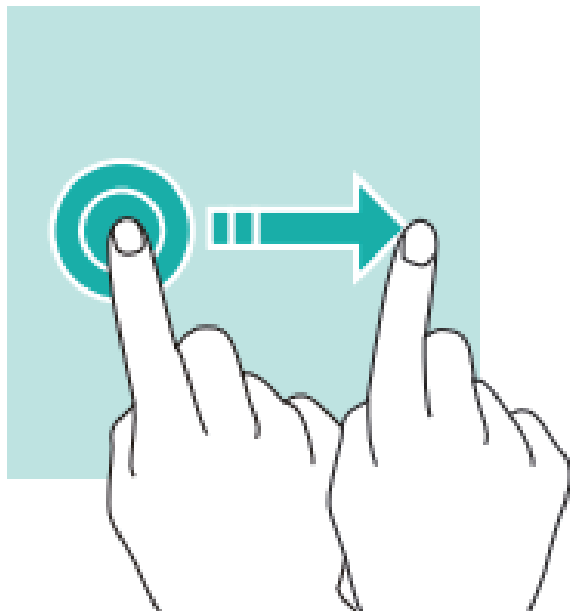

SCREENSHOT

Long press the power button and volume down button to take a full-page screenshot of current.

SCREEN RECORDING

To Start Screen recording

You can record the highlights of your own use of the device and share them with your friends.

Swipe down from the status bar to open the notification panel. Then tap screen recording.

To Stop Screen recording

Pull down the status bar and tap the screen recorder to finish recording.

VIEW, SHARE, AND DELETE SCREEN RECORDING FILES

After screen recording, open the photo album, select a screen recording you want to view

Share screen recording files

1. Open photo album.
2. Select a screen recording you want to view in Movies.

Touch and hold the recording file you want to share, and then tap share

Delete screen recording files

1. Open photo album.
2. Touch and hold the recording file you want to delete, and then tap delete.



VIEW NOTIFICATIONS

The new notifications will be displayed as corresponding icons in the status bar at the top of the screen. You can open the notification panel to view them.

How to open notification panel

1. When the new notification icon is displayed in the status bar, swipe down from the status bar lightly to open the panel.
2. You can do the following operations in the notification panel:
 - Open apps quickly.
 - Swipe right over the notification to turn it off.

How to turn off the notification panel

Swipe up from the bottom of the panel lightly to turn it off.



LOCK & UNLOCK SCREEN

How to lock the screen

- Press the power switch to lock the screen when you do not use it.
- The device will lock screen automatically when you're not using it for a long time






How to unlock the screen

Press power switch to weak screen, swipe up for a certain distance to unlock it.

STATUS ICONS





By viewing the status icon, you can quickly learn about the current running status of the device, such as network connection and battery status.

Status icons information:

status icon		what it means
	Airplane mode	Airplane mode is on
	Bluetooth	Bluetooth is on
	WIFI	Wireless network is on, the more bars it displays, the stronger signal it has
	Alarm	An alarm is set
	Battery	Shows the battery level, more bars, more power.



How to record voice



1. Tap [], enter the recording interface.
2. Tap [] to begin recording, speak into the microphone. Tap [] to stop recording, tap [] to finish recording

Enter a name for the recording and save it.

How to view recording

Tap [] to view the recorded files.

How to delete recording

1. Tap [] to view the recorded files.
2. Touch and hold the recording you want to delete, tap [] to remove it.

Calculator



In the calculator app, you can perform basic or complex arithmetic calculations.





You can tap the numbers and calculation symbols on the calculator interface to perform relevant calculations.

Recorder



The device supports long time voice recording , please make sure there is enough storage space.



How to record voice

1. Tap [], enter the recording interface.
 2. Tap [] to begin recording, speak into the microphone. Tap [] to stop recording, tap [] to finish recording
- Enter a name for the recording and save it.

How to view recording

Tap [] to view the recorded files.

How to delete recording

1. Tap [] to view the recorded files.
2. Touch and hold the recording you want to delete, tap [] to remove it.

Clock



Alarm

How to set an alarm

Tap alarm, then tap [+] to set the alarm time, ringtone and the repeated time.

How to turn on & off alarm

Tap alarm, then tap the button next to the alarm time.

How to remove an alarm

Tap alarm, choose one alarm that you want to remove, tap it to delete.

Clock

How to add clock

Tap clock, then tap [🌐], search for your target city, tap it and the city clock will be displayed in clock interface.

How to delete clock

Choose a clock you want to delete, drag it to [🗑️]

Timer

1. Tap timer, enter second,minute,hour.
2. Tap [▶] to count down. Tap [⏸] to stop.

Stopwatch

1. Tap stopwatch, tap [▶] to start
2. Tap [⏸] to stop. Tap [▶] to continue. Tap a circle to record current time. Tap reset to clear the stopwatch.

Sleep schedule

Choose sleep schedule, tap start, set your wake up times and bedtimes.

Files



File management allows you to manage files and folders and view documents stored on the device. You can also view different menu files by category.

How to view files





Open files to view all kinds of documents that have been sorted automatically.



How to find file quickly

Open [] files, tap [], enter a file name or keywords, the results will be displayed below the search filed.



How to sort files

1. Open [] files, tap [].
2. Tap “Sorted by”, then choose an option: Name, Date, Kind, Size.



How to create a folder

1. Open [] files, tap [].
2. Tap “New Folder”, enter a name, then tap OK.

How to rename a folder or a file

1. Open [] files, touch and hold the file or folder.
2. Tap [], then tap “Rename”.
3. Enter a new name, then tap OK.

How to compress file



1. Open [] files, touch and hold the file or folder, tap [].
2. Tap Compress.

Camera







With this device, you can take photos and videos, and you can also make video calls or take selfies with the front-facing camera

How to take a photo

1. Open [] camera, enter the photo interface.
2. Tap [] to take a photo.

How to take a video

1. Open [] camera, tap the icon on the right side of the screen to switch to video mode.
2. Tap [] to start recording, tap [] to stop recording.

 Pinch the screen with fingers to zoom in an out.


How to view photos or videos

When you're done, tap the Photo preview box to view the photos or videos you took.

RESOURCE SHARING MODES

How to connect Bluetooth

1. Tap Settings > Connected devices > preferential connection setting > Bluetooth.
2. Enable Bluetooth, the device can search for available Bluetooth and display them in list, tap the device name you want to connect. You can transfer files after successfully connected.

 Drop down the status bar to open the shortcut switch interface, you can quickly enable or disable the Bluetooth.

How to set WLAN

1. Go to Settings > Network&Internet > Hotspot&Network share > WLAN.
2. Enter the name of the hotspot and password, then tap OK.
3. Search for the hotspot with other device, then enter password.

How to connect the device to computer

1. Connect device to computer with a USB cable.
2. Select the Installation disk menu in the Computer Connection with USB Settings option.
3. Open the disk popped up on the computer screen, install the disk drive at the prompt.
4. After installation is finished, connect device and computer with USB again, then you can use the third-party smart device to manage software.

Warning

- Battery Caution: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
- Adapter Caution: Adapter shall be installed near the equipment and shall be easily accessible.
- Earphone Caution: Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.
- To charge the device, please use PC USB port or CE approved charger witch output power shall be 5V/2A; unauthorized power adapter or data cable may cause charger exploding or damage the machine.
- Plug the adapter power socket in 100-240VAC socket, others may cause charger exploding or damage the machine. The plug considered as disconnect device of adapter.
- Do not store the device in temperatures lower -20 °C and higher than 60 °C
- The operating temperature of this device is 0 °C-40 °C
- The product shall only be connected to a USB interface of version USB 2.0 or higher. The connection to a power USB is prohibited.



Statements

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

SAR tests are conducted using standard operating positions According FCC standards with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

This model product has been tested and meets the FCC RF exposure guidelines with the test distance 0mm for body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with exposure requirements, and should be avoided

TravelWifi 
sapphire
Tablet

Company Name: DHI GROUP LTD.

Brand Name: Travelwifi

SUPPORT

travelwifi.com/support

Email: support@travelwifi.com

Toll-Free/WhatsApp

USA: +1 855 554 0330 +1 877 888 3741

Spain: +34 937 370 055 +34 910 609 147

Chile: +56 2 3278 3606

France: +33 176 440 030

Indonesia: +62 812 8049 4646

Singapore: +65 3129 2354

United Kingdom: +44 203 318 2523

SOCIAL MEDIA

@travelwifi



9251 Park South View Houston, TX 77051