



14+



In order to make sure that it meets the requirement of the electromagnetic environment of the aviation radio station...

INTRODUCTION

Thank you for purchasing the SJ-Series GPS Drone. Please read all instructions and warnings carefully before operating.

IMPORTANT:

- 1. This product is not a toy. It is a precision device; integrating machinery and electronics with air mechanics and high frequency transmission.

SAFETY PRECAUTIONS:

This R/C flying model can be dangerous when in use, please make sure you keep it far away from any persons or spectators when flying.

- 1. Keep it far away from any structures or crowds.

The inside of the aircraft is composed of many precision electronic and mechanical parts. Therefore, please try to avoid any moisture or water content from entering the main body of the aircraft as it may cause a breakdown of the mechanical and electronic parts and thus cause an accident.

- 3. Only operate with included parts for intended use.

Please use the original parts made by SJ-Series for any re-equipping or maintenance to ensure flying safety. Please operate and use only under the scope of the product function permitted.

WARNING

- 1. There is important information contained in this package and instruction manual, please keep it for future reference.

NOTE:

- 1. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

WARNING

- 20. Aircraft should be kept far away from any other electric compliance or equipment as far as possible or kept far away from the place where having the magnetic object nearby as they may cause interference with each other.


WARNING:

- 1. When charging, please conduct it under the surveillance of a adult. Please also keep it far away from any combustible object when charging.

MAINTENANCE

- 1. Use a clean soft cloth to clean this product frequently.

DRONE PARTS

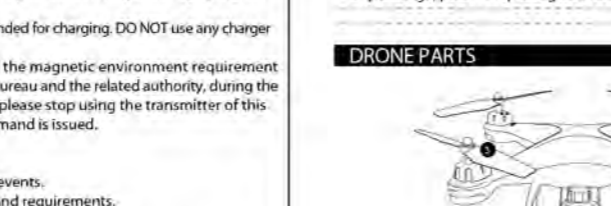

QUADROTOR LI-POLYMER



REMEDIATION

- 1. Balanced charging: If the power switch of the quad-copter is on the state ON/OFF, the Quad-copter can be charged.

CAUTIONS WHEN CHARGING:

- 1. When charging, please put this product in a dry ventilated area and keep it far away from heat sources or flammable products.

REMOTE CONTROL

- 1. Throttle joystick: Click once to Low/Medium/High speed switch; Press the button to Trim mode, trim light flashing, press the button to cancel the Trim mode.

PREPARATION FOR FLIGHT/GPS CALIBRATION

- Step 1: Turn on drone and set down on a level surface. The drone will auto-trim to this level surface. All lights blinking red.

GPS CALIBRATION (CONTINUED)

- Step 3: Reset to Factory Setting / Calibrate Gyroscope. Press the Joysticks into the 11 & 1 o'clock positions. Lights rapid-blinking blue (back) and white (front).

INSUFFICIENT POWER

- CAUTION: When there is insufficient power, the Quadcopter will start Auto-Return. When safe return is confirmed, please DO NOT operate the transmitter any more.

BE AWARE OF YOUR SURROUNDINGS

- 1. Please avoid the following objects on the track of the Quadcopter for example, the people, animal, tiny things (such as the branch or electric wire etc.) or the transparent object (such as the glass or water).

KEY FEATURES OF QUADCOPTER

- 1. Dual GPS positioning system. 2. Follow-me with camera facing you automatically. 3. Stable positioning hovering. 4. GPS one-key return. 5. With 9-Axis GYRO. 6. With Headless Mode. 7. With blade protector. 8. With 2.4GHz Radio Control Technology. 9. With colorful flashing lights. 10. Easily to replace the battery. 11. Take photos and video by the transmitter.

PRECISION HOLD

After syncing your quadcopter, press the One-key Take-off to begin your flight. The quadcopter will liftoff and stay steadily at the current height. Push the throttle lever up and down, to increase or decrease the height accordingly. Release the throttle to set the new drone height.

FOLLOW ME

When the Follow Me function is enabled, the drone will sync to the GPS in your smartphone to follow you wherever you go (smartphone and SJ-GPS app required, not included).

SOFTWARE DOWNLOAD AND INSTALLATION

QR code of "SJ-GPS" software for Apple iOS system. QR code of "SJ-GPS" software for Android system.

APP INTRODUCTION

Wait until the Drone Status says "Ready to Fly" before initiating flight. This will ensure that your GPS is synced and your drone is ready to fly.



CAMERA CONFIGURATION

Insert the optional memory card (not included) into the webcam module's card channel which is on the bottom of the quad-copter, connect the quad-copter's power, and sync quadcopter and remote control.

PICTURE & VIDEO-RECORDING

When you press the power button on the remote control, the red light will flash once, that means the quad-copter is taking photo.

COMMON PROBLEMS AND SOLUTIONS

Table with 3 columns: THE PROBLEM, REASON, COUNTERMEASURES. Includes issues like drone lights flashing, blades spinning, and drone instability.

PARTS LIST (Included)

