
Quick Start Guide H18E

Product Overview

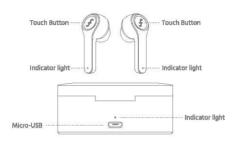


What's in the Box

Funci Al Wireless Smart Headphones	x1	Funci Al Charging Case	x1
Funci Al Silicone Ear Tips	х3	Quick Start Guide	x1
Safety & Warranty Manual	x1	Micro-USB Cable	x1

1. Open the Charging Case

 Open the charging case. Take out the headphones, and remove the insulation films on the headphones.



2. Charging

Before the first use, put the headphones back into the charging case and close the charging case. Connect the micro-USB cable for charging.



Charging the Headphones

When the battery level of the headphones is low, the indicators on the headphones will turn red.

After putting the headphones into the charging case for charging, the headphone indicators will flash in red slowly, which indicates the headphones are put properly and being charged.

If a headphone indicator light doesn't flash in red, it means the corresponding headphone is put in the wrong place. Please take out the headphone and adjust it to a proper position.

The indicators on both the headphones and charging case will go off when the headphones are fully charged.



3. Connect to the Device

 
Charging the Charging Case

Normal Battery Level: After putting the headphones into the charging case, the charging case indicator will turn red.

Low Battery Level: After putting the headphones into the charging case, the charging case indicator will flash in red slowly, which suggests connecting the micro-USB cable for charging.

During Charging: The charging case indicator will turn red.

Charging Completed when Cable Connected: The charging case indicator will turn white.







First-Time Setup

- When using the headphones for the first time, the headphone lights will flash in white after turning on, which indicates they have entered the pairing mode automatically.
- Select and connect to "Funci Al" on the Bluetooth connection interface of your device.
- P.S.: If the wireless signals surrounding you are too strong, the Bluetooth connection might be affected, causing unstable headphone connection. If this happens, it is suggested to reset the connection or move to other places.

Automatic reconnect

After the pairing is recorded, the headset is taken out of the charging box. The headset will automatically start up and connect to a recently connected device.

4. Touch Button Control



Automatic Turning on/off

After taken out from the charging case, the headphones will be turned on automatically. After put into the charging case the

After put into the charging case, the headphones will be turned off automatically.

Manual Turning on/off

When the headphones are turned off, press and hold the left and right touch buttons for 2 seconds to turn on the headphones

When the headphones are turned on, press and hold the left and right touch buttons for 3 seconds to turn off the headphones

Music Function

During the music mode, tap the right touch button to play/pause music.

While playing music, double-tap the right touch button quickly to skip to the next song.

While playing music, triple-tap the right touch

Call Eunction

Tap the left touch button to answer/hang up a call.

Touch the left touch button for seconds to reject a call.

button guiddy to play the previous song.

When there is another incoming call during a call, tap the left touch button to hang up the current call and answer the new one.

When there is another incoming call during a call, tap the left touch button for seconds to reject the new call.

When there is another incoming call during a call, double-tap the left touch button to keep the current call and answer the new call. Then you could switch between the two calls by double-tapping the left touch button quickly.

Wake up Al Assistant

Single-tap the left touch button to wake up the Funci Al Assistant.

Wake up Voice Assistant

Double-tap the left touch button quickly to wake up the built-in Voice Assistant on your phone.

5. Single-Ear Mode



*When only one headphone is used, the button control will change to the single-ear mode.

Music Function

During the music mode, tap the touch button to play/pause music.

Call Function

Tap the touch button to answer/hang up a call.

Touch the touch button for seconds to reject a call.

When there is another incoming call during a call, tap the touch button to hang up the current call and answer the new one

When there is another incoming call during a call, tap the touch button for seconds to reject the new call.

When there is another incoming call during a

call, double-tap the touch button to keep the current call and answer the new call. Then you could switch between the two calls by double-tapping the touch button guiddy.

Wake up Voice Assistant

Double-tap the touch button quickly to wake up the built-in Voice Assistant on your phone.

6. Other Functions

Connect to a New Device

Touch the left touch button for 2 seconds while the headphones are turned on. The Indicator will flash quickly, which indicates they have netword the pairing mode. Then you could select and connect to "Func! Af" on the Bluetooth connection interface of your device.

Restore the Factory Settings

While the headphones are turned off, touch the left touch button for 6 seconds. The headphone indicators will turn red and flash 2 times quickly, which indicates the factory settings have been restored.

7. Funci App

To activate the AI Assistant function, please download the Funci App.





funcl.com/app

Lable

Since the size of the earphone (intentional device) is too small, and the size of the label is larger than it, it cannot be placed, so the label can only be placed on the outer packaging.

8 More Information

Please visit the official website, www.funcl.com, for more information.

Also, you could send a mail to service@funcl.com. The Funcl support team will contact you with any help you need.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class 8 digital device, pursuant of part 5 of the FCC Risks. These limits are designed to provide resonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, Find installation. This equipment generates uses and can radiate radio frequency radio communications. However, there is no guarantee that interference will not occur in a particular installation. This explorant does cause harmful interference to and or otherwision respoint, which can be determined by larning the equipment off and on, the user is encouraged to by to correct the interference by once more of the followish measures:

- Recrient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.