 


1. Turn system on and off
2. Sound: Switch between 2.1 (using only the 2 front speakers) or 5.1 (using all 5 speakers)
3. Decrease the volume level
4. Previous:
a. USB/SD mode: press once to select previous song, press and hold to go to previous folder
b. FM mode: press once to select previous stored station, the LED will flash until reaching the stored channel and then remain solid
c. Bluetooth Mode: press once to select previous song
5. Press and hold to pair a bluetooth device to the system, LED will flash until device is paired.
6. Next:
a. USB/SD mode: press once to select next song, press and hold to go to next folder
b. FM mode: press once to select next stored station, the LED will flash until reaching the stored channel and then remain solid
c. Bluetooth Mode: press once to select next song
7. Increase the volume level
8. Source: Switch between BT, DVD, AUX, USB/SD and FM mode.

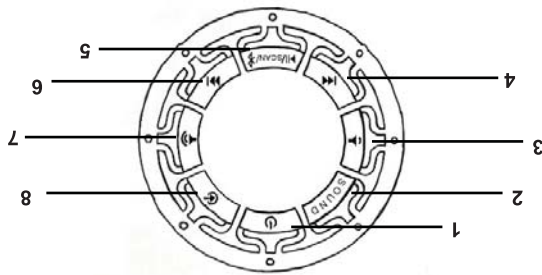

Front Panel

- Do not place system in high temperatures or humid environments, keep the system dry and handle with care to avoid damage
- In order to avoid electric shock and other incidents, do not open the back panel cover for repair without professional guidance.
- If the system gets wet, switch off the power immediately.
- When not using the system, turn off and unplugging the power to lengthen the life of the system.
- Keep the subwoofer vent away from the wall, the air vent should not be blocked.

Precautions:

- Subwoofer Speaker(H x W x D): 11.73" x 7.6" x 11.10"
- 5 Satellite Speakers (H x W x D): 6.93" x 4.5" x 4.09"
- Power Supply: 100V 60HZ
- Frequency Response: 30-20Khz

Specifications:

- 1- Subwoofer Speaker
5- Satellite Speakers
1- Remote Control
1- User's Manual
3- RCA - RCA Cables
1- 3.5mm to RCA Cable

Package Contents:

Warnings & FCC Rules & Guidelines

1. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body: Use only the supplied antenna.

Acoustic Audio
by Goldwood™


AA5400




5.1 BLUETOOTH
MULTIMEDIA
SPEAKER SYSTEM
USER'S MANUAL

Using The Remote Control

 1. **ST-BY** - Turn on/ Standby the speaker
2. **Source** - switch between BT, DVD, AUX, USB/SD and FM mode.
3. **BT** - press once to go to Bluetooth mode, press and hold to start pairing your bluetooth device
4. **Tune +** - press once to increase FM channel by one step, press and hold to go to previous saved channel
5. **Volume -** - decrease the volume
6. **Tune -** - press once to decrease FM channel by one step, press and hold to go to next saved channel
7. **Scan** - press in FM mode to scan through FM frequencies
8. **Previous:**
a. USB/SD mode: press once to select previous song, press and hold to go to previous folder
b. FM mode: press once to select previous stored station, the LED will flash until reaching the stored channel and then remain solid
c. Bluetooth Mode: press once to select previous song
9. **Center Volume:** increase or decrease the volume of the center speaker
10. **Front Volume:** increase or decrease the volume of the front speakers
11/22. **SW Volume:** increase or decrease the volume of the subwoofer speaker
12. **Mute:** Press to mute and unmute sound
13. **Number Keys**
14. **Sound:** Switch between 2.1(using only 2 front speakers) and 5.1 sound(using all 5 speakers)
15. **Light Reset:** Press once to turn off LED, press and hold to go back to factory settings
16. **Volume +** - increase the volume
17. **Enter key**
18. **MEM:** press to store current FM channel (max 100 stations)
19. **Next:**
a. USB/SD mode: press once to select next song, press and hold to go to previous folder
b. FM mode: press once to select next stored station, the LED will flash until reaching the stored channel and then remain solid
c. Bluetooth Mode: press once to select next song
20. **Play/ Pause:**
a. USB/SD Mode: press once to pause and once again to play
b. FM Mode: Press once to start the auto search, system will automatically store found channels.
c. Bluetooth Mode: Press once to play and once again to pause.
21. **Rear Volume:** increase or decrease the volume of the rear speakers

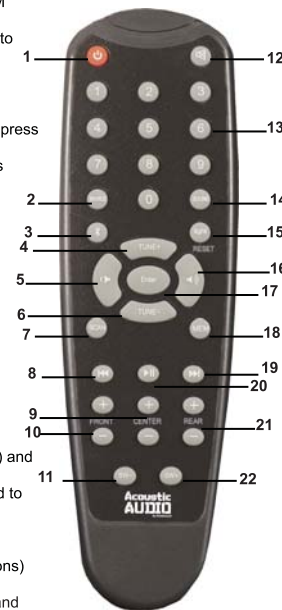


Rear Panel:

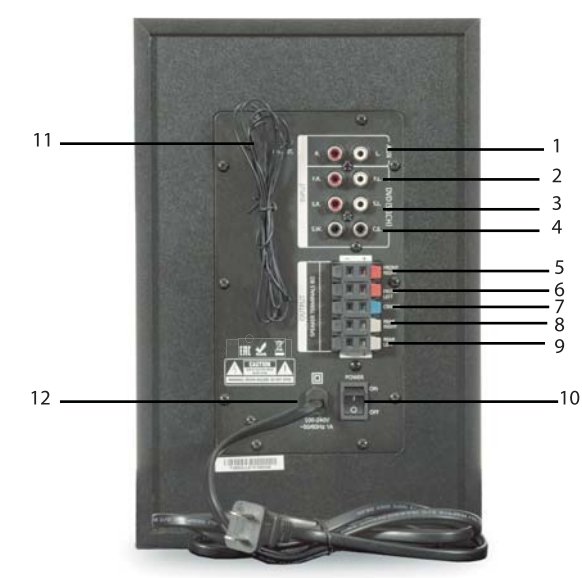 

- | | |
|----------------|------------------|
| 1. AUX INPUT | 8. SR OUTPUT |
| 2. FL/FR INPUT | 9. SL OUTPUT |
| 3. SL/SR INPUT | 10. POWER ON/OFF |
| 4. C/SW INPUT | 11. FM ANTENNA |
| 5. FR OUTPUT | 12. AC POWER |
| 6. FL OUTPUT | SUPPLY CORD |
| 7. C OUTUO | |

 System Connections:

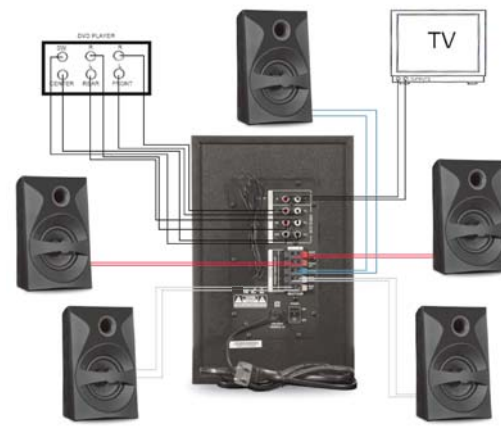

1. Insert all satellite speaker cables into their respective outputs on the rear panel of the subwoofer speaker. FR- front right, FL Front left, SR- surround right, SL- surround left, and CEN - center speaker. Front and Center Speakers have 8' cable and Rear Speakers have a 25' cable.
2. Please use RCA Inputs to connect to your DVD player, TV and gaming console.
3. Please use included 3.5mm- RCA cable and insert into the AUX input to connect your phone, tablet or computer.
4. After making all connections, plug subwoofer speaker power cable into the wall outlet of ~120V 60Hz.

Bluetooth Connection Instructions:

1. Turn on the system
2. Press " Source" on the remote or front panel
3. Find Bluetooth mode, once in bluetooth mode the LED will blink while searching for bluetooth devices.
4. Turn on your bluetooth device and search for "BT Speaker" in the device list.
5. Press connect, once connected the LED will stop blinking.
6. You can now play music from your bluetooth device.

Please do not dispose of this product in the garbage. Doing this is harmful to your environment. Please drop off at a local recycling center for disposal.