



Getting Started

Your UL40 Box Contents



Smartphone (UL40)



Getting Started Guide (GSGUL40)



USB Charger (ULUSB)



Charger (ULCHG)

Your UL40 Smartphone




- Microphone
- Earpiece
- Front Camera
- Touchscreen Display
- Back Key
- Microphone
- Rear Camera
- Volume Buttons
- Power/Lock Button
- Speaker
- Back Cover Removal Notch

- 3.5mm Headset Jack
- LED Indicator
- Home Key
- Recent Apps Key
- Charging Connector
- Flash
- SIM Card & MicroSD Card Slots (under back cover)
- Back Cover


Your UL40 Smartphone



Use the back cover removal notch to begin prying the back cover away from the phone along all sides

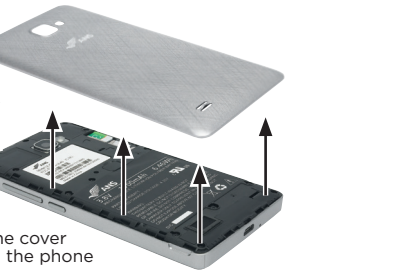


Then lift the cover away from the phone

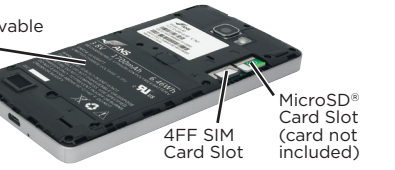

Non-removable Battery, 4FF SIM Card Slot, MicroSD Card Slot (card not included)

Set Up Your Device

The device's set up screens will guide you through the set up process.

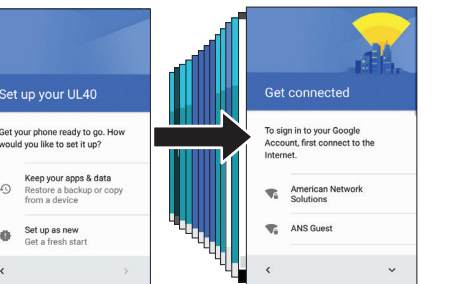

Select **Keep your apps & data** to restore from a backup or copy from a device, or **Set up as new** to start fresh.


Complete the Setup Screens

- Follow the set up process prompts to:
- Sign in to (or set up) a Google Account.
- Protect your phone by activating device protection features.
- Personalize your device.

When setup is finished, you'll see your device's home screen.

Home Screen


Tap from any screen to return to the home screen.

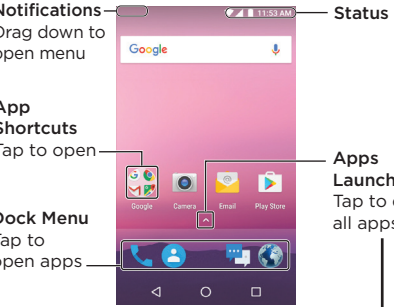

- Notifications** - Drag down to open menu
- App Shortcuts** - Tap to open
- Dock Menu** - Tap to open apps
- App Launcher** - Tap to display all apps
- Status**
- Swipe for more screens**

Notifications

When you see a notification icon on the left side of the status bar, drag the status bar down to display the notification panel. Tap a notification to open it.

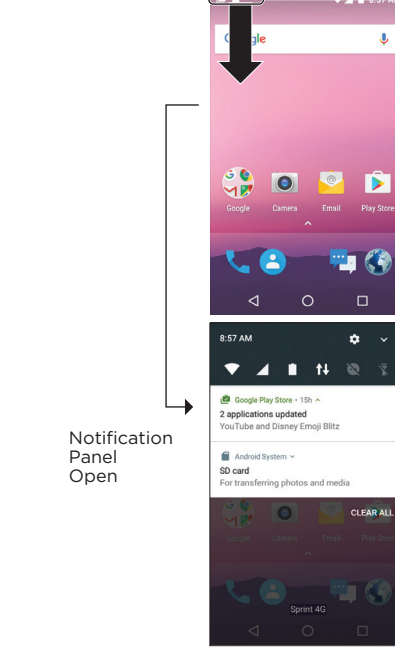

- Notifications** - Drag down to open menu
- Notification Panel Open**
- Swipe for more screens**

Lock & Unlock Your Screen

Your phone allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not In Use

- To quickly turn the screen off, press the Power/Lock button. Pressing the Power/Lock button again will turn on your phone screen and show the lock screen.

Turn the Screen On and Unlock It

- To turn the screen on, press the Power/Lock button. The lock screen appears.
- Swipe your fingers upward to unlock it.
- If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN.

Wi-Fi

To use your device's Wi-Fi, you need access to a wireless access point or "hotspot."

Turn Wi-Fi On and Connect to a Network

1. Tap > > **Settings** > **Wi-Fi**.
2. The Wi-Fi settings menu appears.
3. Tap the switch to **On** to turn Wi-Fi on.
4. Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
5. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **CONNECT**.

Bluetooth

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.


To enable Bluetooth

1. Tap > > **Settings** > **Bluetooth**.
2. The Bluetooth settings menu appears.
3. Tap the switch to **On** to turn Bluetooth on.
4. Bluetooth is enabled.
5. Nearby devices appear in the "Available devices" list. To pair with another Bluetooth device, tap a device from the "Available devices" list, and follow the onscreen instructions to pair with the device.

Internet

Tap > **Internet** to open the Internet app.


- The app will open to the Internet Home Page. From here you can click on any of the Favorites icons listed, or start an internet search at the top of the page.

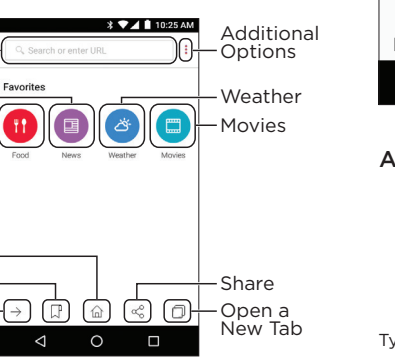

- Search Bar**
- Additional Options**
- Home**
- Bookmarks** - Move forward one page
- Share**
- Open a New Tab**
- News**
- Food**
- Weather**
- Movies**


Contacts

Tap > **Contacts** to access and manage your contacts.

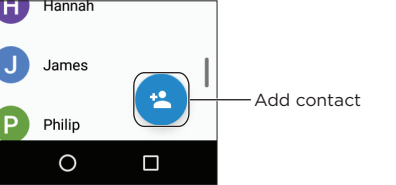

- Add contact**

Add a Contact

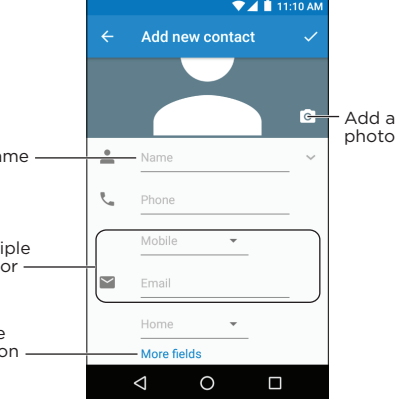


- Type a name**
- Add a photo**
- Add multiple numbers or emails**
- Add more information**

Calendar

Tap > > **Calendar** to open the Calendar app.

- Tap on the Calendar view and then tap to add a new calendar event.

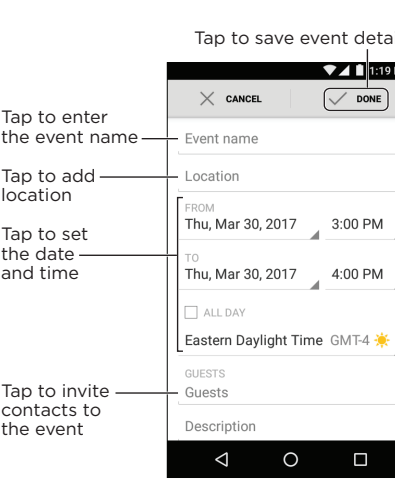

- Tap to save event details**
- Tap to enter the event name**
- Tap to add location**
- Tap to set the date and time**
- Tap to invite contacts to the event**


- Scroll down for additional Calendar event options.

Camera and Video



Tap > **Camera** to open the Camera app.

• Slide from left to right on the viewfinder screen to access more options.

• Tap the circular photo in the bottom left corner of the viewfinder screen to access the gallery. You can also access the gallery by tapping > > **Photos** .

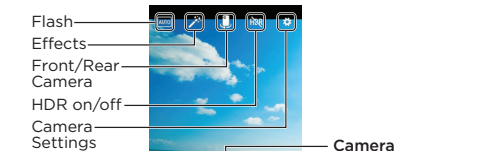

Camera
Tap to take a photo

 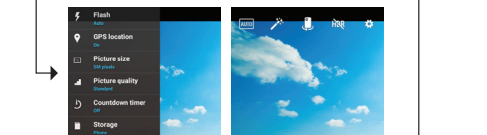


Email Setup

1. Tap > > **Settings** > **Accounts**.

2. Tap **Add account** and then select an account type.

3. Follow the prompts to enter your account information.

Important: Before setting up a Microsoft® Exchange ActiveSync® account, contact your company's Exchange Server administrator for required sign-in information.

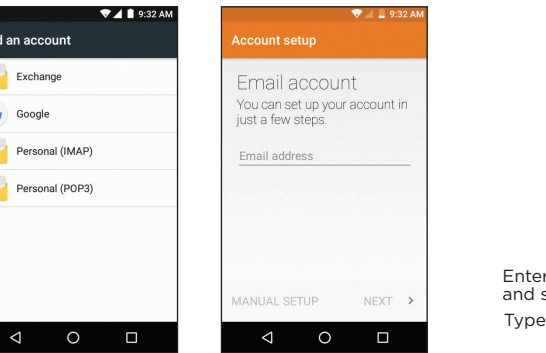


Note: The Accounts screen will show any accounts that have already been set up, including Google Accounts that may have been configured during the set up process.

Email

Tap > **Email** to access your email accounts.

• Tap to compose a new email message.

Email Inbox

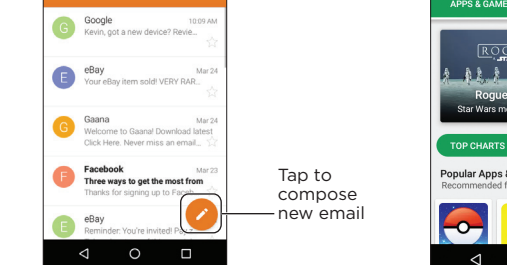

Tap to compose new email


Enter recipients and subject

Type message



Google Play

Google Play is the place to go to find new apps, games, movies, and more.

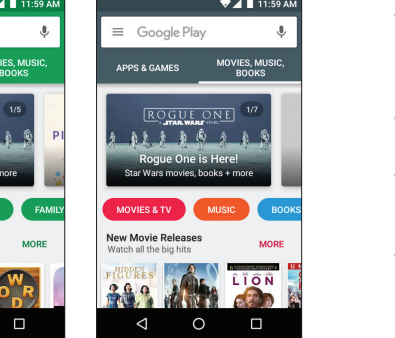

Tap to compose new email

Send Tap to send email

Enter recipients and subject

Type message

Send Tap to send email

Enter recipients and subject

Type message

Send Tap to send email

External microSD® Card

Your UL40 has an external microSD card slot that can be used for additional storage

• To expand device memory using an SD card, while the device is powered off, simply insert the SD card in the slot next to the SIM under the back cover and then power on your device.

• The SD card will be recognized once the device powers on and further instructions will be given.

• Please note that the SD card will not be recognized if you insert it while the device is powered on.

• Your SD card can be formatted to use as portable storage (for moving photos and other media between devices) or as internal storage (for storing anything on the device only, including apps and photos. This option requires formatting that prevents it from working with other devices).

• To expand device memory using an SD card, while the device is powered off, simply insert the SD card in the slot next to the SIM under the back cover and then power on your device.

• Please note that the SD card will not be recognized if you insert it while the device is powered on.

• Your SD card can be formatted to use as portable storage (for moving photos and other media between devices) or as internal storage (for storing anything on the device only, including apps and photos. This option requires formatting that prevents it from working with other devices).

• To expand device memory using an SD card, while the device is powered off, simply insert the SD card in the slot next to the SIM under the back cover and then power on your device.

• Please note that the SD card will not be recognized if you insert it while the device is powered on.

• Your SD card can be formatted to use as portable storage (for moving photos and other media between devices) or as internal storage (for storing anything on the device only, including apps and photos. This option requires formatting that prevents it from working with other devices).

• To expand device memory using an SD card, while the device is powered off, simply insert the SD card in the slot next to the SIM under the back cover and then power on your device.

• Please note that the SD card will not be recognized if you insert it while the device is powered on.

• Your SD card can be formatted to use as portable storage (for moving photos and other media between devices) or as internal storage (for storing anything on the device only, including apps and photos. This option requires formatting that prevents it from working with other devices).

Important Safety Information

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and keep in a dry place.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Using Your Phone While Driving

Operating your phone while driving is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first. Check the laws and regulations on the use of wireless devices in the areas where you drive and always obey them. Also, if using your device while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before using it.

Restricting Children's Access to Your Mobile Device

Your device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the device, or make calls that increase your device bill. Keep the device and all its parts and accessories out of the reach of small children.

Screen images are simulated. Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Caring for the Battery

The guidelines below help you get the most out of your battery's performance.

Disposal of Lithium Ion Polymer (Li-Ion Polymer) Batteries

Do not handle a damaged or leaking Li-Ion Polymer battery as you can be burned. **Special Note:** Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

• In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).

• Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.

• Never dispose of the battery by incineration.

• Don't attempt to disassemble, open crush, bend or deform, puncture, shred or short-circuit the battery.

• The battery may need recharging if it has not been used for a long period of time.

• Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
Less than one month: -4° F to 140° F (-20° C to 60° C)
More than one month: -4° F to 113° F (-20° C to 45° C)

• Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.

RF Exposure Information (SAR)

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

This device is compliant with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528.

Federal Communication Commission (FCC) Radiation Exposure Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body.

Industry Canada license-exempt Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Where can I find additional information?

For additional information, please refer to the following resources:

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project (<http://www.who.int/emf>)

American Network Solutions Limited Warranty Period

American Network Solutions LLC ("ANS") warrants this device is free from defects in material and workmanship under normal use and service for twelve (12) months commencing upon the date of purchase by the first consumer purchaser. If proof of purchase cannot be provided, the manufacturing date as recorded by ANS, based upon the serial number, will be deemed to be the start of Limited Warranty Period.

Limited Warranty Statement
The consumer should never attempt to open or disassemble the device and doing so may cause damage that voids your warranty. The device is equipped with an internal rechargeable battery that is non-removable.

This warranty does not cover defects for or resulting from:

1. Improper or unreasonable use or maintenance;
2. Failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply;
3. Unauthorized alteration or modification of original condition;
4. Damages caused by inadequate packing or shipping procedures;
5. Devices purchased from unauthorized dealers; or
6. Devices whose mechanical serial number or electronic serial number has been removed altered or defaced.

During the Limited Warranty Period, ANS will, at its sole option (using new or refurbished replacement parts), repair any defective devices. Repaired devices will be warranted for a period equal to the remainder of the original Limited Warranty on the original device or for NINETY (90) days following the date the repair is completed, whichever is longer. All replaced parts, components, boards and equipment shall become the property of ANS.

The Limited Warranty is good only to the original purchaser of the device during the Limited Warranty Period as long as it remains in the United States and is not transferrable or assignable.

Disclaimer of Warranties; Exclusion of Liability
Except as set forth in the Limited Warranty contained on the warranty page enclosed with the device, the purchaser takes the device "AS IS", and ANS makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to, the merchantability of the product or its fitness for any particular purpose or use; the design, condition or quality of the device; the performance of the product; the workmanship of the product or the components

contained therein; or compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto. Nothing contained in the instruction guide shall be construed to create an express or implied warranty of any kind whatsoever with respect to the device. In addition, ANS shall not be liable for any damages of any kind resulting from the purchase or use of the device or arising from the breach of the Limited Warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits. Further, ANS shall not be liable for the delay in rendering services under the Limited Warranty or loss of use during the time the device is being repaired.

ANS is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of operating system software or any other similar editing, modification or the like to the device. Using custom operating system software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS. If your carrier prohibits this, if you attempt to download software onto the device without authorization, you will be notified on the screen that the device will no longer operate and be instructed to power down the device. You must then contact your carrier to restore the device to the carrier authorized settings.

ANS disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole. When sending your wireless device to ANS for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and photos) and any other data added to your device.

In addition, if your wireless device utilizes a multimedia card, please remove the card before submitting the device, and store for later use when your device is returned. ANS is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to ANS for repair or service.

For warranty claims, please contact 1-844-450-0841.

GSGUL40GEN

Help

Customer Service

• For American Network Solutions Customer Service, please dial: **1-844-450-0841**

Online Support

• For ongoing help over the life of your device, please visit: www.ansmobility.com

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China

Printed in China