

Seed

*hym*  
originals

FCC ID: 2AM3IH1-SEC01

Instruction

操作说明书

操作說明書

English

 
## Safety Instructions

 
- 1** Read these instructions.
- 2** Keep these instructions.
- 3** Read all warnings.
- 4** Follow all instructions.
- 5** Do not use this apparatus near water.
- 6** Clean only with a dry cloth.
- 7** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8** Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produce heat.
- 9** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
- 10** Only use attachments/accessories specified by the manufacturer.
- 11** Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13** To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
- 14** Do not place naked flame sources, such as lighted candles, on the apparatus.

### Warning


To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on the apparatus.

# Part List

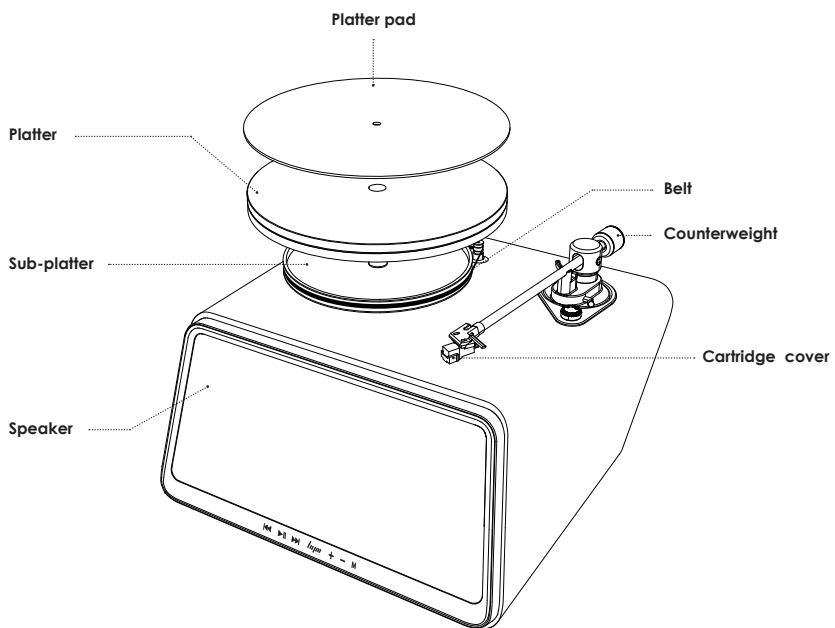


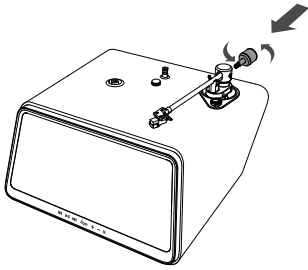


- 1** | Align the counterweight and the hole, and turn to end.

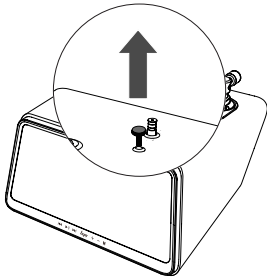 


- 2** | Loose the fixing screw and put in a safe place.

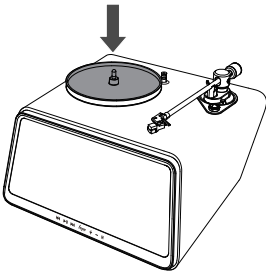 


- 3** | Place the sub-platter at the center of the axis.

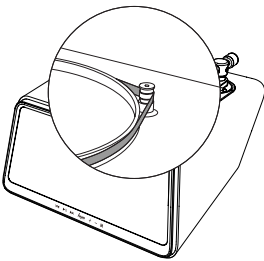 


- 4** | Place the drive belt around the sub-platter and motor pulley.

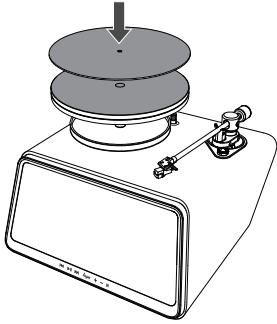 

**5** | Place the platter and platter pad in sequence.

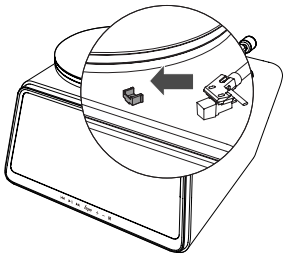 


**6** | Remove the protective cover of the cartridge and put in a safe place.

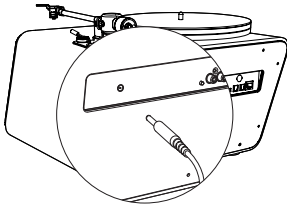 

**7** | Plug in the power line and press HYM button to start.

### Rear panel labeling

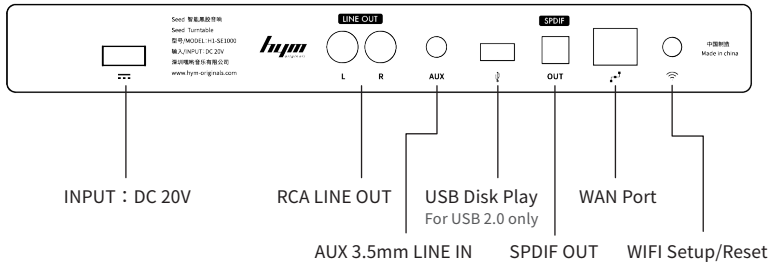 

Seed  
hym

# Interface Guide



Last piece



Play/Pause



Next piece



Switch on/off

 


Volume adjustment



Mode switch

# Part Description

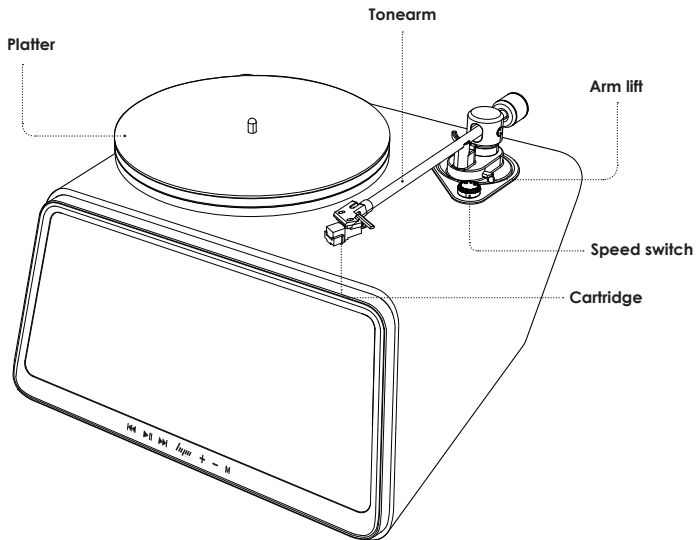

# 1

 


## Vinyl Mode



### Start to play

- 1 (Skip this step when starting for the first time) Press M to switch to vinyl mode.
- 2 Place the vinyl on the platter.
- 3 Set the revolving control button to appropriate speed (33 /45 rev).
- 4 Stir the handle lever upwards.
- 5 Place the tonearm on the vinyl.
- 6 Stir the handle lever downwards.

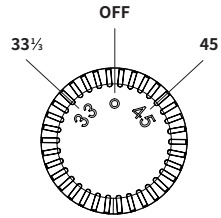

### Stop playing


- 1 Stir the handle lever upwards.
- 2 Replace the tonearm to its original place.
- 3 Stir the handle lever downwards.
- 4 Set the speed control button to zero.
- 5 Remove the vinyl.

# 2



## Wifi Mode



- 1 Press M to switch to Wi-Fi mode
- 2 Open HYM app.
- 3 Enter the WIFI password/code for connection.
- 4 Press the  behind the acoustics.
- 5 Wait for connected.
- 6 Connected successfully. Select songs to be played.  
\* Local songs can be played with HYM app or through other platforms.  
\* To reset WIFI configuration, press and hold the "WIFI" key on the rear panel (for over 3s).

**\* If internet is not available:**

- 1 Open WIFI setup list.
- 2 Select "HYM-Seed" for connection.
- 3 Code: "seedseed"
- 4 Play songs selected via Airplay or DLNA.

**\* if no wifi is available:**

- 1 plug in ethernet cable to WLAN port
- 2 open wifi setup list
- 3 select "HYM-Seed" for connection.
- 4 code: "seedseed"
- 5 Select songs to be played via HYM APP or others platform.

### Download APP



Search **HYM** in APP store.



Search **HYM** in the Google Play.



APP Download & WiFi  
Setup Instructions



# 3



## Bluetooth Mode



- ① Press M to switch to bluetooth mode.
- ② Open cellphone bluetooth setting.
- ③ Choose acoustics (HYM-seed) for match.
- ④ Matched successfully.
- ⑤ Choose music to play.

\*To pair again, press and hold the "Play/Pause" key on the front panel (for over 3s).

# 4



## Audio input mode



### AUX-input

- ① Press "M" to switch to audio input mode.
- ② Plug in the 3.5mm auxiliary audio cable.

 
# 5



## Audio output

- ① Plug in the RCA audio cable.

\*To remove the voice of loudspeaker of Seed, click the "Mute" key on the remote controller.

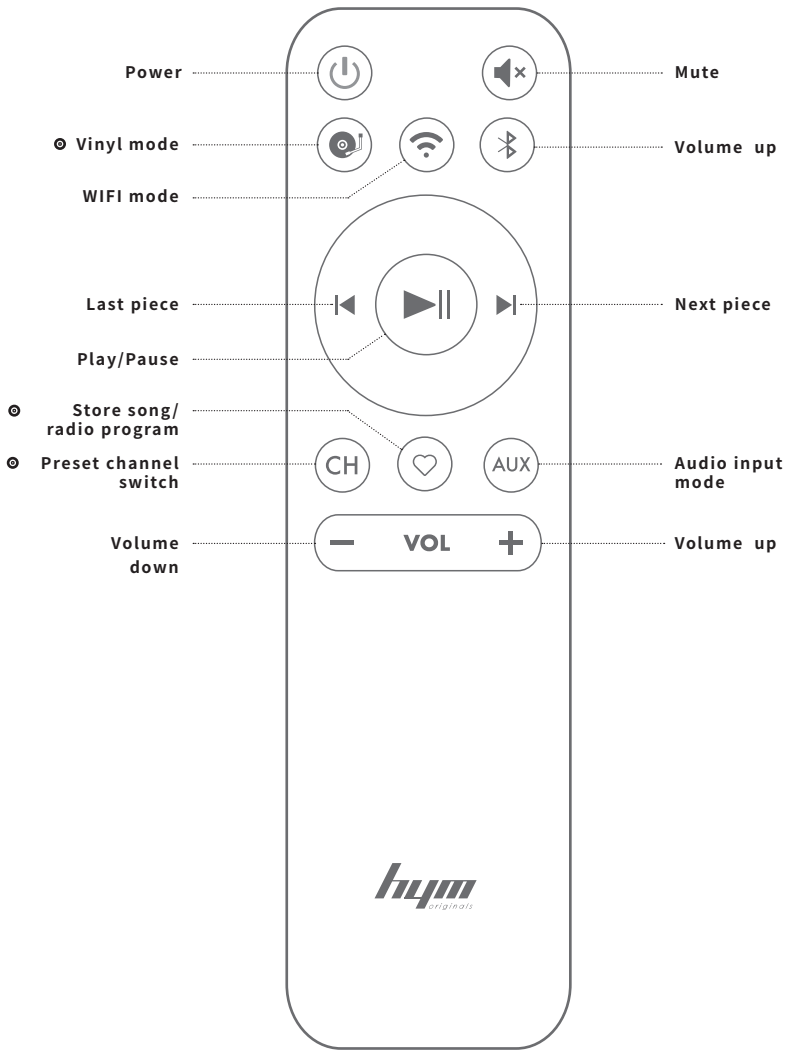

⓪ Note: More detail on the right hand page.


## CH

### Six programs can be preset.

Songs preset can be played on speaker without cellphone operation.

### Setting of preset channels.

Proceed in APP.

1. Press a list you wish to listen to.
2. Press  on the lower right corner in the cover page.
3. Press the channels to be preset.



### Save songs/radio program you like to “My favorite♥” .

For how to create list, see APP for details.



### Switch to vinyl mode.

Vinyl play needs manual operation, this key is reserved for switch mode only.

## FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## 简体中文

 
### 安全指示

 
- 1 阅读本说明。
- 2 保留本说明。
- 3 注意所有警告。
- 4 遵守所有告示。
- 5 勿在近水处使用本产品。
- 6 只用干布清洁本产品。
- 7 请勿堵住任何通风口，并根据制造商指示安装。
- 8 请勿安装于任何热源附近，如散热器、热风调节器、灶炉或其他产生热量的仪器。
- 9 保护电源线，防止被踩踏或被夹住，尤其是插头、插座及产品电源引出处。
- 10 只能使用制造商制定的配件 / 附件。
- 11 所有维修工作应由合格检修人员进行。设备因以下情况损坏时，应进行维修：液体溅入设备中或异物落入设备时、设备暴露在雨水或潮湿环境中、无法正常工作或摔落到地上。
- 12 如遇雷暴天气或长期不使用时，请拔下设备插头。
- 13 如需完全断开本产品的交流电源，请将电源线从交流电源插座中拔出。
- 14 请勿在本设备上放置明火源，如点燃的蜡烛。

### 警告


严禁本产品暴露在下雨及潮湿的环境之中，以降低起火及触电的危险。本产品避免暴露在会滴水及会溅到水的环境中。装有液体的容器绝对严禁放在本产品上，例如酒瓶，花瓶等等。

## 部件清单

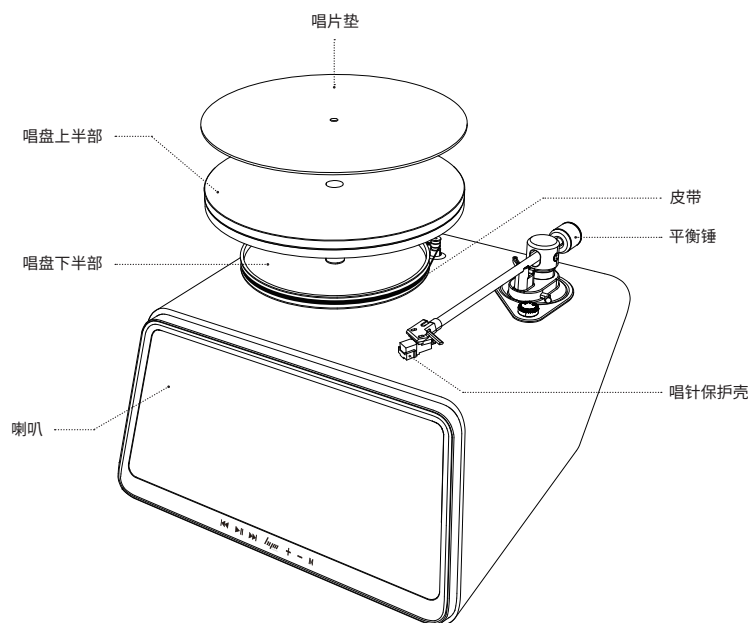


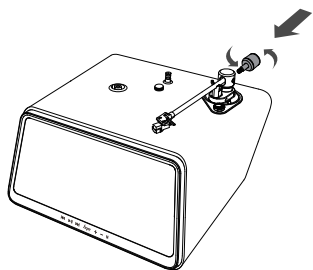


**1** | 将唱锤对准孔位，并旋转锁到底

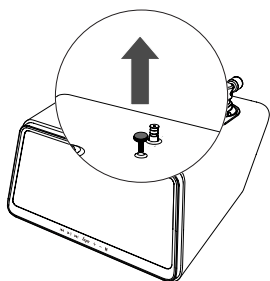 


**2** | 将运输螺丝松旋开拿起并妥善保管

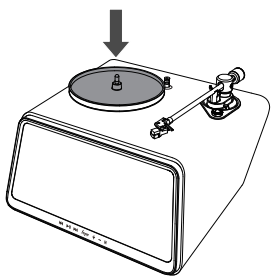 


**3** | 将唱盘下半部放置于轴心中

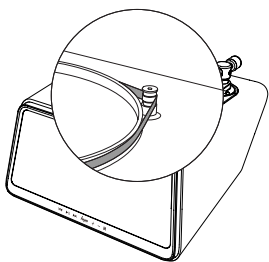 


**4** | 将皮带套到马达轴上

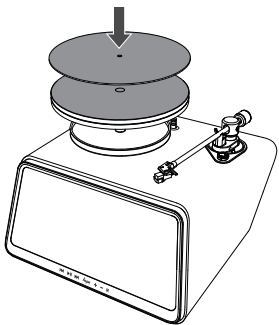 

5 | 依序放上唱盘上半部、唱片垫

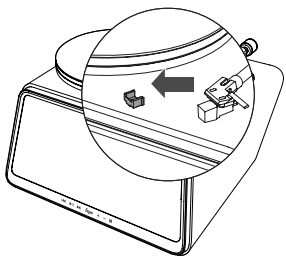 


6 | 推开唱针保护壳，并妥善保管

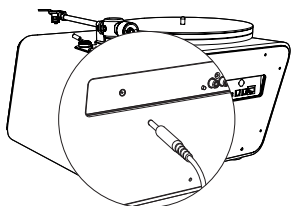 

7 | 插上电源线并开启电源键

### 后背板标示

 

电源输入：直流 20V

RCA 输出

U 盘播放  
仅支持 USB 2.0

WAN 口

AUX 3.5mm 输入

SPDIF 光纤输出

Wi-Fi 配对 / 重置


Seed  
hup



## 界面说明


 
## 部件说明

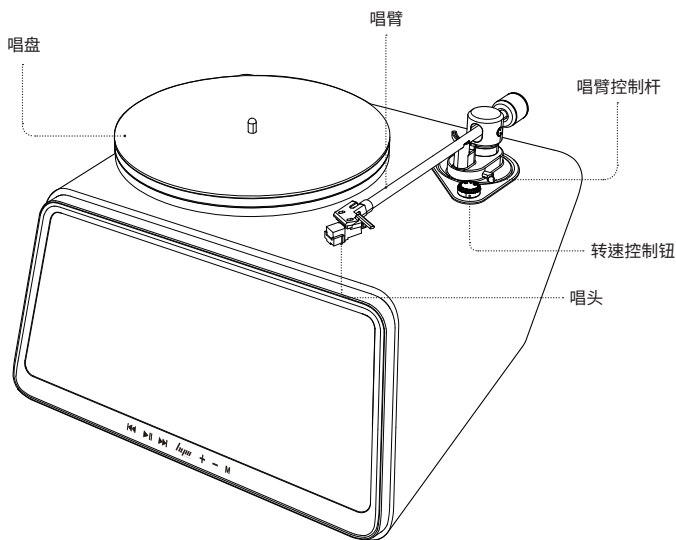


# 1

## 黑胶模式



### 开始播放

 - ① (首次开机可跳过此步骤) 点击 M 键切换到黑胶模式
- ② 将黑胶放上唱盘
- ③ 将转速控制按钮调到合适档位 (33 转 /45 转)
- ④ 向上拨动唱臂控制杆
- ⑤ 将唱臂放置于黑胶唱盘上
- ⑥ 向下拨动唱臂控制杆

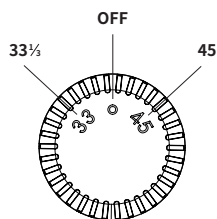

### 停止播放

- ① 向上拨动唱臂控制杆
- ② 将唱臂放回原位
- ③ 向下拨动唱臂控制杆
- ④ 将转速控制按钮调到 0 档
- ⑤ 将黑胶拿起

## 2




### Wifi 模式



① 点击 M 键切换到 wifi 模式

② 打开 HYM app

③ 输入当前 wifi 网络密码

④ 按下音响背后的  键

⑤ 等待连接

⑥ 连接成功，点选歌曲进行播放

\* 可选择 HYM app 中的本地歌曲进行播放，亦可选择其他串流平台进行播放

\* 若要重置 WIFI 配置，请长按背板上的 WIFI 键（3s 以上）

\* 无网络状态下：

① 打开 WIFI 设置列表

② 点选 "HYM-Seed" 进行连接

③ 密码："seedseed"

④ 透过 Airplay 或 DLNA 进行歌曲推送播放

\* 无 WIFI 的状态下：

① 将网线接上机器后背的 WAN 口

② 打开 WIFI 设置列表

③ 点选 "HYM-Seed" 进行连接

④ 密码："seedseed"

⑤ 使用 HYM APP 或其它平台进行播放。

(此时 Seed 已经连上网络)

### APP 下载



App Store 中搜寻

HYM



国内主流安卓市场中搜寻

HYM



APP 下载  
WiFi 设置影片教学

### 3



#### 蓝牙模式



该模式下 M 指示灯为  
| 蓝色 |

- ① 点击 M 键切换到蓝牙模式
- ② 打开手机的蓝牙设置
- ③ 选择音响 (HYM-Seed) 进行配对
- ④ 配对成功
- ⑤ 选择音乐进行播放

\* 若要重新配对, 请长按前面板上的播放/暂停键 (3s 以上)

### 4



#### 音频输入模式



该模式下 M 指示灯为  
| 黄色 |

#### AUX- 输入

- ① 点击 M 键切换到音频输入模式
- ② 插上 3.5mm 音频线

 
### 5



#### 音频输出

- ① 插上 RCA 线

\* 若要去除 Seed 本体的喇叭声音, 请点选遥控器上的静音键。

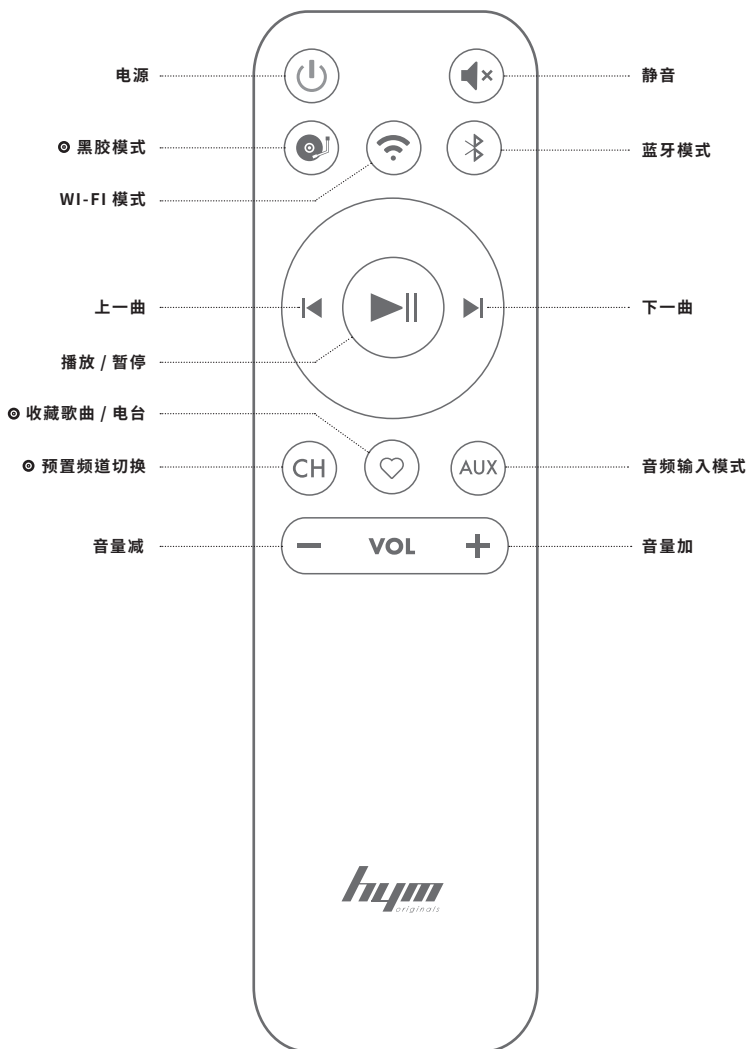

⊙ 注：详情请见右页


CH

### 预置频道切换


机器可预置六个要收听的节目

### 预置频道设置

在 APP 中进行

1. 点击要收听的列表
2. 点击封面右下角的  键
3. 点击要进行预置的频道



将喜欢的歌曲 / 电台  
保存至  我的最爱 中

列表创建详见 APP



### 切换到黑胶模式

黑胶播放需要手动操作，此按键仅做模式切换使用。

## 繁體中文

 
### 安全指示

- 1 閱讀本說明。
- 2 保留本說明。
- 3 注意所有警告。
- 4 遵守所有告示。
- 5 勿在近水處使用本產品。
- 6 只用乾布清潔本產品。
- 7 請勿堵住任何通風口，並根據製造商指示安裝。
- 8 請勿安裝於任何熱源附近，如散熱器、熱風調節器、灶爐或其他產生熱能的儀器。
- 9 保護電源線，防止被踩踏或被夾住，尤其是插頭、插座及產品電源引出處。
- 10 只能使用製造商制訂的配件 / 附件。
- 11 所有維修工作應由合格檢修人員進行。設備因以下情況損壞時，應進行維修：液體濺入設備中或異物落入設備時、設備暴露在雨水或潮濕環境中、無法正常工作或掉落到地上。
- 12 如遇雷暴雨天氣或長期不使用時，請拔下設備插頭。
- 13 如需完全斷開本產品的交流電源，請將電源線從交流電源插座中拔出。
- 14 請勿在本設備上放置明火源，如點燃的蠟燭。

 
### 警告

嚴禁本產品暴露在下雨及潮濕的環境之中，以降低起火及觸電的危險。本產品避免暴露在會滴水及會濺到水的環境中。裝有液體的容器絕對嚴禁放在本產品上，例如酒瓶，花瓶等等。


## 部件清單

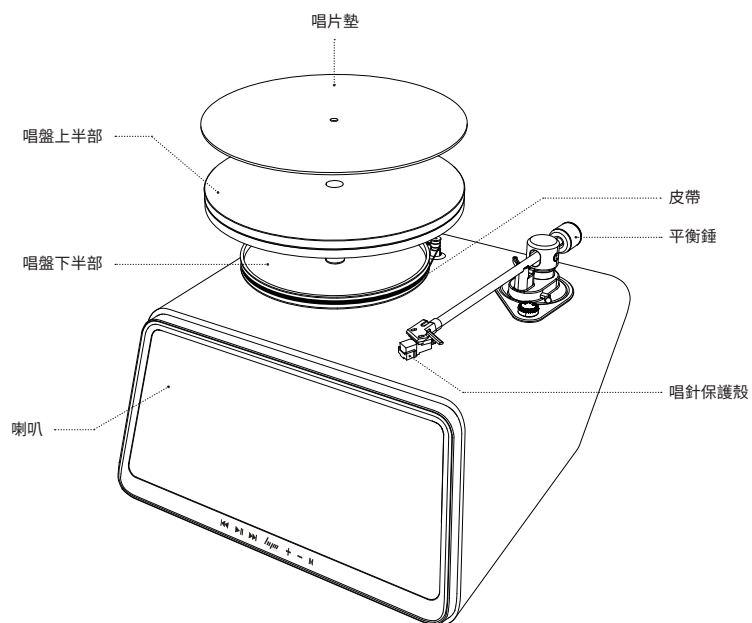




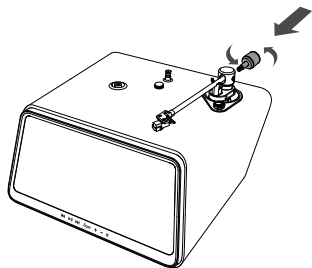


**1** | 將唱錘對準孔位，並旋轉鎖到底。

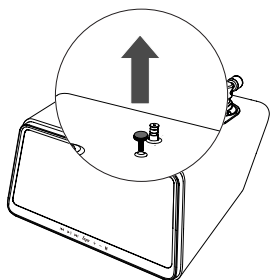 

**2** | 將運輸螺絲鬆開拿起，  
並妥善保管。

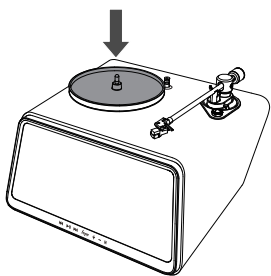 

**3** | 將唱盤下半部放置於軸心中。

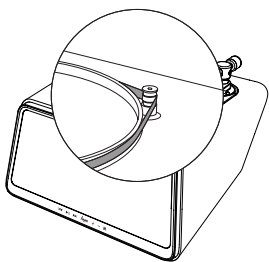 


**4** | 將皮帶套到馬達軸上。



## 介面說明


 
## 部件說明

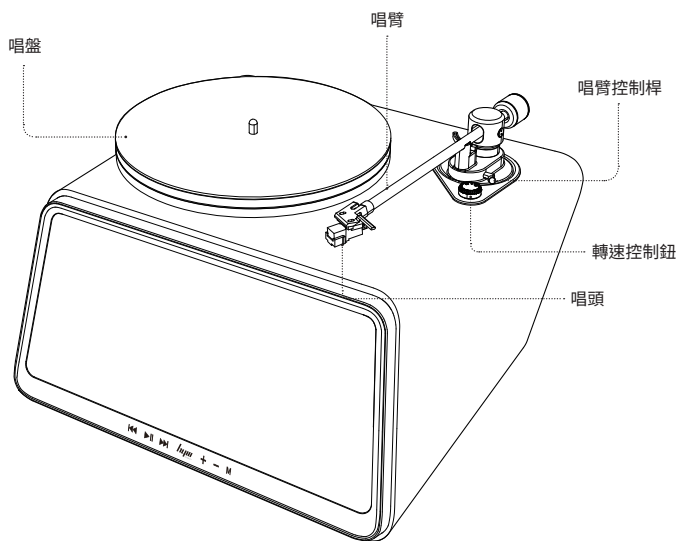


# 1

## 黑膠模式



### 開始播放

 - ① (首次開機可跳過此步驟) 點擊 M 鍵切換到黑膠模式
- ② 將黑膠放上唱盤
- ③ 將轉速控制鈕調到合適檔位 (33 轉 /45 轉)
- ④ 向上撥動唱臂控制桿
- ⑤ 將唱臂放置於黑膠唱盤上
- ⑥ 向下撥動唱臂控制桿

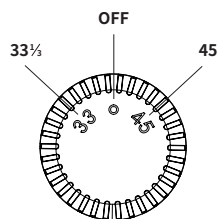

### 停止播放

- ① 向上撥動唱臂控制桿
- ② 將唱臂放回原位
- ③ 向下撥動唱臂控制桿
- ④ 將轉速控制鈕調到 0 檔
- ⑤ 將黑膠拿起

## 2




### Wifi 模式



① 點擊 M 鍵切換到 wifi 模式

② 打開 HYM app

③ 輸入目前的 wifi 網路密碼

④ 按下音響背後的  鍵

⑤ 等待連接

⑥ 連接成功，點選歌曲進行播放

\* 可選擇 HYM app 中的本地歌曲進行播放，亦可選擇其他串流平臺進行播放

\* 若要重置 WIFI 配置，請長按背板上的 WIFI 鍵 (3s 以上)

\* 無網絡狀態下：

① 打開 WIFI 設置列表

② 點選 "HYM-Seed" 進行連接

③ 密碼："seedseed"

④ 透過 Airplay 或 DLNA 進行歌曲播放

\* 無 WIFI 的狀態下：

① 將網路線接上機器背後的 WAN 口

② 打開 WIFI 設置列表

③ 點選 "HYM-Seed" 進行連接

④ 密碼："seedseed"

⑤ 使用 HYM APP 或其它平台進行播放  
(此時 Seed 已經連上網路)

### APP 下載



App Store 中搜尋  
HYM



Google Play 中搜尋  
HYM

 


APP 下載  
WiFi 設置影片教學

### 3



#### 藍牙模式



- ① 點擊 M 鍵切換到藍牙模式
- ② 打開手機的藍牙設置
- ③ 選擇音響 (HYM-Seed) 進行配對
- ④ 配對成功
- ⑤ 選擇音樂進行播放

\* 若要重新配對，請長按前面板上的播放/暫停鍵 (3s 以上)

### 4



#### 音頻輸入模式



#### AUX- 輸入

- ① 點擊 M 鍵切換到音頻輸入模式
- ② 插上 3.5mm 音頻線

 
### 5



#### 音頻輸出

- ① 插上 RCA 線

\* 若要去除 Seed 本體的喇叭聲音，請點選遙控器上的靜音鍵。

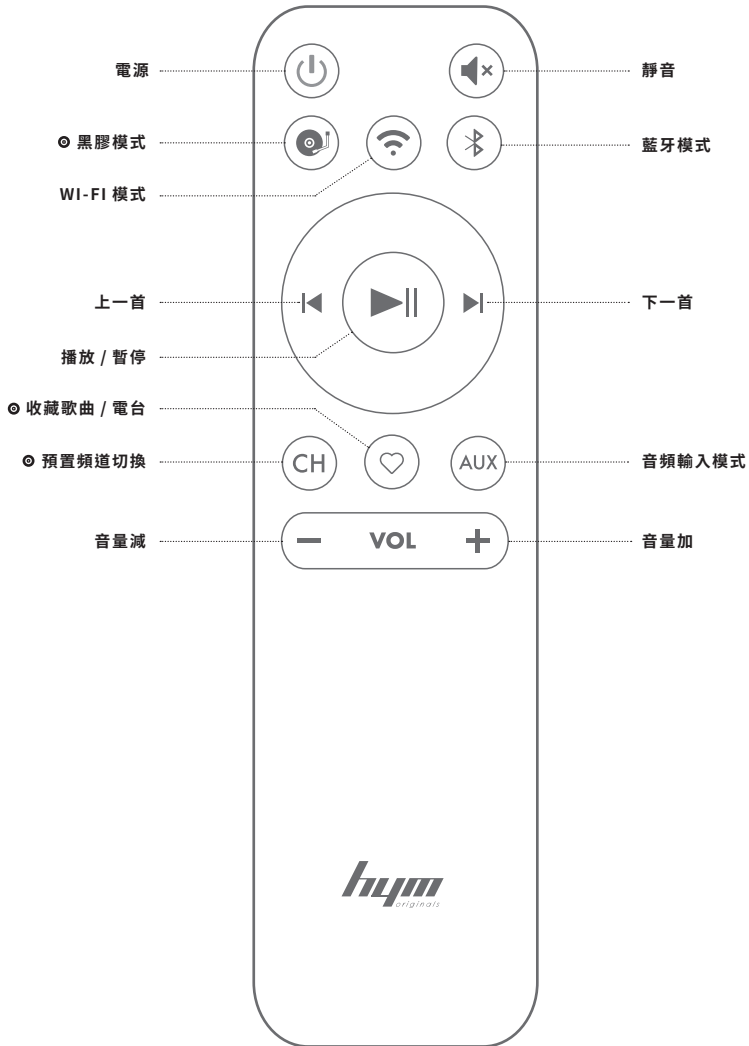

● 注：詳情請見右頁


CH

### 預置頻道切換

機器可預置六個要收聽的節目

### 預置頻道設置

在 APP 中進行

1. 點擊要收聽的列表
2. 點擊封面右下角的  鍵
3. 點擊要進行預置的頻道



### 將喜歡的歌曲／電台 保存至 我的最愛中

列表創建詳見 APP



### 切換到黑膠模式

黑膠播放需要手動操作，此按鍵僅做模式切換使用。



Designed by HYM

Seed

*hym*  
originals