


Water dancing bluetooth speaker User Manual

Thank you for purchasing Bluetooth Water Dancing Speaker from us. Please read the following instructions to learn how to configure and use more effectively your product.

Product Overview

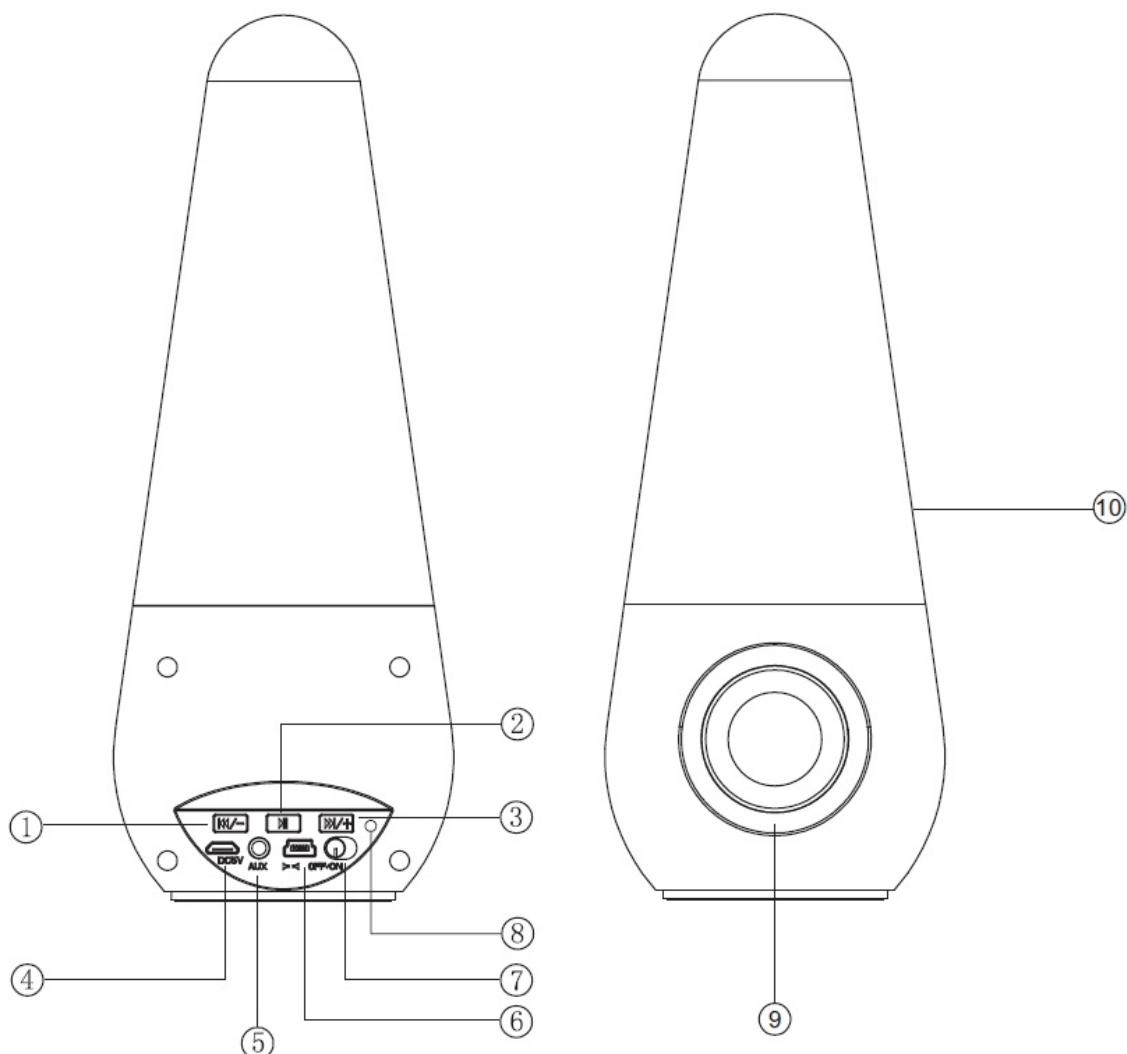

① Back/Volume down	② Play/Pause
③ Forth/Volume up	④ Micro USB charging port
⑤ AUX Port	⑥ LINE-OUT Port
⑦ Power on/off	⑧ Charging indicator light
⑨ Driver	⑩ Lampshade

Keys to operation

Power on/off	Move the key to ON/OFF side to turn on/off the speaker. Indicator light on when it powers on.
Play/Pause	A. Short press to play or pause music B. Long press to enter Bluetooth re-pairing mode.
Back/Volume down	A. Under bluetooth mode, short press to go back to last track, long press to decrease volume; B. Under AUX mode, short press is without any function, long press to decrease volume.
Forth/Volume up	A. Under bluetooth mode, short press to move to next track, long press to increase volume (When it gets to maximum volume, you can hear a “beep” sound.) B. Under AUX mode, short press is without any function, long press to increase volume

Bluetooth mode

Pairing

Turn on speaker. You will hear “Pairing”, (However, if the bluetooth Water Dancing Speaker has already been paired with your Bluetooth device you will hear “Pairing, connected” instead.) Bluetooth works spontaneously, searching previous pairing Bluetooth set. If the speaker fails to link, it starts pairing other Bluetooth devices. In this case, turn on your Bluetooth device to search and link the speaker. The PIN code is “0000”. You will hear “Connected” after pairing successfully.

Disconnect

Long press “Play/pause” button for 2 seconds, you will now hear “Disconnect”. The Bluetooth connection will now be canceled between the Speaker and your Bluetooth Device.

AUX Mode

Plug one end of 3.5mm cable into AUX slot of the speaker and the other end into audio slot of Mobile Phone, Notebook, Tablet PC, MP3/MP4 Player etc. After that, you’ll be able to enjoy the music. Speaker will return to bluetooth mode after plug out AUX cable. You will hear “Pairing” after you plug out AUX mode, if the speaker has already been paired with your Bluetooth device, you will hear “Pairing, connected” instead.

Line-out Mode

Under Bluetooth or AUX Mode, Plug the mini USB end of Line-out cable into Line-out slot of the speaker and the other end into AUX slot of other speaker or audio device, please make sure other speaker or audio device is in AUX mode. In this case, other connected devices will be able to play music along with water dancing speaker.

Charging

Plug the charging cable into Micro USB slot of the speaker, USB slot of PC or other USB slot of chargers to get charged. When the speaker is being charged, indicator light turns red. Once it is fully charged, indicator light turns off. (We'd suggest users turning off the speaker while charging. It takes longer time to get completely charged if the speaker works when being charged.)

Water Dancing

Under bluetooth or AUX mode, water will dance according to the music tempo, meanwhile the lights under the water column on

Warning

1. If the speaker cannot be turned on after moved to POWER ON key, or it turns off on turning on, the user shall check whether it is powerful. If it's out of power, please get it charged and try again later.

2. Please get the speaker charged in DC 5V slot. It would make the speaker fail to work or even damage the speaker if not charged in recommended DC 5V slot.

3.Under AUX Mode, please do not increase the volume of your Mobile Phone, PC, MP3/MP4 Player, CD, DVD etc to a large extend, or sonic boom or sound distortion may occur. In case of sonic boom or sound distortion, please decrease volume either of Mobile Phone, PC, MP3/MP4 Player, CD, DVD or the speaker. The sound gets normal soon.

4. If Bluetooth device of Mobile Phone, PC etc fails to link to the speaker or if fails to playing music after being connected, the user shall check if he/she enters the correct PIN code or if Bluetooth device of his/her Mobile Phone, PC etc supports A2DP.

Technical Information

Sound Track	Mono
Function	Bluetooth,AUX,Water dancing
Bluetooth version	V3.0
Bluetooth transmission distance	≤10 meter
Power Supply	DC 5V, Lithium battery
Battery capacity	3.7V 800 mAh
Rated power	3W
Frequency Response	100Hz-18KHz
SNR	80dB
Impedance	4Ω
Audio interface	3.5MM

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.