

INSTRUCTION MANUAL FOR i359(MEC-6192U) / i1105(MEC-6196U) COFFEE MILL (cETLus)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not immerse the cord, plug, or the appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Check bean hopper for presence of foreign objects before using.
11. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
12. This appliance is for household use only.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

INSTRUCTION FOR USE

Before using your appliance for the first time, wipe the stainless steel bowl, blade, hopper and cover with a damp cloth. Allow to dry completely before using.

1. *Remove cover and place coffee beans into the stainless steel bowl. Do not exceed **50 grams**. of beans weighed at a time.
2. Place the cover on the appliance.
3. Plug in the appliance.
4. Hold the unit with one hand and make sure the cover is securely in place, press the button on the cover to switch-on with the other hand. To stop it, simply release the button. Do not remove the cover before the blades have stopped rotating.
5. *This appliance is intended for an operation maximum of **15 seconds on**.
6. Experimenting with the length of grind will enable you to get exactly the grind you prefer for the coffee.
7. When the blades have stopped...unplug the unit...remove the cover and the ground coffee.

MAINTENANCE AND CLEANING

DO NOT IMMERSE THE MOTOR BASE IN WATER... DO NOT PLACE THE APPLIANCE IN THE DISHWASHER.

1. Before cleaning, unplug the appliance from electrical outlet.
2. Wash the cover in warm, soapy water. Rinse and dry completely.
3. Wipe the blades, stainless steel bowl, exterior and motor base with a damp cloth or paper towel to remove any excess ground coffee.
4. Any other servicing should be performed by an authorized service representative.

 
i359 Mobile App Usage Manual

Before using the mobile app, please understand that the app is a client for coffee mill, it does not work alone.

1. Open i359 app on your smartphone



2. Please press the button to connect i359 with your smartphone (ensure Bluetooth enabled).

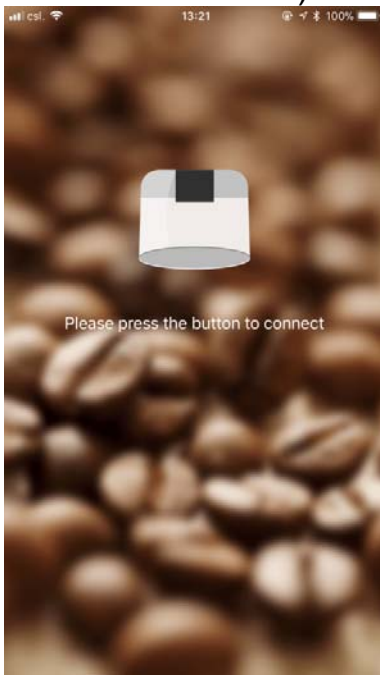

3. the app searching your i359 device



 
4. Put the lid on flat surface with opening facing up




5. Select function “Grind” or “Measure”




6. Once you press “Grind”, select your flavor as strength and fineness and number of cups

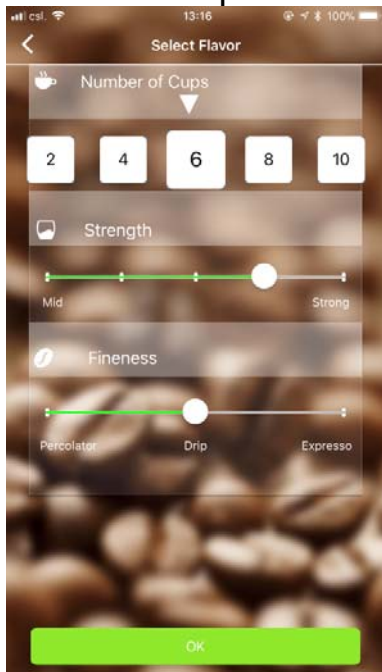

 
7. Measuring beans according to your flavor, put bean in the lid

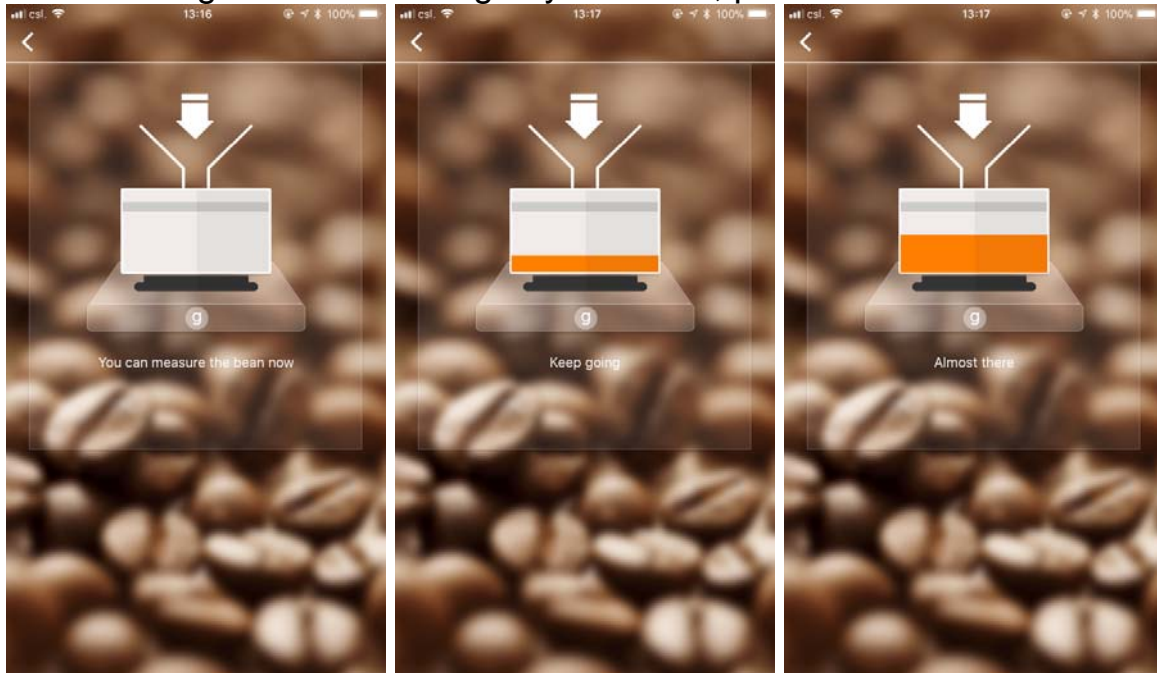

 
8. You may overload bean sometime, but you can take away a bit to perfect your flavor

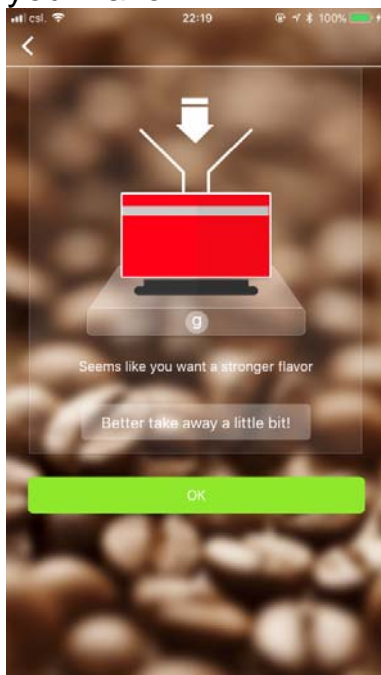

 9. Please put the bean into the grinder, then ready to grind...

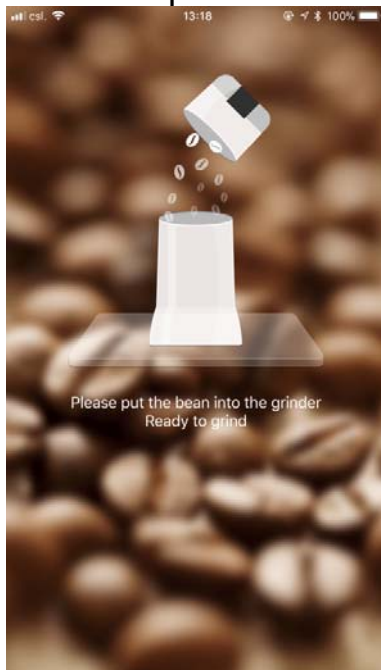

 10. Grinding...

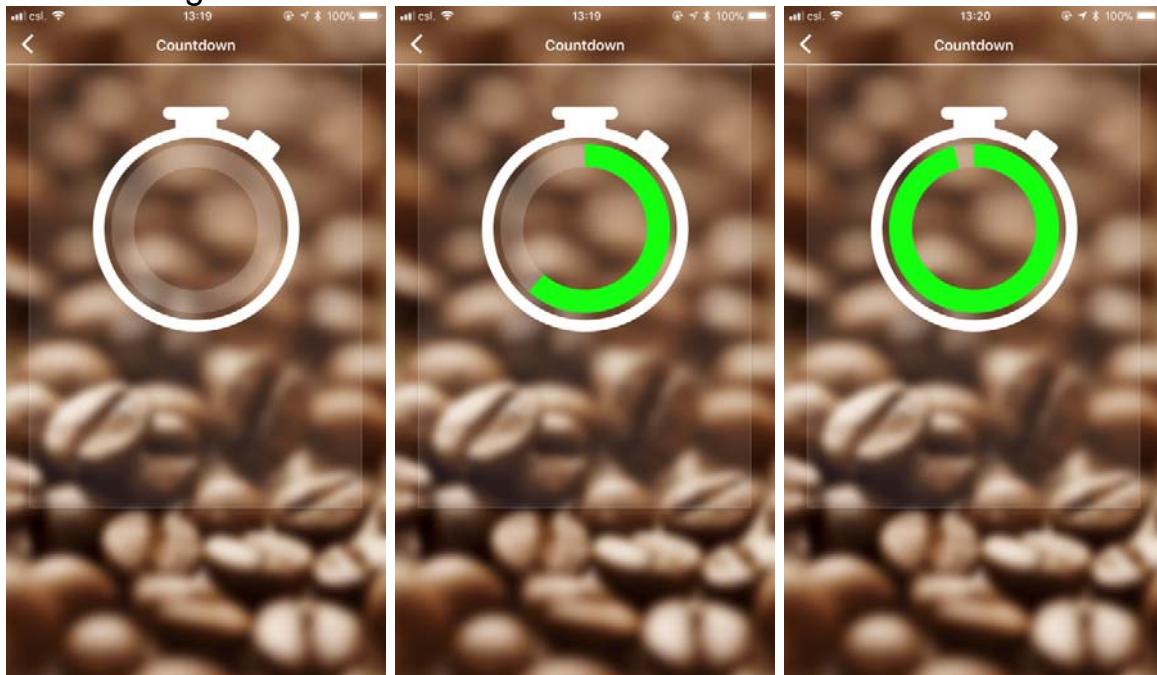

11. Grinding completed, you can enjoy your coffee.

Of course, you can prepare another round of coffee powder or “Off” the power.



12. Other than “Grind”, you can select “Measure” to scale something else as almond, walnut,...etc. with your cover



Troubleshooting

If your smartphone cannot search your device, you can quit the i359 app and remove battery from the device. Then just restart above from step 1.

Enjoy your coffee with our i359.

FCC ID: 2AM66-M6192U-M6196U

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Warning

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

TRADEMARKS

Product names mentioned in this manual may be trademarks or registered trademarks of those products.

All trademarks or brand names mentioned are properties of their respective companies.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.