

Internal Photos


OPEN VIEW OF EUT




VIEW OF BATTERY




INTERNAL VIEW OF EUT-1

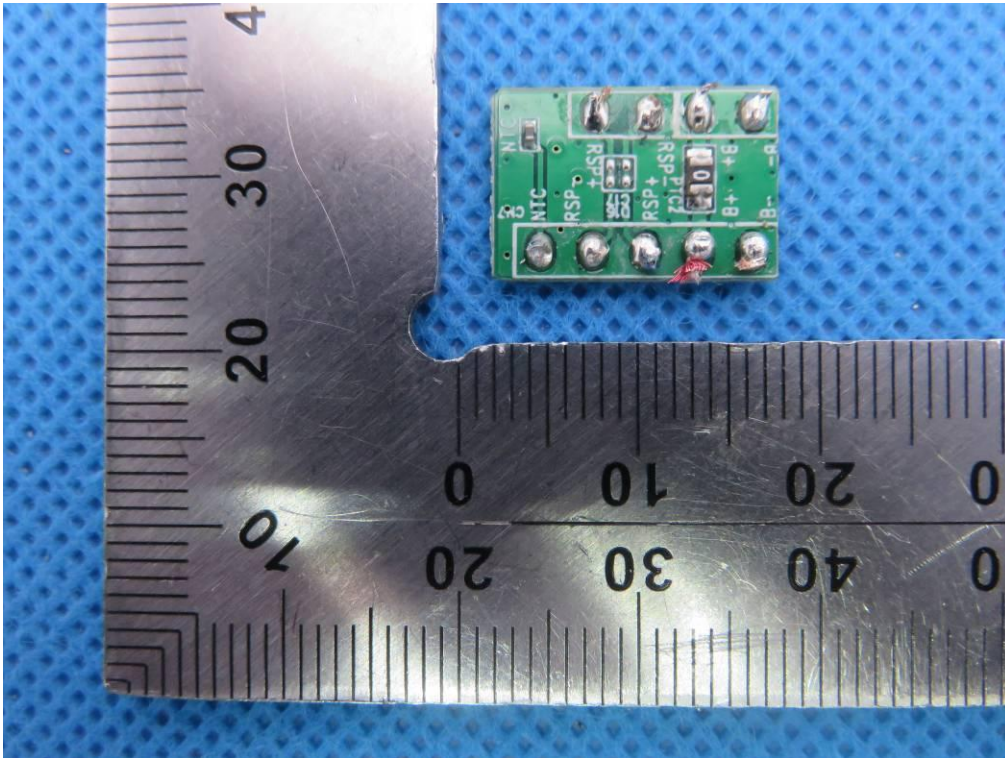

INTERNAL VIEW OF EUT-2

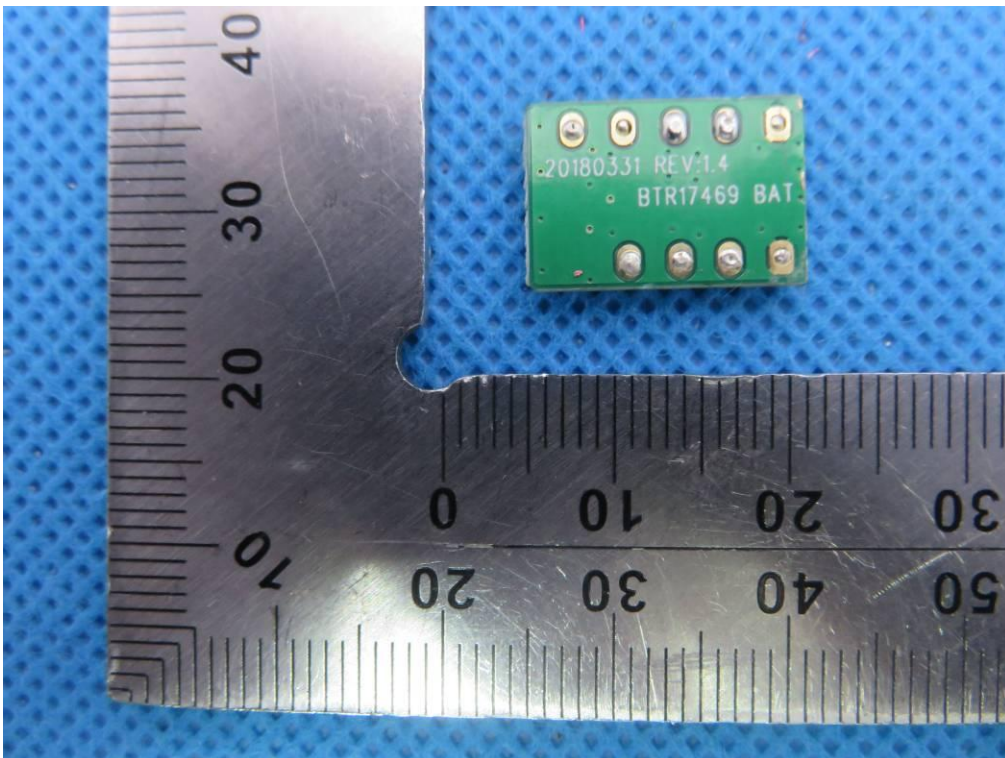


INTERNAL VIEW OF EUT-3

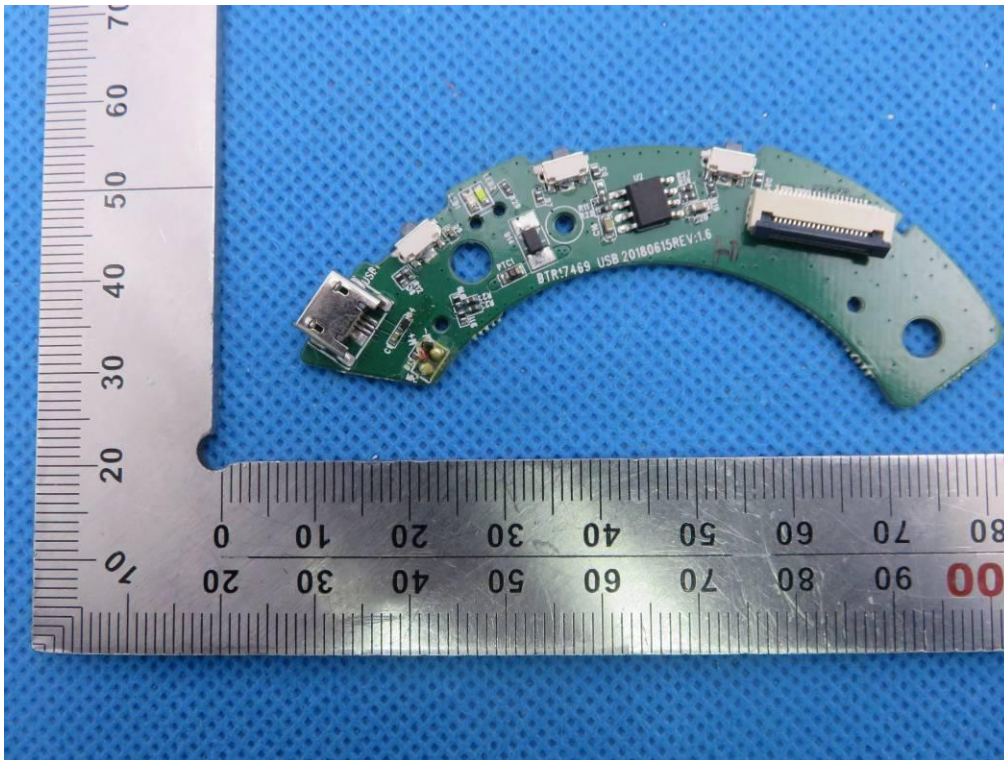


INTERNAL VIEW OF EUT-4




INTERNAL VIEW OF EUT-5

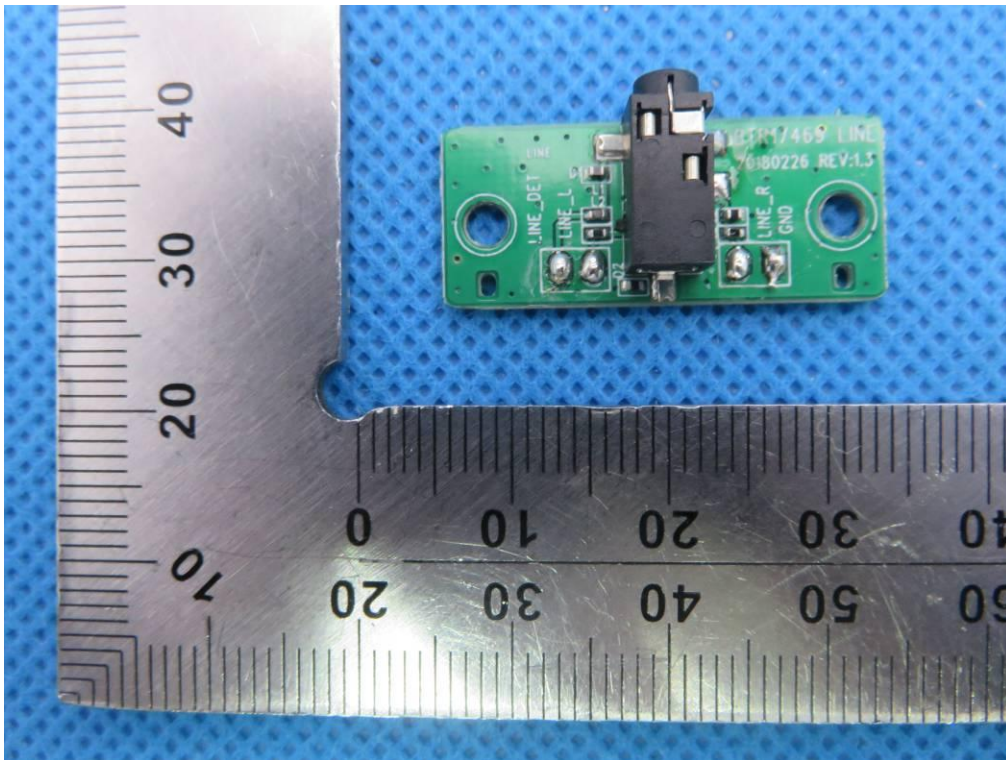


INTERNAL VIEW OF EUT-6

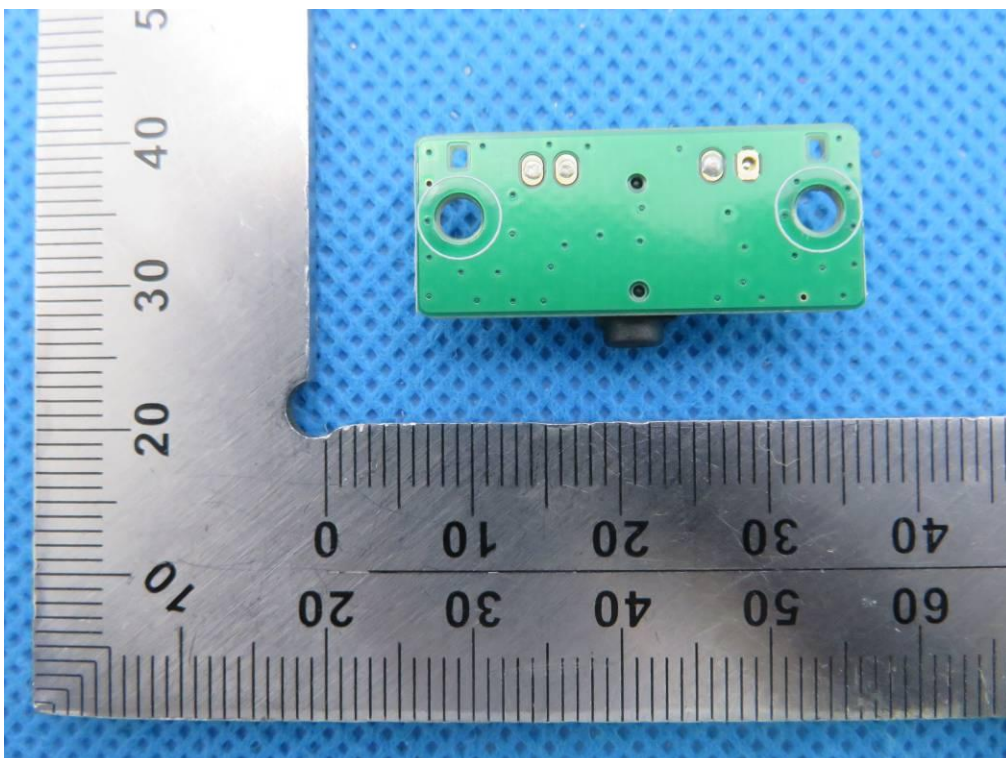


INTERNAL VIEW OF EUT-7

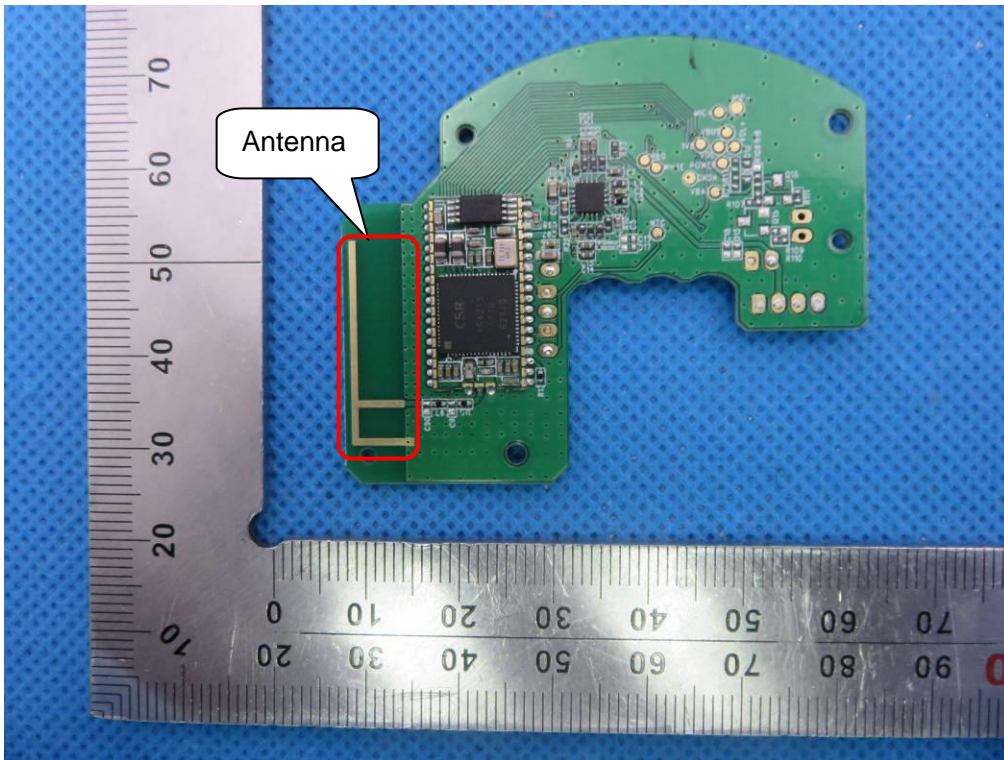


INTERNAL VIEW OF EUT-8

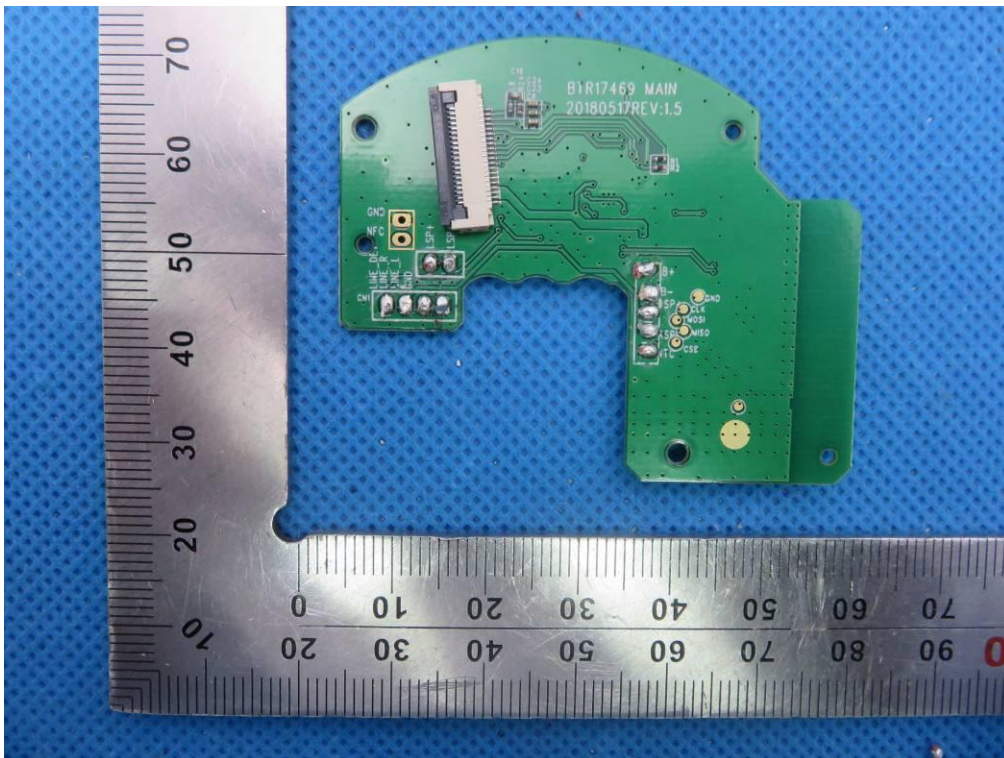

INTERNAL VIEW OF EUT-9

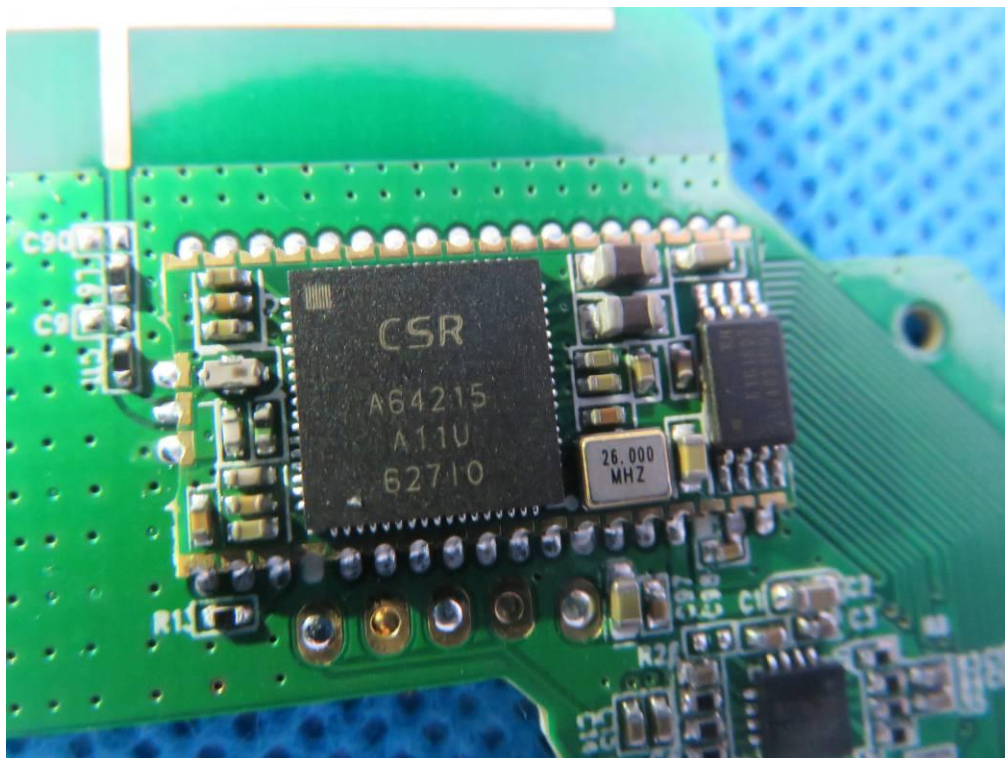


SERIES MODE
HDJ-X5BT-W
OPEN VIEW OF EUT

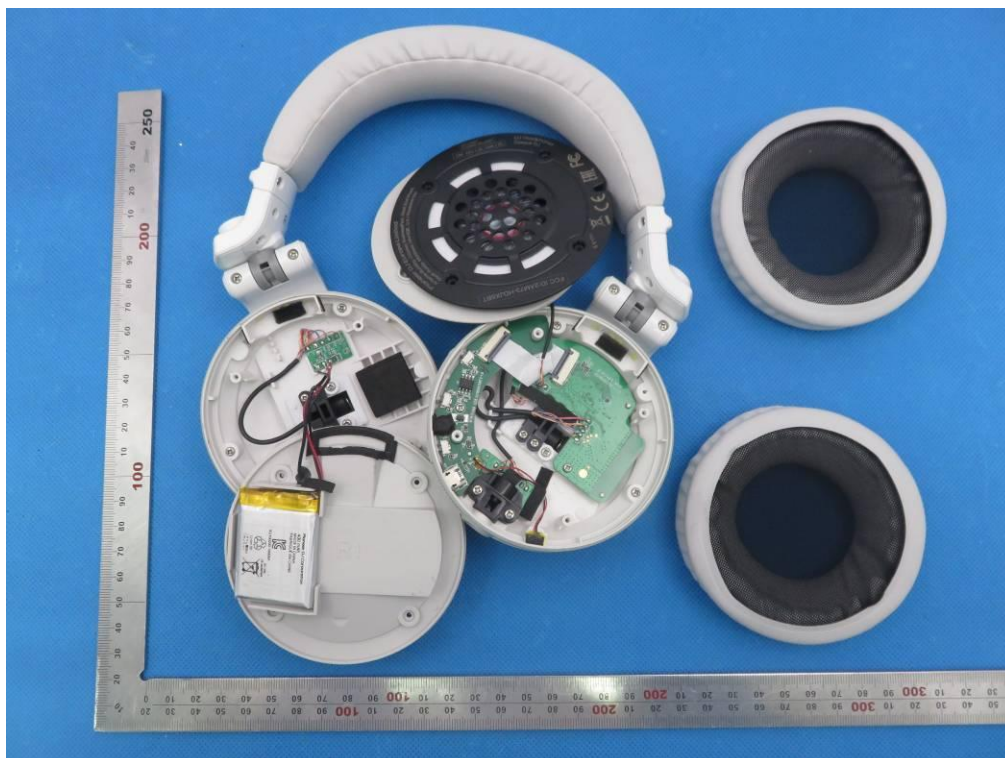


VIEW OF BATTERY




INTERNAL VIEW OF EUT-1

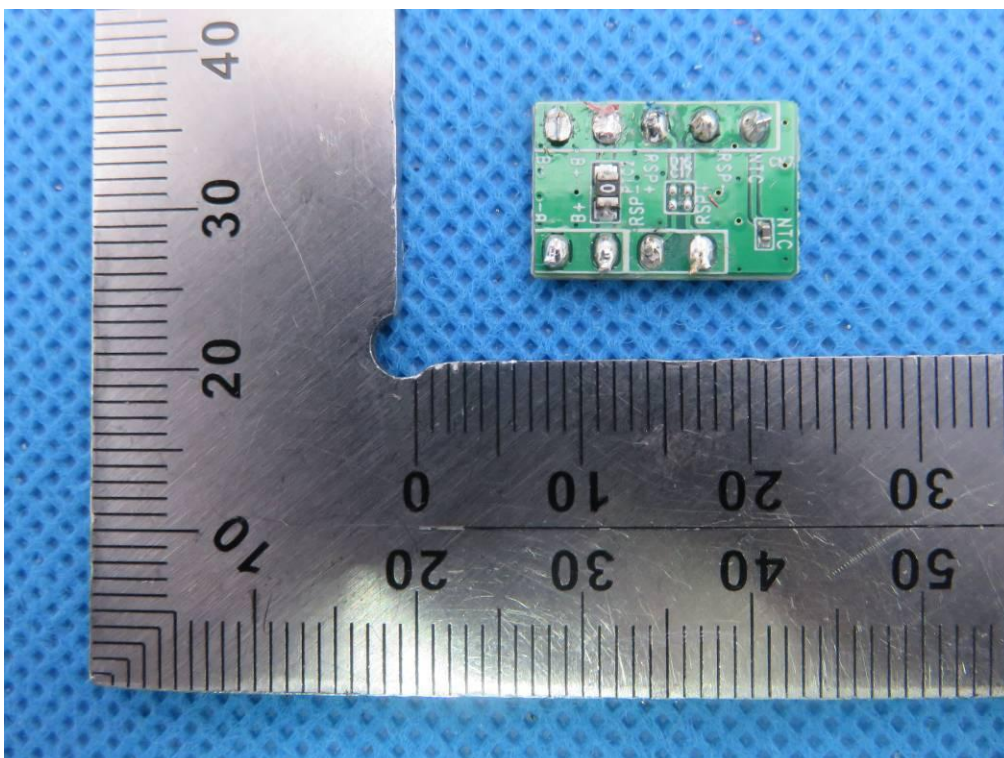


INTERNAL VIEW OF EUT-2

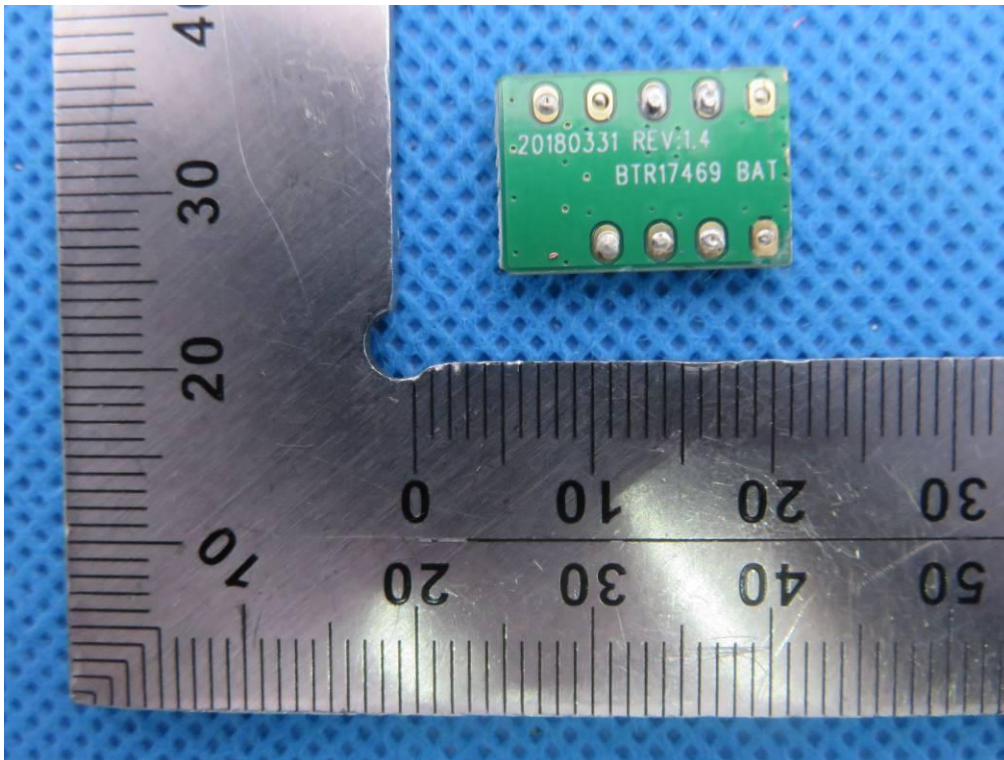


INTERNAL VIEW OF EUT-3

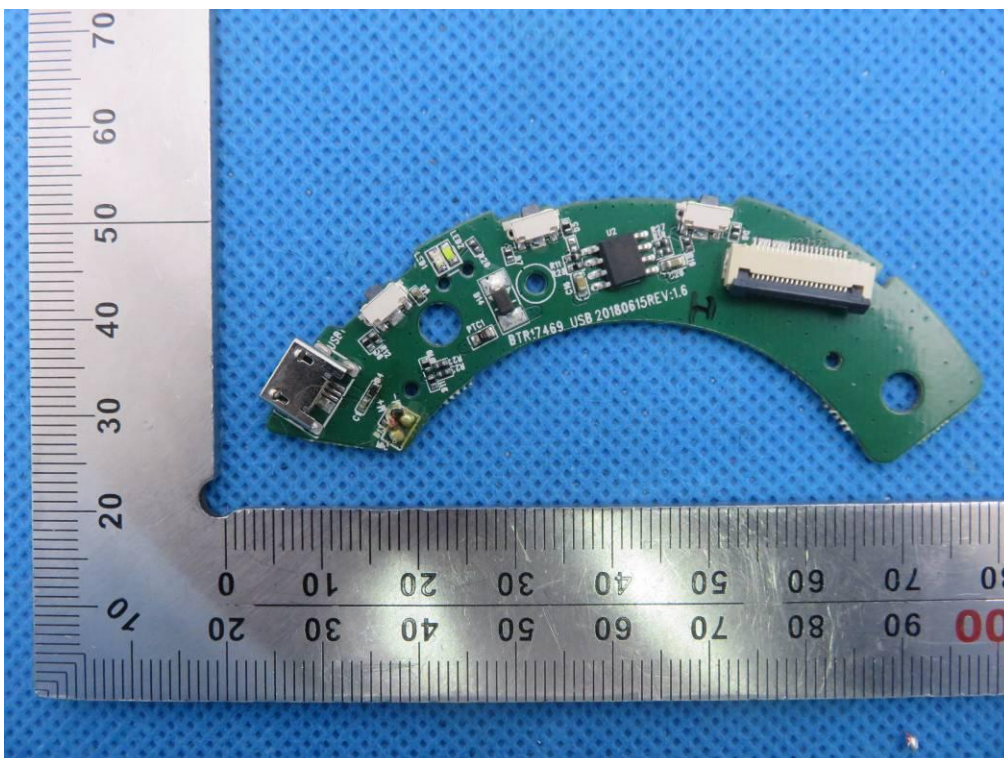


INTERNAL VIEW OF EUT-4

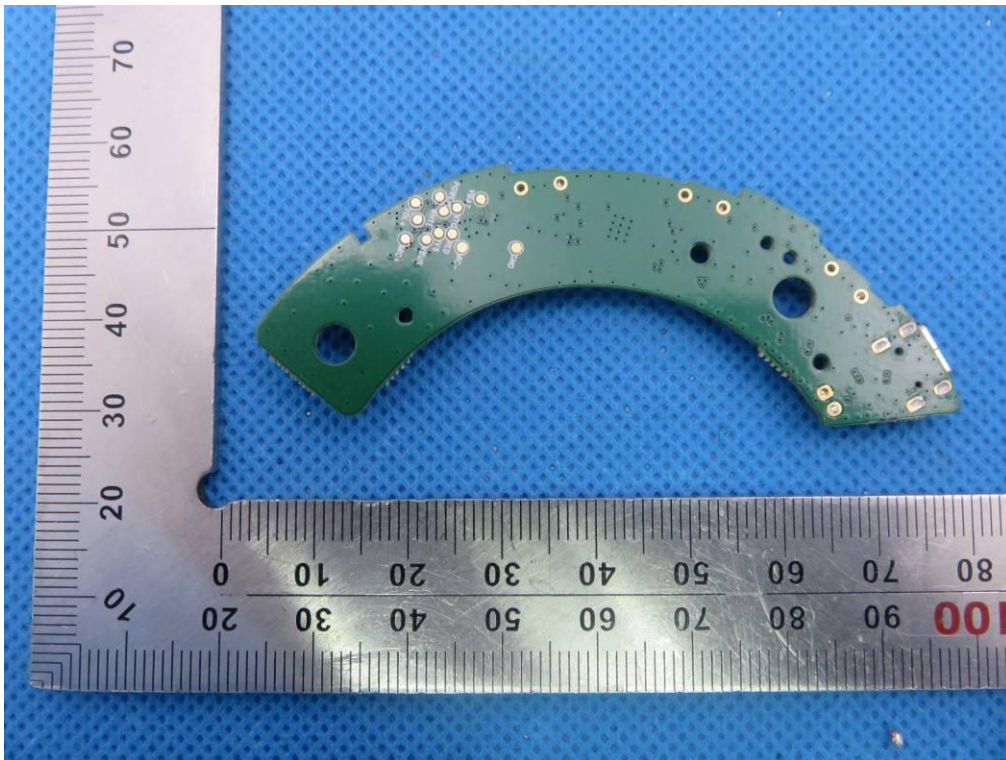


INTERNAL VIEW OF EUT-5

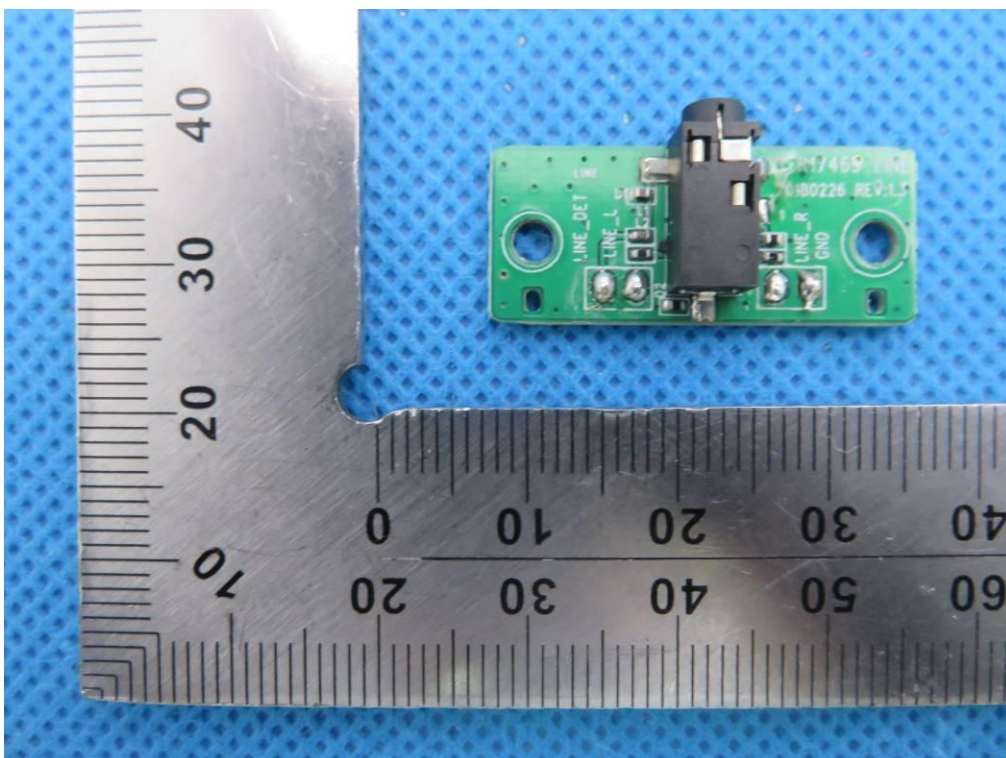


INTERNAL VIEW OF EUT-6

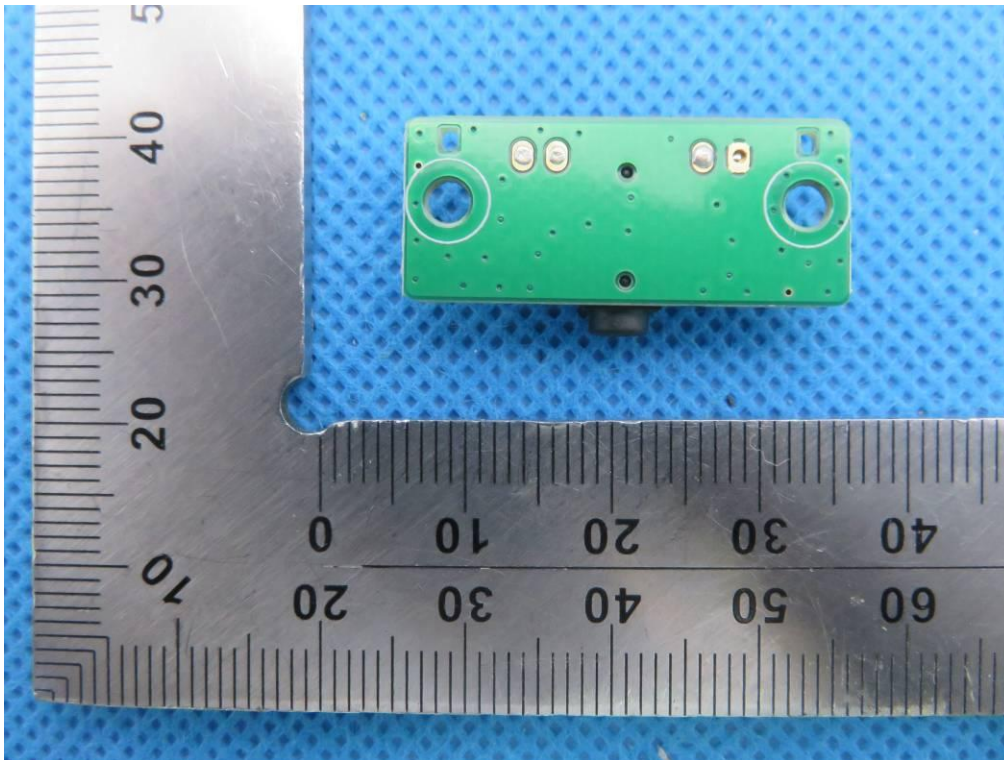

INTERNAL VIEW OF EUT-7

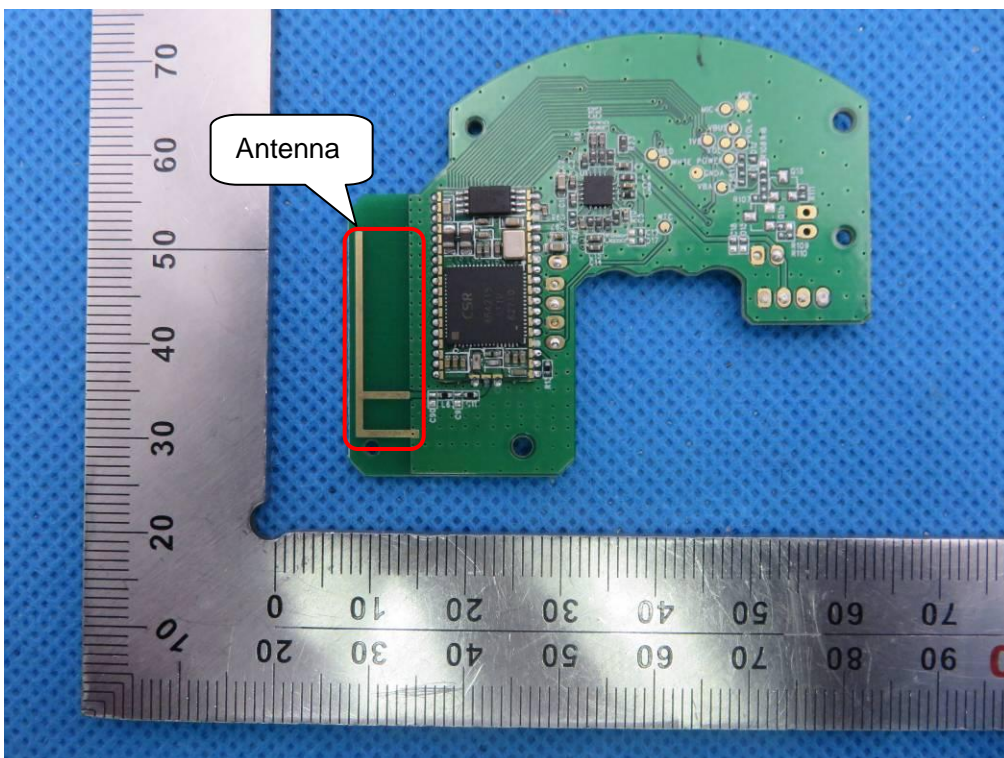


INTERNAL VIEW OF EUT-8

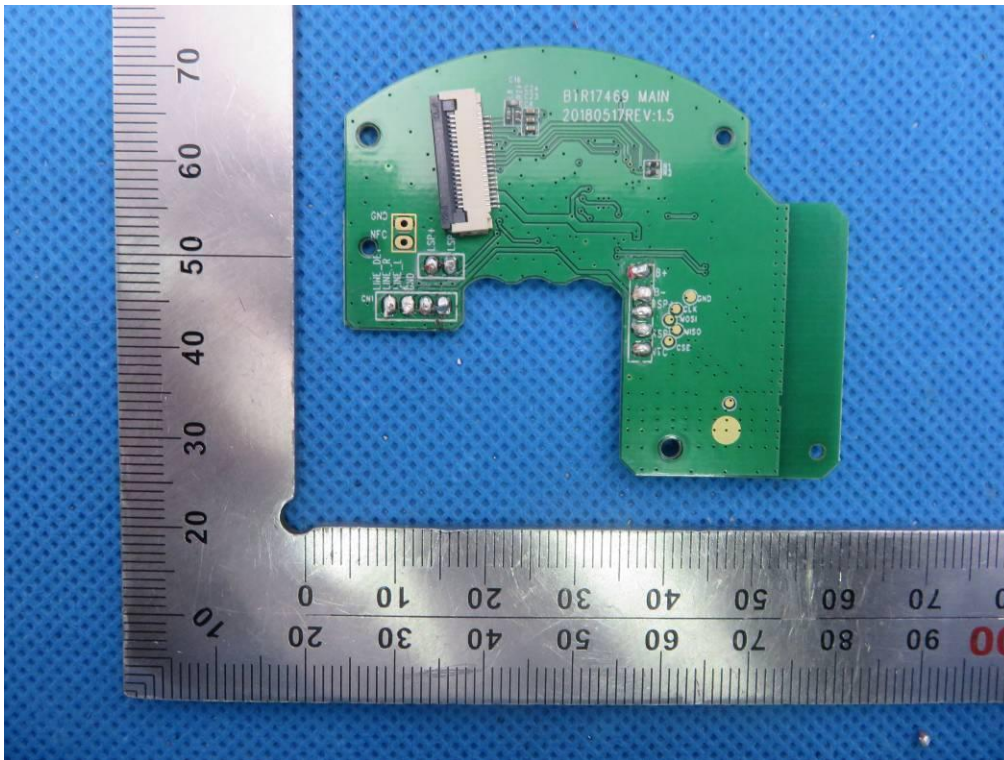

INTERNAL VIEW OF EUT-9




HDJ-X5BT-R
OPEN VIEW OF EUT

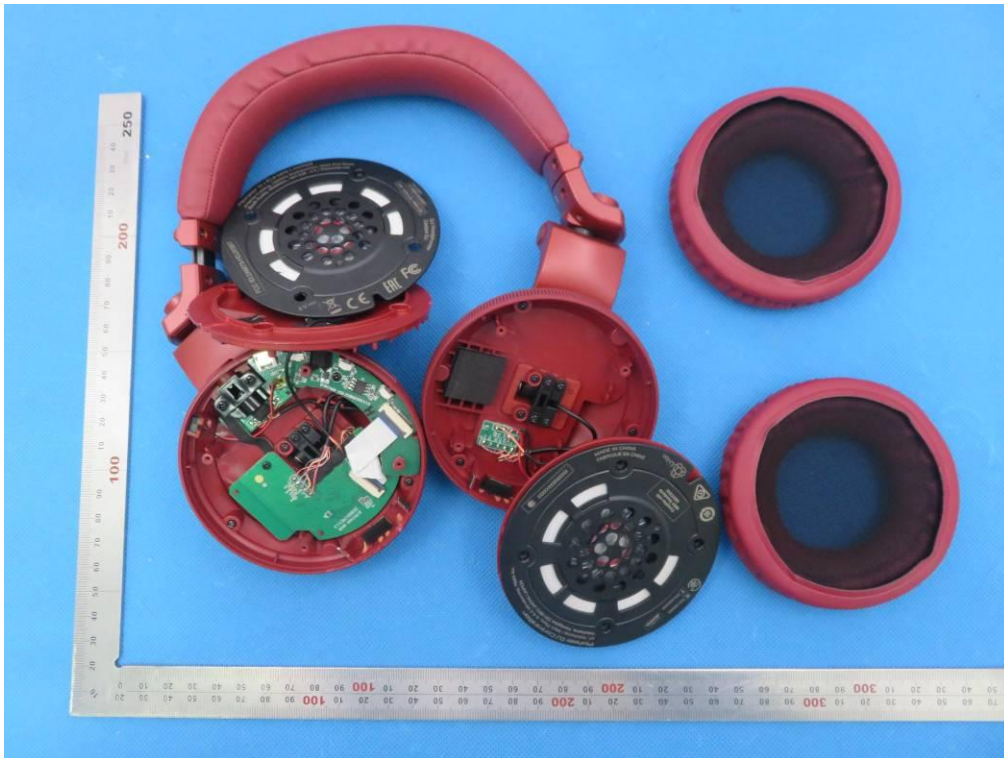


VIEW OF BATTERY




INTERNAL VIEW OF EUT-1

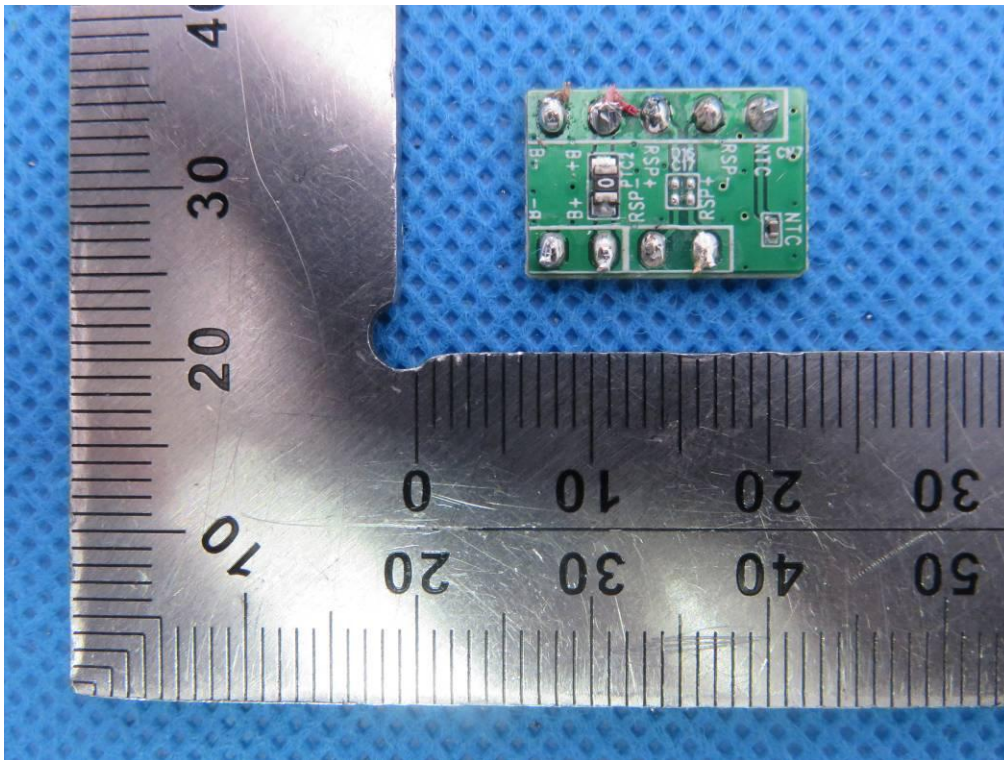


INTERNAL VIEW OF EUT-2

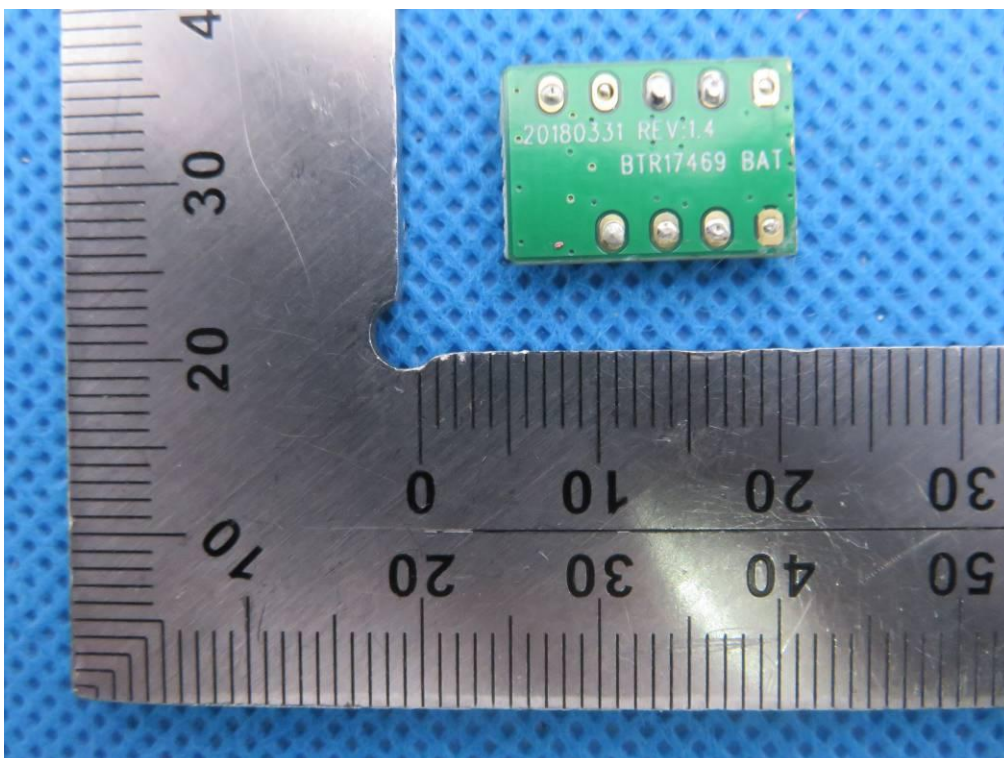


INTERNAL VIEW OF EUT-3

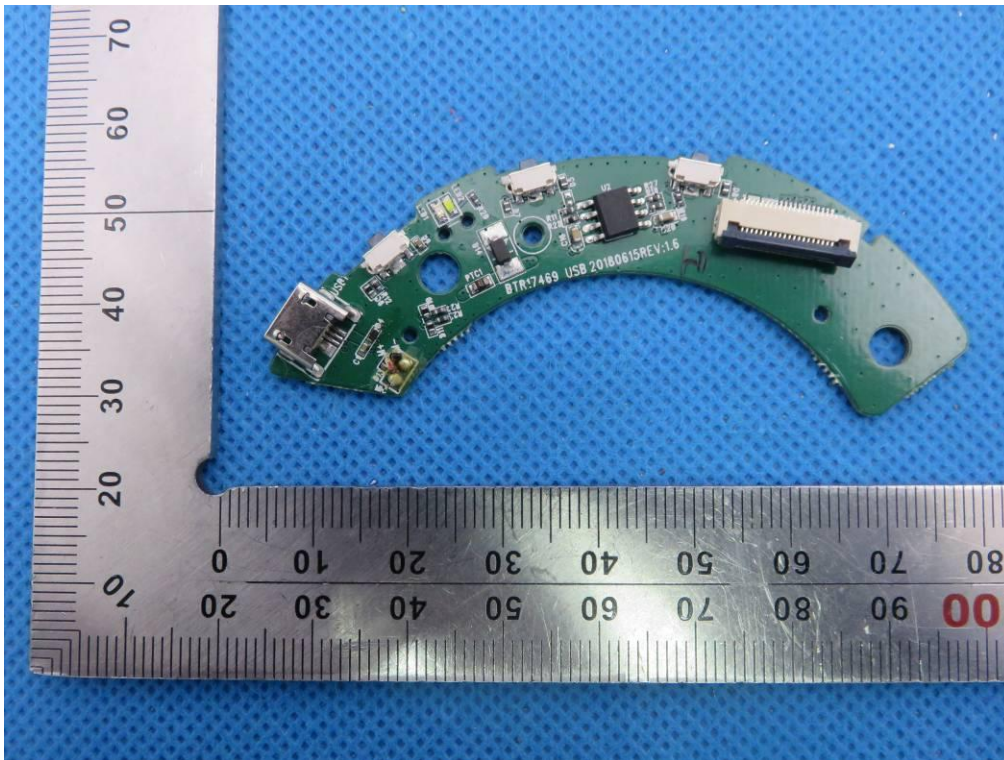


INTERNAL VIEW OF EUT-4

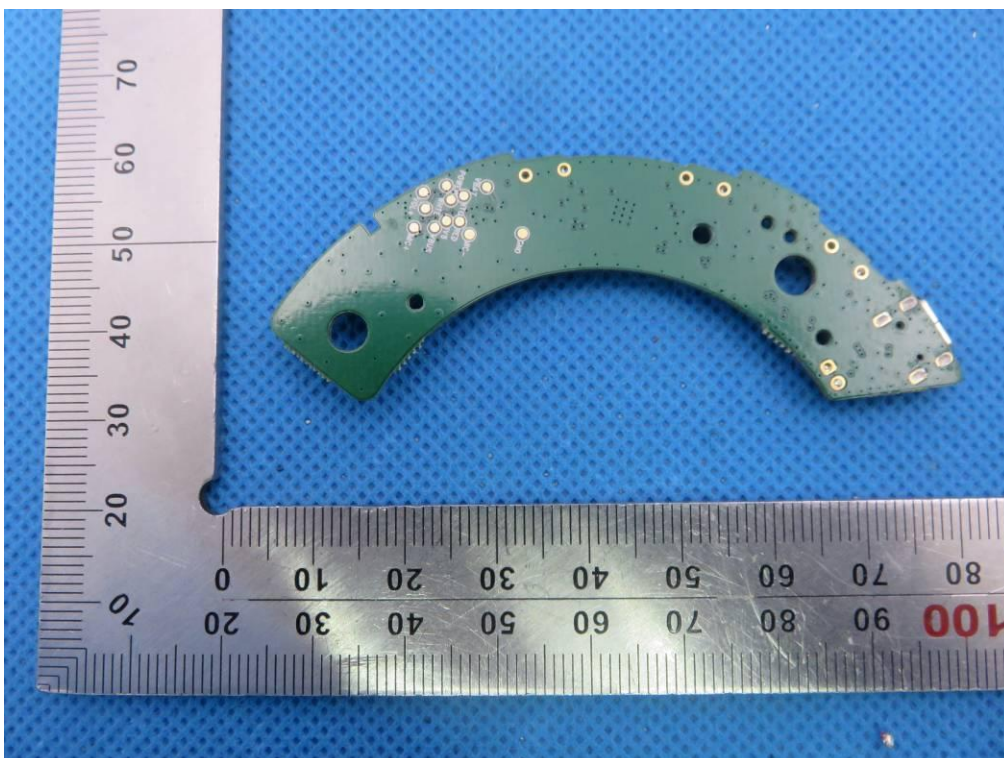


INTERNAL VIEW OF EUT-5

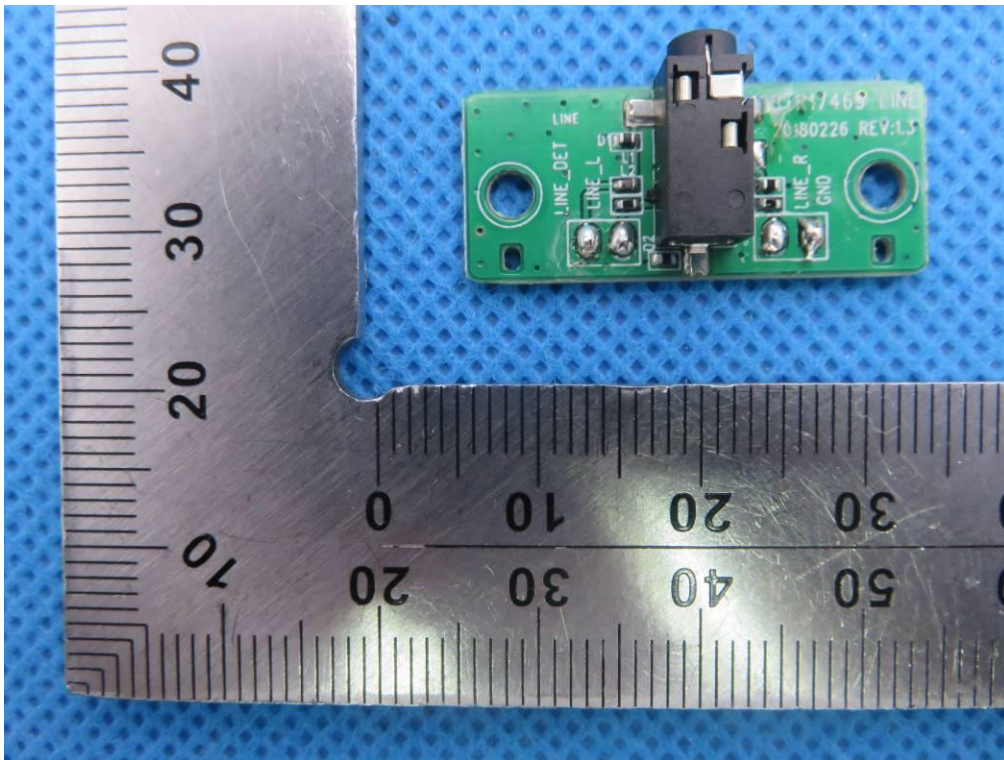


INTERNAL VIEW OF EUT-6

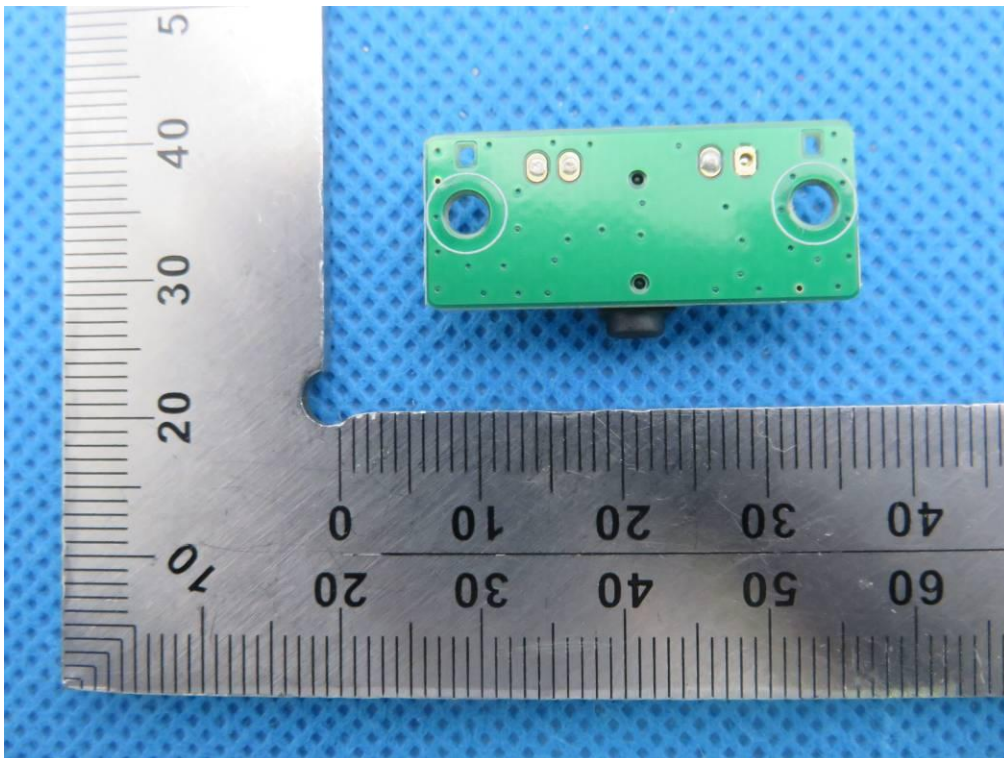

INTERNAL VIEW OF EUT-7

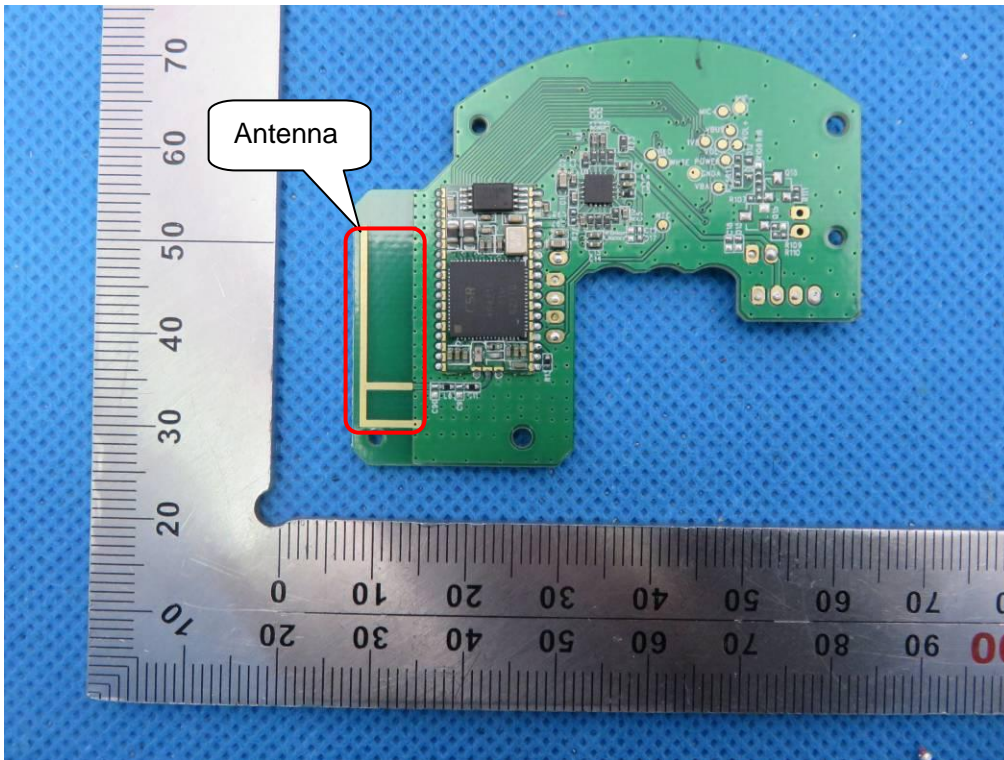

INTERNAL VIEW OF EUT-8

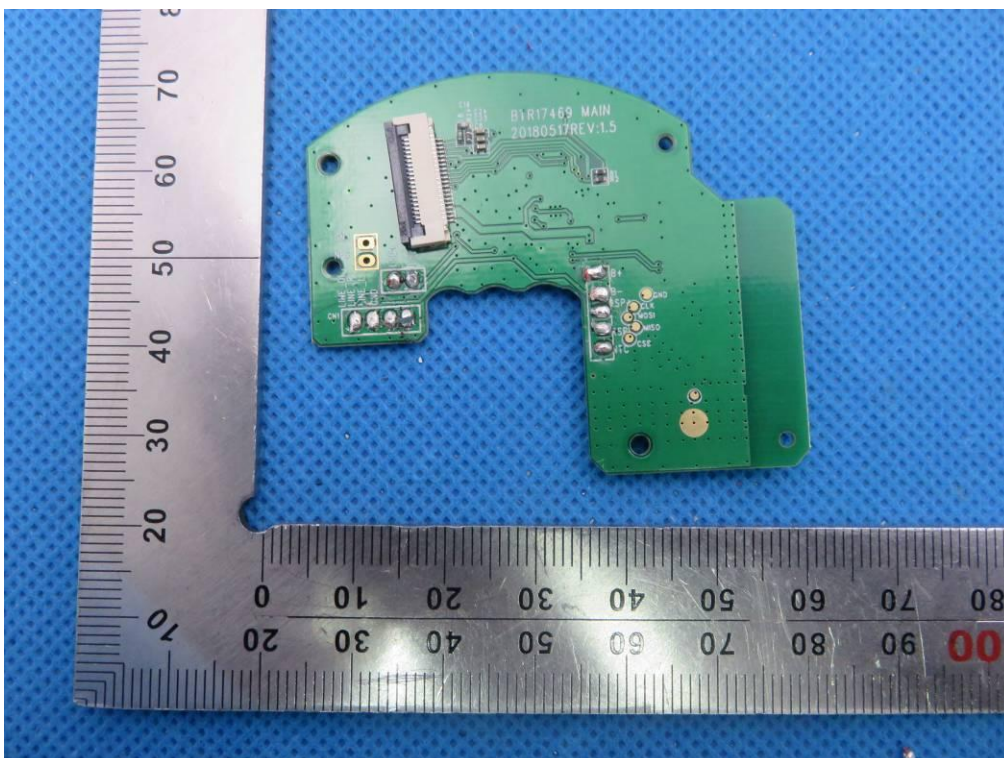

INTERNAL VIEW OF EUT-9

