## Lovehoney x Juno Rechargeable Music-Activated Panty Vibe

## Symbols:

- 4 Speeds
- 7 Patterns
- USB rechargeable

## How to use your

music-activated knicker vibe

- Charge the bullet vibrator by plugging the USB cable into a USB charging point, and the electrical connector into the base of the toy.
- Charge the remote control with the same USB charging cable. The remote will flash with blue and white lights as it charges and show solid light when it is fully charged.
- The bullet vibrator and remote control will take approximately 60 minutes to fully charge and will give you up to 40 minutes of play.
- Slide the bullet vibrator into the silicone case, so that the button shows at the bottom.
   Slip the vibe into the front of your knickers, so that the mound sits snugly against your clitoris.
- To synch your toy to music, pick a tune with plenty of bass, turn it up loud, and place
  the remote control close to the source of the sound. Press and hold the round button
  on the remote control until the blue light flickers, then press and hold the button on
  the bullet vibrator until the light shows.
- To use the toy without music, press the round button on the remote control again so
  that the white light shows. Press it again to explore the 7 patterns. Press the plus
  and minus buttons to adjust the intensity level there are 4 speeds altogether. Press
  the round button on the controller again when on the 7<sup>th</sup> pattern to return to music
  mode.
- You can also use the bullet vibrator without the remote. Press and hold the button on the bullet vibrator until the blue light shows. Press repeatedly to explore the 2 speeds and 6 patterns.
- To turn off your toy, press and hold the button on the bullet vibrator, then press and hold the button on the remote control.
- Use water-based lubricant to enjoy your toy at its best.

- Clean after use with sex toy cleaner and leave to air dry until next time.
- Please note: while the bullet vibrator is waterproof, the remote is not and should be kept dry.

Base:

Made from silicone and ABS plastic. Does not contain latex or phthalates. Water-based lubricant is recommended. 100% waterproof. Sold as an adult novelty. Discontinue use if irritation or discomfort occurs. To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by the use of this product. The shape and appearance of the product inside this package are a trademark and trade dress of Lovehoney Group Ltd. Copyright © 2020. Lovehoney® is a registered trademark of Lovehoney Group Ltd. Made in China for Lovehoney Group Ltd, Bath, BA1 3EN, UK.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.