

Wired & Wireless Charging Station 4 USB Charger + Wireless Charger

Please replace with correct & good product photo



4PQW-6/0887

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Getting Started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Wired & Wireless Charging Station 4 USB Charger + Wireless Charger
- AC power cord
- Instruction Manual

Key Features

- Recharges up to 5 USB devices at a time and reduces clutter by conveniently docking them anywhere in your home, office or hotel.
- Great for charging cell phones, tablets, e-readers, game pads, GPS devices and other USB compatible devices.
- 4 USB Charger output 4.1A Max. (total).
- Wireless Charger output 5W Max.
- Hold 4 devices & 1 wireless charging pad.


IMPORTANT SAFETY INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSE-HOLD USE. WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

WARNING — To reduce the risk of burns, electric shock, fire or injury to persons:

- 1. Read all instructions before using the appliance.
- 2. For indoor and information technology equipment use only.
- 3. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 4. Close supervision is necessary when any appliance is used by or near children or by invalids.
- 5. Unplug the appliance from outlet when not in use and before cleaning. Do not leave appliance unattended when it is plugged in. Keep cord away from heated surfaces.
- 6. Do not operate this appliance with a damaged cord or plug or of the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest service facility for examination, electrical or mechanical adjustment or repair. No repairs should be attempted by the consumer.
- 7. Use appliance only for intended use as described in this instruction. The use of attachments not recommended may cause hazards.
- 8. Clean only with a dry cloth.
- 9. Protect the power cord from being walked on or pinched particularly, and the point where they exit from the apparatus.
- 10. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11. Use on any 100-240 volts, 50/60 hertz AC electric outlet (ordinary house current).

Description of Parts

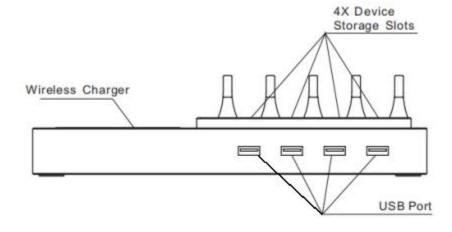

INSTRUCTIONS FOR USE

- Connect the small plug from the included AC power cord to the AC IN Jack on the rear of the product.
- Plug the AC power cord to a standard AC wall outlet having 100-240V, 50/60Hz.
- For USB Charger, insert the USB cable (not included) into one of the USB ports of the unit and the other end of the USB cable to your phone or other USB rechargeable product for recharging.
- For Wireless Charger, place your Qi integrated mobile phone on the wireless charging area for recharging.

Note: Ensure your device is compatible. When the phone is not placed on the wireless charging area correctly, your phone may not charge properly. Wireless charging may not work properly if you have a thick case on your phone. If needed, remove it before placing your phone on the wireless charger.

• When the phone or rechargeable product is fully recharged, remove it from the product.

Care and maintenance

Read the following recommendations before using the device.

- Do not expose the device to liquid, moisture or humidity. This may affect product's internal circuit.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as it may cause to distort certain plastic parts.
- Do not dispose of the device to fire.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fell down the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may cause damage.

Product Specifications:

Input: AC 100-240V 50/60Hz 0.7A

4 USB Charger Output: DC 5V 4.1A Max. (total)

Wireless Charger Output: DC 5V 1A Max.

Dimensions: 9-1/16"L x 3-9/16"W x 2-1/4"H

Weight: 8.9 oz

Holds devices up to 0.5" thick

TROUBLESHOOTING

Problem	Solution
The unit does not charge device once connected.	Please ensure if USB Charging Cable is
	well-connected

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have

been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.