



2199413, WC-24/1022

Universal Wireless Charging Pad



INSTRUCTION MANUAL
PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

- Getting started
- Remove the product from the box.
 - Remove any packaging from the product.
 - Please retain all packaging after you have checked and counted all the parts and the contents against the list.

 
- Package Contents
- Wireless Charging Pad
 - USB cable
 - Instruction Manual

- Key Features
- Convenient and fast charging
 - Wireless charger: Now, charge your phone by placing it on the pad. No need to attach any cable to your phone.
 - Built-in Blue LED indicator for charging
 - Compatible with Qi Integrated phones like iPhone X, iPhone 8/8 Plus, Samsung Galaxy S6/S6 Edge, S7/S7 Edge, S8/S8 Edge, S6 Active, Note 5, Nexus 5/6/7, Nokia HTC, Motorola, LG, Sony and more

- Safety Instructions
- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
 - Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
 - Do not use the unit if it has been dropped or damaged in any way.
 - Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
 - Do not use the unit with wet hands.
 - Do not put objects into any of the openings.

- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.

Description of Parts:



INSTRUCTIONS FOR USE

Charging Instructions

- Connect the USB cable (included) to a power outlet rated DC 5V 2A, and the Micro USB plug to the Micro USB input of the Wireless Charging Pad. Red LED indicator turns on.
- Place your Qi Integrated phone on the non slip pad, and wireless charging of the phone will start immediately with auto-change of Blue LED indicator light intensity.

Care and Maintenance

- Read the following recommendations before using the product. Following these you will be able to enjoy the product for many years.
- Do not expose the Wireless Charging Pad to liquid, moisture or humidity to avoid the product's internal circuit being affected.
 - Don't use abrasive cleaning solvents to clean the device.
 - Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

In case the device doesn't function properly, send it to the store you bought it. The staff will help you to the problem.

Specifications

Input: DC 5V/2A
 Output: DC 5V/1A
 Dimension: Dia. 3-7/8" x 3/8"(H)
 Weight: 2.3 oz or 2.4 oz (-5%~+5%)

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

LIMITED WARRANTY

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of

written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.