



## Warranty Information

User Name		Phone No.	
Address			
Model No.		Mac No.	
Purchase Date		Invoice No.	
Agent Name			
Agent Address			
Agent Phone No.			

## Fault Diagnosis

 
Fault Phenomenon	Possible Causes	Handling Method



## Lingcod TV Box

### User manual


### Ports introduction

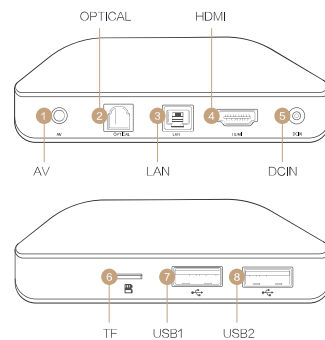

The picture only for reference, take the material subject.

Thanks for choosing Lingcod TV Box,  
please enjoy the excellent audio-visual services of  
No.1 Global Chinese audio-visual platform.

### Product List

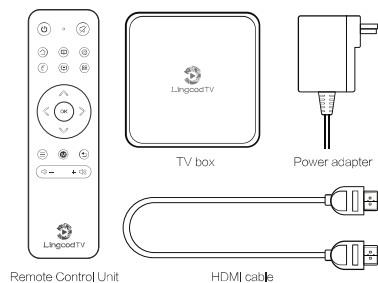 

Remote Control Unit


HDMI cable

The picture only for reference, take the material subject.

### Specifications

 
Product Name	Lingcod TV Box
Model No.	LS5、LH5
Operating System	Android 6.0
Power	5V @ 2A
Working Environment	Working Temperature: 0℃ ~ +45℃ humidity: <90%
	Storage Temperature: -20℃ ~ +45℃ humidity: <95%

### Remote Control Unit 1

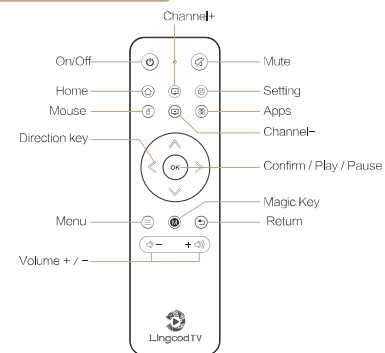


The picture only for reference, take the material subject.

### Remote Control Unit 1

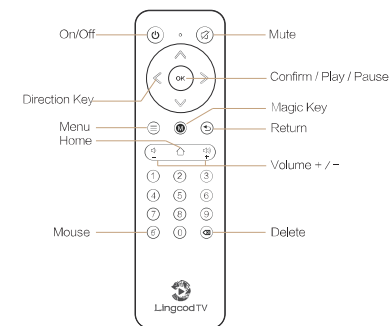 

The picture only for reference, take the material subject.

### Installation introduction

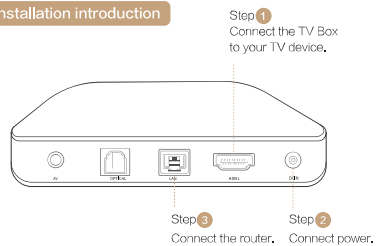 


### Starting Display

1. Turn on the TV and the TV box.
2. Switch the HDMI channel from TV device. Press the "signal", "source" or "input" of the remote controller of TV device.
3. Until the main interface of the TV box is displayed on the screen.

The picture only for reference, take the material subject.

### Apps adding

 Enter the home page, press "OK" of the RCU into application options to choose the one you want, the app icon will be displayed on the home page once adding successfully.



### Apps management

#### Download applications

Lingcod TV Box has installed the commonly used applications. Enter the application, choose the APP you want, then the APP will be downloaded instantly.

#### Apps uninstalling

Enter the apps, press "menu" on the RCU, you can see the edit list. Choose the installed APP to uninstall.

The picture only for reference, take the material subject.

 
### Internet setting

#### Connect to a wired network

Connect the TV box and router with a network cable. Make sure the network connected.

#### Connect to a wireless network

Enter "home page" and Select System Settings> Network Settings> Wireless Network. Select an available Wi-Fi connection.

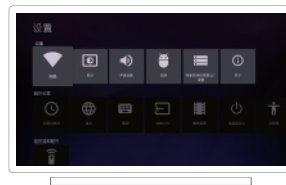

The picture only for reference, take the material subject.

### Magic key setting

#### Choose magic key

Enter "home page" of tv box, choose "magic key" icon and then press "ok" key to start setting.

#### key setting

Enter the setting page of Magic key, use direction key to choose the app as direct interface, and press ok to save.



The picture only for reference, take the material subject.

### Lingcod TV Box

 
#### Live TV

Enter the box home page, choose "live TV" with direction key of RCU and press "OK" to confirm, then you can watch live TV.



#### VOD


Enter the home page of the TV box, choose any VOD modules, you can directly enter the video list, or view the recommended movie details.



Note: The first time you enter the Live/VOD interface, you need to log in Lingcod TV.

The picture only for reference, take the material subject.

### Lingcod TV APP

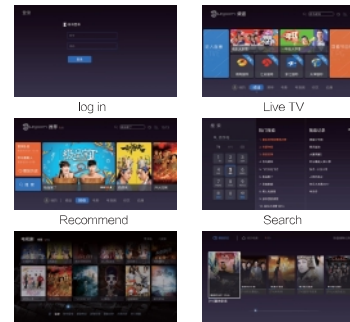 

Movie List

Play history

The picture only for reference, take the material subject.

## Warranty Description

### About after-sales service and warranty instructions

1. Return or replacement is guaranteed in 7 days if the products are not up to the quality standard.
  2. Replacement or repair is guaranteed in 15 days if the products are not up to the quality standard.
  3. 1 year warranty since the purchase date.
  4. Accessories warranty for three months.
- accessories include: remote control / power adapter / HDMI cable.

 
 
 
 
 
### In the following cases, the return and refund will not be accepted.

1. Without any receipt and warranty cards.
2. The serial number or production code has been deliberately altered, defaced or removed.
3. Damage caused by not following the instructions.
4. Damage caused by improper operation, storage or maintenance.
5. Damaged in transport of the customer.
6. Customer self disassembly, repair.
7. Damage due to force majeure factors as earthquake, natural disaster, war and country policy.
8. Due to the expiration of guarantee time.

The final interpretation is owned by Sunway Culture Media Co., Ltd.  
www.zhikashitv.com

## Fault diagnosis

Fault Phenomenon	Possible Causes	Handling Method

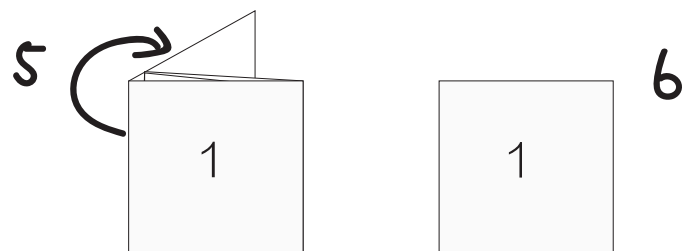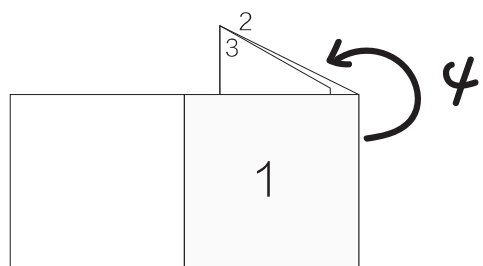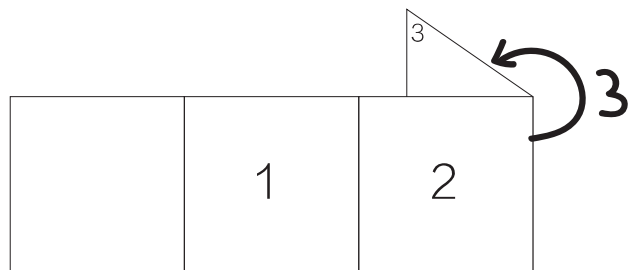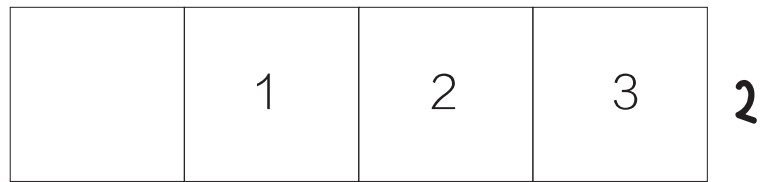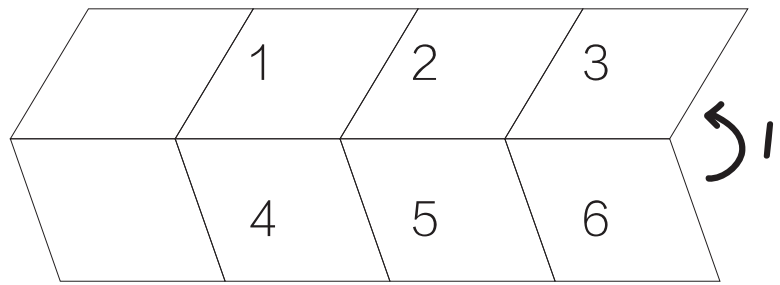

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.