


T50

Car Handsfree Kit

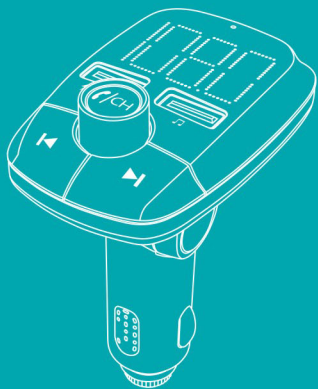

User Manual


Features:

1. Transmit the music from U disk or micro SD card to car stereo via FM signal.
2. Transmit the music of your Bluetooth enabled smart device to car stereo via FM signal.
3. Answer phone calls during driving.
4. 2 USB ports for charging devices.
5. Play lossless music in FLAC / WAV / APE format from U disk or micro SD card.
6. Unique display screen, display car voltage when plugged in.

Specifications:

Bluetooth Version: V4.2
Frequency: 2.402 ~ 2.480 GHz
Effective Bluetooth Range: 5 meters
FM Frequency: 87.5MHz – 108.0MHz
Micro SD card/U disk capacity: Up to 32G

Product Diagram:

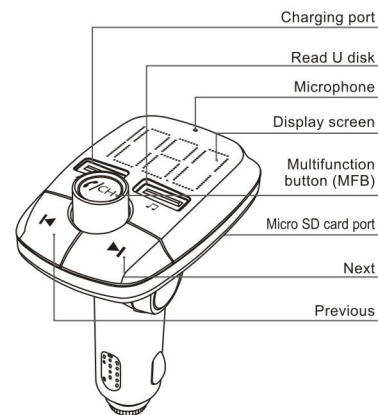

Adjust FM Frequency:

Press the MFB for about 2 seconds, the display flashes means it entered FM frequency adjust mode.

1. Rotate the MFB to increase or reduce frequency.
2. Press the "Next" or "Previous" button to increase or reduce frequency.

Adjust Volume:

Rotate the MFB to increase or reduce volume.

Bluetooth Operation Instruction:

1. Plug the transmitter into the car cigarette socket.
2. The transmitter will power on after you plug it in, the display flashes means it is in pairing mode.
3. Turn on the Bluetooth function of your smart device. Search for Bluetooth devices and select "T50".
4. If pairing is successful, the display will stop flash.
5. Tune the car FM radio to a blank FM station.
6. Tune the FM transmitter into the same frequency with the car FM radio.
7. Open the music player/navigation of your smart device, now it can transmit the phone calls, music or navigation to car stereo system.

-01-

-02-

-03-

Remark:

1. It will connect to the last paired device automatically when turned on next time. (Turn on the Bluetooth of your smart device first, and then turn on the product.)
2. For the best audio quality, please turn the volume of your smart device and FM transmitter into the max level.
3. The signal of any FM transmitter sometimes can be interfered by the surrounded radio or the similar frequency signal thus cause noise, this is normal.
4. If the noise is too loud, please try another blank FM station.

Make/Answer a Call:

The transmitter can make or answer a call after successfully connected to your phone via Bluetooth.

1. Redial the last number: Double-click the MFB.
2. Reject a call: Long press the MFB for about 2 seconds.
3. Answer a call: Press the MFB once.
4. Hang up a call: Press the MFB once.

Music Play/Pause:

1. Play/Pause: Press the MFB once.
2. Next song: Press the "Next" button.
3. Previous song: Press the "Previous" button.

-04-

Playing Music from U Disk/micro SD card

1. Tune the car FM radio to a blank FM station.
2. Tune the FM transmitter into the same frequency with the car FM radio.
3. Insert the U disk/micro SD card into the device, it will automatically detect and play the MP3 / WMA / FLAC / WAV / APE format music.

Music source:

The product plays music from the last connected device, and will memorize it next time. If Bluetooth, U disk, micro SD all connected, long press the "Next" button for about 4 seconds to switch music source. When switch to Bluetooth music, you have to press play button to start the music.

FCC Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

-05-

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

-06-

Correct Disposal Of This Product



(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

-07-