

## **Button Function**

#### 1. MODE:

MODE button is the mode conversion (Bluetooth, TF card, U disk, AUX).

2. ┥ / VOL-

Short press" | < / VOL-", it will be PREVIOUS song ; Long press " I≪ / VOL-" to volume down.

#### 3. ▶ / Led on/off:

Short press the " I / Led on/off " button to pause and play music,Long press the " I / Led on/off "button to turn on the colorful neon lights. allowing you to sing at home and enjoy the KTV atmosphere.

4. ▶▶ / VOL + :

Short press" ►► / VOL+ ", it will be NEXT song;Long press" ►► / VOL+ " to volume down.

5. Music/Orig:

Short press the Music Original button is to cancel the original singer's voice.

## Instructions for use

As you power on, Bluetooth mode is the default. You could search for the bluetooth device named "SC-3075K" on your phone for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the U disk. It will be converted to AUX mode when you insert the 3.5MM audio cable. When insert the TFcard and USB at the same time. press the MODE button to convert the mode.

### Singing instruction

When the speaker is turned on , the wireless microphone is connected to the speaker by default after turning it on. Just turn on the wireless microphone power switch "ON / OFF" and you can sing in any mode of the speaker. When you sing, you can adjust the reverb effect through the "ECH" button of the wireless microphone and adjust the voice volume through the "VOL"button. The volume is adjusted according to your personal preference to achieve the desired singing effect.

When the blue light of the wireless microphone is flashing, it means the microphone battery is too low and needs to be charged.

#### -5-

## Note

1.Please use the 5V/2A charger to charge, do not play music while charging.

2.When the microphone is turned on, Do not point the microphone straight to the speaker to avoid howling.

## Product parameters

Power output: 10W+10W Frequency: 100HZ---18KHZ Drive unit: 3IN\*2 S/N:≥80db Lithium battery: 7.4V / 1500 mAh Materials: Plastic Color box size: 280\*175\*230mm USB port : Support 4G - 32G USB version : Support 2.0/3.0 (File Format : MP3/WMA)

### Warrantv

Basic Warranty Statement

Supersonic Inc.("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit http://www.supersonicinc.com/warranty for additional information.

### Garantía

Declaración básica de garantía Supersonic Inc. ("Supersonic") garantiza este producto al comprador original SOLAMENTE, para estar libre de defectos en materiales y mano de obra baio uso normal. por noventa (90) DÍAS a partir de la fecha de compra original. Se requiere una prueba de compra (recibo). Visite http://www.supersonicinc.com/warranty para obtener información adicional.





AUX

# FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## **RF** warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.