

wireless speaker with multi-color LED lighting





вc

USER'S MANUAL: V60097BT

Important Safety Precautions

When using your Vivitar Wireless Bluetooth Speaker, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
- 2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
- 3. Do not place your speaker on any wet surfaces.
- 4. Do not allow children or the infirm to play with your speaker without adult supervision.
- 5. Do not expose your speaker to excessive heat, flames or fire.
- 6. Always press all buttons or switches carefully. Do not manhandle your speaker.
- 7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
- 8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.

9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.

- 10. Do not drop, puncture or expose your speaker to excessive trauma.
- 11. Your speaker is not intended for commercial use.
- 12. Do not place near objects that generate a strong magnetic field.
- 13. Unplug your speaker when not in use for long periods of time or during lightning storms.

BATTERY WARNING: -The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device. -Do not dispose of in fire or expose to excessive heat. -Do not crist a puncture, incinerate, or short circuit external contacts
-Do not crush, puncture, incinerate, or short circuit external contacts. -Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing your Vivitar Wireless Bluetooth Speaker. You can use your speaker with most smartphones and Bluetooth devices to stream music. In order to get the best results, please read this manual first before using your speaker.

Package Contents


-Vivitar Wireless Bluetooth Speaker. -USB Charging Cable -User's Manual with Warranty Information

Specifications


Bluetooth Specification: V5.3 Working Distance: Up to 10 Meters Speaker Power Output: 10W Charging Input: DC 5V Battery Type: Rechargeable Lithium Battery Charging Time: Approximately 2 Hours Play Time: Approximately 4 hours* "When music is played at 50% volume or lower.

A Quick Look at Your Device

Buttons and Ports

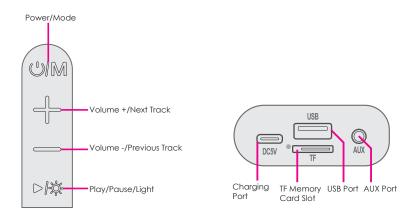

Charging Your Speaker

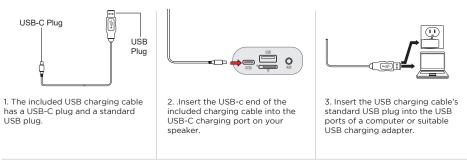

4. Leave your speaker to fully charge before pairing to a Bluetooth device


Pairing Your Speaker with a Bluetooth Device

 Press and hold the power button for approximately 3-4 seconds to power ON or power OFF your speaker. Once your speaker is powered ON it will go into Bluetooth Pairing Mode.



2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60097BT".

Using Your Speaker

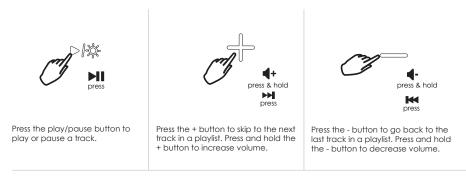



Press the and hold the Light button to change the speaker light.

Modes/TWS Pairing

Your speaker has 5 different music playing modes: Bluetooth mode, TF memory card mode, USB mode, AUX mode, and FM Radio mode. To switch between modes, press the Power/Mode button until your desired music mode is reached.

FM Radio Mode

Use the + and - buttons to navigate through radio channels.

TF Memory Card Mode

Insert a suitable memory card into the TF memory card slot on your device. The speaker will play any .mp3 files it reads.

USB Mode

Insert a USB drive into the USB port on your device. The speaker will play any .mp3 files it reads.

AUX Mode

Insert a 3.5mm AUX cable (not included) into the AUX port. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.

TWS Pairing

If you have two of the same V60097BT speakers, you can pair them together to play music in sync. When both speakers are on Bluetooth mode with one speaker connected to a smartphone, double press the Power/Mode button on one speaker. A tone will ring to indicate that both speakers have successfully paired.

To disconnect TWS pairing, double press the Power/Mode button again.

Maintenance and Care

-Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.

-Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.

-When your speaker is not in use, it should be stored in a cool, dry place.

-Never tug or yank on either USB charging cables while they are connected to your speaker. Connect and disconnect these cables as carefully as possible.

-Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture or water.

-Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used be in portable exposure without restriction.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information: Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

©2023 Sakar International 195 Carter Drive Edison, NJ 08817 Support: 800 592 9541 www.vivitar.com