

5.0


CONFIDENTIAL ARTWORK

DESIGNER: JERMAINE BLUM

PRODUCT: NOISE CANCELLING HEADPHONES

SPEC INFORMATON

-  DIE LINE
-  DIE CUT
-  DIE FOLD

 0-100% K

PACKAGED TYPEFACES | FONT

OSWALD DEMIBOLD
OSWALD MEDIUM
OSWALD EXTRA LIGHT
HELVETICA
HELVETICA DOLD

CROP SIZE OF DIELINE

480mm x 135mm

PAPER | SUBSTRAIT

SCALE: 100%
SIZE: W H
PAPER STOCK: 80g GlossPaper
INK: CMYK



 

NOTES & REFERENCES

ACCORDION FOLD



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

BUTTON OPERATING INSTRUCTIONS

-  LONG PRESS "M" BUTTON TO TURN ON/OFF ANC FUNCTION WHEN THE ANC FUNCTION TURN ON, THE GREEN LIGHT IS ON STEADILY
-  SHORT PRESS: LAST TRACK; LONG PRESS: VOLUME DECREASE
-  SHORT PRESS: NEXT TRACK; LONG PRESS: VOLUME INCREASE
-  LONG PRESS 3 SECONDS TO POWER ON THE HEADPHONE; SHORT PRESS: PLAY/PAUSE
INCOMING CALLS: SHORT PRESS TO ANSWER, LONG PRESS TO REJECT
DOUBLE CLICK TO REDIAL LAST NUMBERS IN YOUR CALLING HISTORY.


LED INDICATOR

THE RED/BLUE FLASH QUICK MEANS THAT THE HEADPHONE READY TO PAIR, WHEN THE HEADPHONE IS PAIRED TO THE DEVICE, THE BLUE LIGHT WILL FLASH EVERY 5 SECONDS.

WHEN THE ANC FUNCTION TURNS ON, THE GREEN LIGHT IS ON STEADILY. WHEN USING CHARGING CABLE TO CHARGE THE HEADPHONE, THE LED LIGHT UP AND HOLD RED.

THE LED TURN OFF WHEN THE HEADPHONE IS FULL CHARGED. WHEN LOW BATTERY, THE RED LIGHT FLASH EVERY 5 SECONDS AND THERE IS SOUND 'LOW BATTERY'.

HOW TO PAIR

LONG PRESS THE  BUTTON FOR 3 SECONDS TO POWER ON THE HEADPHONE, THE LED LIGHT WILL FLASH RED/BLUE. ACTIVATE YOUR BLUETOOTH IN YOUR DEVICE, SELECT "NC 1" TO PAIR, IF NEED A PASSWORD, PLEASE ENTER 0000.

AUX MOLD

POWER ON THE HEADPHONE, CONNECT THE HEADPHONE WITH THE DEVICE VIA AUX CABLE, SUPPORT SMARTPHONE/MP4/MP3/CD/TABLETS ETC.

FREQUENCY: 20HZ - 20KHZ

CAPACITY: 250MAH

PLAYING TIME: 5HOURS

CHARGING TIME: 2H

BT VERSION: 5.0

DISTANCE: 33FT

CHARGING VOLTAGE AND CURRENTS

EARBUDS: 3.7V/250MAH

Shenzhen Ground Enterprises Co., Ltd
Room607, Building F, MingYueHuaDu, Gonghe, Industrial Rd, Xixiang,
Bao An District, Shenzhen, China

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.