

REDMOND

Electric Kettle


SkyKettle RK-G200S-A

User manual



CONTENTS

Technical Specifications.....	7
Package Includes	7
Parts of the Appliance	8
I. PRIOR TO THE FIRST USE.....	8
II. APPLIANCE OPERATION.....	8
Ready for Sky Technology.....	8
Bluetooth function	9
Water Boiling	9
Water Heating Without Boiling.....	9
Temperature maintenance mode	10
Disabling audible signals.....	10
Safety Systems.....	10
III. CLEANING AND MAINTENANCE	10
IV. BEFORE CONTACTING SERVICE CENTRE.....	11

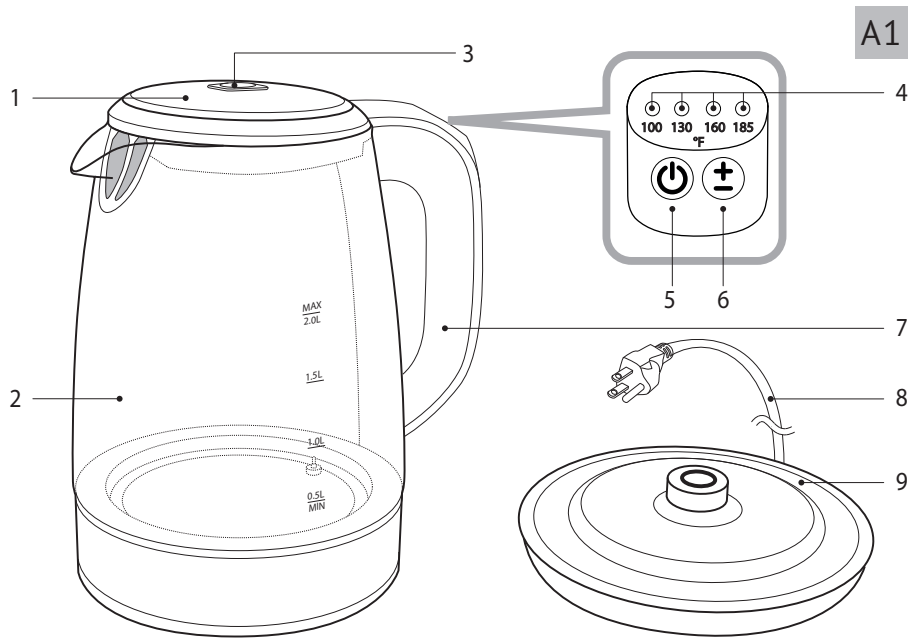



Carefully read all instructions before operating the unit and save them for future reference. By carefully following these instructions you can considerably prolong the service life of your appliance.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be taken including the following:

READ ALL INSTRUCTIONS

- Do not use the appliance for other than intended use or specified purposes. Failure to follow product

instructions may result in damage that will not be covered by the warranty. The manufacturer is not responsible for the consequences of improper use.

- Before installing the appliance, ensure that its voltage corresponds with the supply voltage in your home (refer to the specifications on the appliance rating plate or technical data). Using a different voltage may result in fire, accident or damage to the appliance.
- When using the extension cord, ensure that its voltage is the same as specified on the appliance. The appliance must be grounded. Ensure that it is connected to a properly grounded power outlet. Failing to do so may result in electric shock. Use only grounded extension cords.

CAUTION!

- Appliance runs hot while operating. Do not touch the housing while the kettle is operating. Do not lean over the appliance when the lid is on to avoid scalds.

- Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts. Never handle the plug with wet hands. Do not pull power cord to disconnect from the outlet; instead, grasp the plug and pull to disconnect.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. Damaged cord may cause a shock, fire, or lead to a failure that will not be covered by the warranty.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Any kinds of modifications or adjustments to the product are not allowed.

All the repairs should be carried out by an authorized service repair center.

- Never operate the appliance on soft surfaces.
- Do not cover the unit with any cloth or material during operation. Failure to do so may result in overheating or malfunction.
- Kettle may be used only with a specially designed base (included).
- Do not use outdoors.
- Follow cleaning and general maintenance guidelines when cleaning the unit.
- To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquids. Do not wash the device under running water.
- Close supervision is necessary when any appliance is used by or near children.
- This appliance can be used by children aged 8 years and older and people with reduced physical, sensory, or mental capabilities or lack of experience

and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance, its cord, and all packaging materials out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children without supervision.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not place the appliance on or near a hot gas, an electric burner, or in a heated oven.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

CAUTION!

- If a longer detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. Using different voltage may result in a fire or other accident, causing the device damage or shorting the circuit.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 - If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- WARNING!**
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Technical Specifications

Model.....	SkyKettle RK-G200S-A
Power.....	2200 W
Voltage.....	120 V, 60 Hz
Electrical safety.....	class I
Capacity.....	1,9 Qt / 2 L
Housing material	glass, plastic
Auto shut-off:	
• upon boiling	
• when empty	
• when removed from base	
Type of control.....	electronic, remote (Ready for Sky)
Data transmission protocol.....	Bluetooth v4.0
Devices enabled:	
Supported operating systems	iOS, Android
Heating temperature selection.....	100, 130, 160, 185, 210°F (40, 55, 70, 85, 100°C)
Temperature maintenance	available
Operation indication.....	LED, audible
Heating element.....	enclosed
Rotation on base.....	360°
Control circuitry and temperature sensor.....	STRIX®
Power cord storage compartment.....	available
Overall dimensions	9 × 8 × 6 in (225 × 200 × 155 mm)
Net weight	12 lb ± 3% (1.1 kg ± 3%)
Power cord length	12.5 ft (0.75 m)

Package Includes

Electric kettle	1 pc.
Electric kettle base	1 pc.

User manual	1 pc.
Service booklet.....	1 pc.

In accordance with the policy of continuous improvement, the manufacturer reserves the right to make any modifications to design, packaging arrangement, or technical specifications of the product without prior notice.

Parts of the Appliance (scheme A1, p. 3)

1. Lid
2. Glass housing with water level graduated scale
3. Lid release button
4. Water heating temperature indicators
5. ⏻ button – to enable/disable kettle
6. ⊕ button – heating temperature selection
7. Handle
8. Power cord
9. Base with power cord storage compartment

I. PRIOR TO THE FIRST USE

Carefully take the appliance and its detachable parts out of the package. Remove all wrapping materials and stickers except for the serial number identification sticker.



No serial number identification sticker on the appliance automatically disables the user's right to aftersales service.

After the appliance transportation or storage at low temperature keep it at room temperature for at least two hours before plugging in.

Wipe the appliance housing and base with damp cloth and let it dry. Please, make sure there is no water in the appliance control circuitry and on its base.



It is recommended to boil water in the kettle a few times before the first use to get foreign smell out and disinfect the appliance.

II. APPLIANCE OPERATION

Fix the kettle with the base to the dry, solid, horizontal surface. Ensure the escaping steam does not fall on wallpaper, decorative coats, electric units and other items, which can be damaged by steam and high temperature.

Unwind the power cord to the desired length. Put the excessive part into the compartment located on the base bottom. If necessary use the extender of a suitable power (no less than 2.5 kW).

Ready for Sky Technology

The Ready for Sky technology enables to use the software app of the same name to control the appliance remotely from a smartphone or tablet.

1. Enable the Bluetooth function on the electric kettle (see "Bluetooth function").




The remote control of the Kettle SkyKettle RK-G200S-A is only possible when the Bluetooth function is on.


2. Download the software from the App Store or Google Play (depending on your operating system) onto your smartphone or tablet.



For the minimum supported OS version, see the company's official website www.redmond.company or the application description at the App Store and Google Play.


 
3. Start the Ready for Sky app, create an account, and follow the prompts appearing on the screen.
4. To the standby mode press and hold down  button until three audible signals is heard. The temperature value indicators will light up alternately during the connection process. After the connection is made the appliance will make three short audible signals.

i *If within 30 seconds the connection won't be made, the appliance will make two short audible signals and switch to the standby mode.*

5. To disable remote control press and hold  until the longer sound signal. The temperature value indicators will flash when the connection is broken.

i *To provide a stable connection, your mobile device should be located no more than 49 ft (15 meters) away from the appliance.*

Bluetooth function


1. With the power off, press and hold down the  and  buttons on the control panel of the Kettle, connect the power supply.
2. When Bluetooth is turned on, the indicators will light up alternately from right to left. After the connection is made an audible signal will be heard and appliance will switch to the standby mode.
3. When Bluetooth is turned off, the indicators will light up alternately from left to right. After the disconnection is made an audible signal will be heard and appliance will switch to the standby mode.

Water Boiling


1. Remove the kettle from the base. Press the lid release button.

2. Pour water into the kettle, water level should be between the MIN and MAX points on the scale. If water level is higher than MAX point, the boiling water may be splashed. In case of water undersupply the appliance may be switched off in advance.



STOP *ATTENTION! The unit is meant only for water heating and boiling.*

 
3. Close the kettle lid and set the kettle to the base. The appliance will be operated only if it is properly fixed.
4. Plug in the appliance. The heating temperature indicators will flash, the appliance will switch to the standby mode.
5. Press . A short audible signal will be heard, water heating process will be started, the inner housing illumination will be enabled.


i *The flask illumination will change the colour during heating.*

6. After water comes to a boil three audible signals will be heard, the flask illumination will go out, the appliance will switch to the standby mode (no indicator light).
7. To interrupt water heating process, press  again or remove the kettle from the base.

Water Heating Without Boiling



1. To heat water without boiling to 100, 130, 160, 185°F (40, 55, 70, 85°C) in the standby mode select the necessary temperature using  (the indicator will light up next to the selected value), press .

i *If the temperature in the kettle is higher than the adjusted heating temperature three audible signals will be heard after pressing , the appliance will switch to the Keep Warm mode.*

2. After the end of water heating the appliance will make three short audio signals, the flask illumination will go out, the appliance will switch to the Keep Warm mode (the indicator of the maintained temperature value is lit).
3. To interrupt the Keep Warm mode press  or remove the kettle from the base.


Temperature maintenance mode

This mode provides maintenance of the selected temperature (100, 130, 160, 185°F) (40, 55, 70, 85°C) for 12 hours. If the temperature drops lower than the selected value, the heating element will be automatically enabled. Water is not reboiled. At the end of the process, the appliance switches to the standby mode.

To enable the Keep Warm mode during boiling select the necessary temperature using  (the indicator will lit up next to the selected value). To disable the mode during boiling press , until the temperature indication goes out.

Disabling audible signals

To disable and re-enable audible signals in the standby mode press and hold down  for several seconds.

 When re-enabling the audible signals the appliance will make a short audible signal.

Safety Systems


- The kettle is equipped with the system of auto shut-off upon boiling or removing from the base.
- In case of water shortage the automatic overheat protection turns off the kettle. Let the appliance cool down, thereafter it will be ready for operation.

III. CLEANING AND MAINTENANCE

Before cleaning unplug the appliance and let it cool down.

 *DO NOT immerse the appliance, its base, plug, or power cord in water or wash it under running water!*

ATTENTION! Before use the appliance, please, make sure that its electric contacts are dry.

 *DO NOT use a sponge or tissue with hard or abrasive surface, any chemically aggressive substances, or any other agents which are not recommended for cleaning items that come into contact with food.*

Regularly wipe the kettle housing and base with a damp cloth. Let the kettle and base dry thoroughly before use.

While in operation scale deposits may form on both the heating element and the housing inner walls of the appliance depending on water type being used. Use special nonabrasive cleaning substances for kitchen utensils and appliances. Follow the product application instructions. Thoroughly wash the appliance with water after cleaning and wipe with a damp cloth.

Before repeated operation or storage clean and completely dry all parts of the appliance. Keep the appliance in a dry, ventilated place, far away from heating appliances and out of direct sunlight. During transportation and storage, do not expose the device to mechanical stress, which can lead to damage of the device and/or violation of the package integrity.

It is necessary to keep the device package from water and other liquids.

IV. BEFORE CONTACTING SERVICE CENTRE

Problem	Possible cause	Solution
The appliance does not switch on	No power supply	Connect the appliance to a properly working electric socket
Early switch-off	There are scale deposits on the heating element	Descale the heating element (see 'Cleaning and Maintenance')
Kettle switches off in a few seconds	There is no water in the kettle, boil-dry protection system has gone off	Unplug the appliance, let it cool down. Fill the kettle up above MIN mark
Plastic smell during use	Appliance is new, the smell is coming from protective cover	The smell will disappear after few uses
Synchronization attempt failed	Bluetooth function on the mobile device is disabled	Enable Bluetooth function on the mobile device
	Ready for Sky app on the mobile device is deactivated	Run the Ready for Sky app on the mobile device
	Sync devices are too far	Ensure devices are located within 49 ft (15 meters) from each other

The packaging, user manual and the device itself may not be treated as household waste. Instead, it shall be taken to the applicable collection point for the recycling of electrical and electronic equipment.

Bluetooth is the registered trademark of Bluetooth SIG, Inc.
App Store is the service mark of Apple Inc., registered in the USA and other countries.
Google Play is the registered trademark of Google Inc.

Manufacturer: NINGBO KECHENG ELECTRIC MANUFACTURE CO.,LTD.

Address: No.588 Cui ping road , Henghe town , Cixi city , Zhejiang , 315318, China.

© REDMOND. All rights reserved. 2019.

Reproduction, transfer, distribution, translation or other reworking of this document or any part thereof without prior written permission of the legal owner is prohibited.