

 
Halten Sie die Ein / Aus-Taste im ausgeschalteten Zustand 5-6 Sekunden lang gedrückt, um den Kopplungsmodus direkt zu aktivieren.

Dans l'état d'arrêt, appuyez longuement sur le bouton d'alimentation



Nello stato di spegnimento, premere il pulsante di accensione circa 5 o 6 secondi per accedere la modalità di accoppiamento.

シャットダウン状態で電源ボタンを5-6秒間長押しすると、直接にベアリ




FOR MORE INFORMATION PLEASE VISIT

WD5M

# (5) Play/Pause/Answer/Hang Up/Reject


Play / Pause / Réponse / Raccrocher / Rejeter Reproducir / Pausa / Contestar / Colgar / Rechazar プレー/一時停止/通話に応答/通話終了/通話拒否

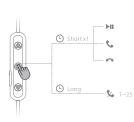




#### Volume Control / Music Control

 Contrôle de Volume / Contrôle de la Musique Control de volumen / Control de la música



# Charge Battery

 

Bluetoothボタンをオンにします。

#### Correct Disposal of This Product

(Waste Electrical& Electronic Equipment)
This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of

Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

#### Fcc Statement

Operation is subject to the following three conditions:

(3) This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### Note:

a Class 8 digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses interference in a resource interference in the equipment generates, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

- Reorient or relo cate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority

#### ▲ Notification

1. Please fully charge it if it was going to be lain idle for a long time and place it in a cool and dry place. Please recharge it each 2 months for

2. Please fully charge it for the first use.

## ▲ Benachrichtigung

t. Wenn Kopfhörer für lange. Zeit nicht verwendet wird, laden Sie bitte es voll auf und bewahren Sie es an einem kühlen und trockenen Platz. Bitte Jaden Sie es alle 2 Monate zur Lagerung auf.

### ▲ Notificación

1. Por favor, cargarlo completamente si iba a quedar inactivo or un largo

2. Por favor, carque completamente para el primer uso.

#### ▲ Notificazione

1. Si prega di caricarlo completamente se stava per essere rimasto

2. Si prega di caricarlo completamente per il primo utilizzo.

# ▲ Notification

Neuillez le charger complètement s'il allait rester inactif pendant un certain temps et le placer dans un endroit frais et sec. Veuillez le

2. Chargez-le complètement lorsque vous l'utilisez pour la première

#### ▲ お手入れ方法と注意事項

短時間使用しない場合、本製品を予め充電してください。乾燥で涼しい場所 で保存してください。また、2ヶ月に一度に満充躍してください。

2. 初めて使用する前に、本製品を満充電してから使用してください。

**Patozon** 

尺寸: 70 X 100 (MM)

材质及工艺: 128g 铜版纸 覆哑膜

装订方式: 折页 印刷颜色: 四色印刷 设计师: Fanny 修改

日期: 2018-05-29

本品牌及其所使用的标志、名称、图像以及所有内容设 计,其版权均为本公司所有,未经授权任何组织、个人、 商业团体不得擅自使用、翻印,本公司保留追究其法律 责任的权利!

备 注: