


尺寸: 60x95(mm)

材质: 128g 哑粉纸 双面四色印刷+专色 (PANTON 2347C)

装订方式: 七折页 (风琴折)




X4.0


BMBH143C
Bluetooth Headphone

For More Information Please Visit
www.xmpow.com


1 Device and Accessories




X4.0 Bluetooth Headphone



3.5mm Audio Cable x 1

 


USB Charge Cable x 1



User Manual x 1

2 Instructions

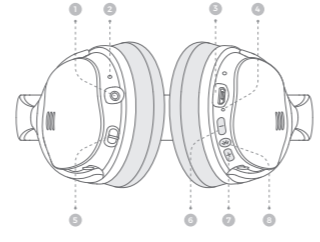

- 1 3.5mm Audio Connector
- 2 ANC Indicator Light
- 3 Micro USB Charging Port (cable included)
- 4 Led Light Indicator
- 5 Active Noise Cancel Button (ANC)
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18
- 19
- 20
- 21
- 22
- 23
- 24
- 25
- 26
- 27
- 28
- 29
- 30
- 31
- 32
- 33
- 34
- 35
- 36
- 37
- 38
- 39
- 40
- 41
- 42
- 43
- 44
- 45
- 46
- 47
- 48
- 49
- 50
- 51
- 52
- 53
- 54
- 55
- 56
- 57
- 58
- 59
- 60

 
3 Operating the Headphone

Press " " Buttons

Hold 2s Power ON


Hold 4s Power OFF

Hold 6s Pairing Mode

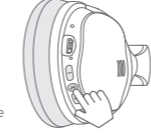

Pairing to a Bluetooth Device

 1. Make sure the Bluetooth on the mobile device you are trying to connect the headphones to is on.
2. Hold the " " button for 6 seconds to enter pairing mode. The red and blue indicators will start flashing.
3. In your devices Bluetooth list, search for "MPOW X4.0", click on it, and your devices will pair.
4. The headphone will automatically power off after 15 minutes without being paired to a device.

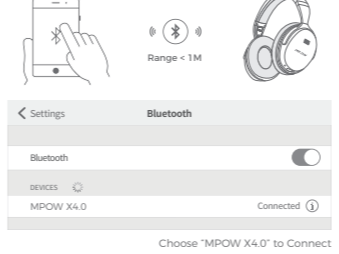

Choose "MPOW X4.0" to Connect

Special Feature: Pair your Mpow headphone to two devices at the same time

- Listen to audio on your PC, without missing a phone call.
- Can also connect to two smartphones, smartphone and tablet, tablet and laptop, etc...

1. Connect to the first device.
2. Once complete, disconnect the Bluetooth of that device.
3. Connect to the second device.
4. Turn on the Bluetooth of the first device and re-connect to it.
5. Now both devices will be paired to the headphone at the same time.


Play / Pause / Answer Call / Hang Up call

Press " " Buttons

Short Press ... Answer / Hang up

Short Press ... Play / Pause

Press 2S ... Reject an Incoming Call



Activating Voice Control / Your Devices Personal Assistant

To activate voice control, simply double tap the center power button on the earcup, and you will hear your phone's notification that voice control is activated. You can now ask your personal assistant whatever you want, from the microphone on your headphone.

NOTE

 
If a call comes in while you are listening to music or streaming a video, the audio / video will be paused, and you will hear your phones ringtone through the headphone. Once the call is ended, your entertainment will resume.

Next Song / Volume Up / Previous Song / Volume Down

Press " " Buttons

Long Press Next Song


Short Press Volume Up

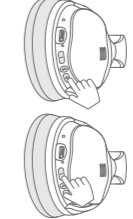

Press " " Buttons

Long Press Previous Song

 Short Press Volume Down

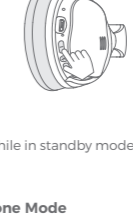

Re-dial Last Number

Hold the " " button for 2 seconds while in standby mode. You will hear "Last Number Redial"

Change from Headphone to Phone Mode

 
Hold the " " button for 2s and you will be able to take a call from your phone rather than your headphone.

Remove Bluetooth Pairing


Un-pairing the headphone from your device. Simultaneously press " " and " " while in standby mode to un-pair the headphone from your mobile device

Active Noise Cancel

Slide the noise cancel switch to be ON / OFF. When the noise is cancelled, the green light is on.

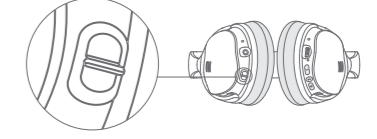

Audio Cable Connection

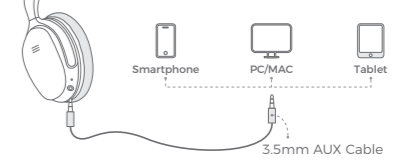 


Smartphone PC/MAC Tablet
3.5mm AUX Cable

NOTE

Just plug one end of the audio cable into the headphone, and the other one into your mobile device or PC to listen whatever you are streaming, or to participate in a conference call. The Bluetooth mode will automatically disconnect when you insert the audio cable.

 Charging the Headphone

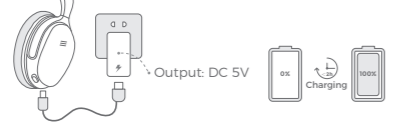

Output: DC 5V

Charging the Headphone

This headphone has a built-in, non-removable lithium battery. We highly recommend that you fully charge the headphone before the first use.

1. To charge, connect the charging cable to the charging port, and then to a USB charger.
2. A red light will indicating the headphone is charging.
3. The red light will turn off once the headphone is charged. The blue Light is on all the time when fully charged.

Fast Charging

It can be frustrating to forget to charge your headphones. For those moments, our Fast Charge technology gives you 1.5 hours of play time with only 10 minutes of charging.

NOTE

1. As with all rechargeable batteries, the charge / discharge cycles affect the battery's performance over time.
2. The headphone automatically turns OFF while charging.
3. You will hear a voice prompt when the battery is low, and the red indicator will flash.
4. The charging temperature is 50°F-113°F.

4 LED Behaviour

Work Status	Indicator Light Status	Voice Prompt
Power on	Blue light flashes 3 times slowly * x3	Power on
Power off	Red light flashes 3 times slowly then off * x3	Power off
Pairing mode	Red & Blue Lights flash alternately and fast *	Pairing
Incoming calls	Red light is always on and the blue light flashes once every four seconds *	x1/4s
Connected	Blue light flashes once every 5 seconds * x1/5s	Connected
Disconnected		Disconnected
Low battery warning	Blue light stop flashing then red light flash *	Battery Low
Charging	Red light is on when charged and blue Light is on all the time when fully charged *	

5 Specifications

Operation Range	33 feet
Talking Time	15-20 hours
Playing Time	15-20 hours
Charging Time	<2 hours
Charging Voltage	DC 5V ± 0.25V
Battery Capacity	3.7V / 500 mAh

NOTE

Actual play and talk times will ultimately depend on the phone / mobile device you are using, the listening volume, as well as the frequency of the use of the different buttons and toggling between functions.

6 Limited Warranty

MPOW Technology Co., LTD. warrants to you that the Product (excepting components provided in / with the Product) will be free from defects in workmanship and materials for a period of ONE year from the date of retail purchase by you (the "Warranty Period").

During the Warranty Period, the Product (excepting components), will be repaired or replaced at MPOW's option, without charge for either parts or labor OR at MPOW's sole option, the price of the Product may be refunded, subject to depreciation based on your purchase price for the Product pro-rated over the remaining balance of the Warranty Period.

Any warranty service or replacement of parts will not extend the Warranty Period.

This Limited Warranty does not cover defects which are a result of:

1. Damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance).
2. Damage during shipment (claims must be presented to the carrier).
3. Damage to, or deterioration of, any accessory or decorative surface.
4. Damage resulting from failure to follow instructions contained in your owner's manual.
5. Damage resulting from the performance of repairs by someone other than an authorized MPOW service center.
6. Deterioration of component parts, the nature of which is to become worn or depleted with use, such as batteries and headphone ear pads.

7 FCC Statement

Operation is subject to the following three conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.
3. This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or a technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MPOW Technology, LTD is under license. Other trademarks and trade names are those of their respective owners.

WARNING!

1. The product can ONLY be charged by 5V Adapter/USB Port, otherwise it will cause heat and fire.
2. The BMBH143C is not a toy, please supervise your children when using the equipment.
3. To avoid potential risks and protect products, please do not charge it at a temperature lower than 50°F or higher than 113°F.

MPOW TECHNOLOGY CO.,LTD
Copyright © MPOW Inc. All rights reserved.
www.xmpow.com | support@xmpow.com
Phone Number : 1-844-869-3583

FCC ID : 2AMH2-BMBH143C
This device complies with Part 15 of the FCC Rules.
MADE IN CHINA