 


USER MANUAL

Wireless Speaker

Button/slot description:

- 1.ON/OFF switch
- 2.Micro USB port
- 3.TF card slot
- 4.USB port



Packaging included

- 1pc speaker
- 1pc USB charging cable
- 1pc user manual

Technical Specifications

Bluetooth version:	5.0
Working distance:	up to 10 meters
Transmitting frequency:	2.4GHz
Power supply:	5V ±1.0A
Built-in Rechargeable battery:	Polymer lithium-ion battery 3.7V / 300mAh
Charging time:	approx. 2 hours
Operating time:	approx. 2.5 hours

How to pair wireless speaker with mobile device

- Switch on/off button at "on." The speaker automatically enter the Bluetooth mode for pairing .
- Switch on Bluetooth mode on your phone and Search for Bluetooth devices on your phone until "WW" will show up.
- Click "WW" to pair with your mobile device .

Tips:

Once this speaker is paired and connected to your mobile device, next time it will connect to your mobile phone automatically as long as the Bluetooth mode in your mobile phone is on.

When the speaker was paired with your mobile device:

- To switch between different modes: Bluetooth mode, FM mode, AUX mode
- Short press for next song, Long press for adding volume.
- Short press for previous song, Long press for reducing volume.
- To pause the playing of music OR to answer /hang up the phone call.

Note: If you want to listen to the music in your USB key and TF card (Not provided), Just insert them into the USB port /TF card slot, then you can enjoy your music.

Trouble shooting

Symptoms	Causes	Solutions
Cannot switch the speaker on	Battery empty	Charge the battery
Unable to pair the speaker	Speaker is not under pairing mode OR Speaker is already paired with other device.	Set the speaker under pairing mode- Refer to the section of "How to pair wireless speaker with mobile device." OR disconnect with other device.

Charge the polymer lithium-ion Battery



DO NOT PLUG INTO A MAINS POWER SOURCE

The Bluetooth speaker is powered by an integrated rechargeable lithium battery. Charge the battery as follows:

- 1) Insert the charging cable into the DC 5V socket/micro USB port on the unit. Connect the USB plug into a PC or AC/DC adaptor. The LED indicator turns RED as the battery is being charged.
- 2) When the battery is fully charged, the RED LED indicator turns off.



Take care of your speaker

- Do not charge the speaker for longer than 4 hours. Avoid charging overnight or leaving the product unattended.
- Ensure that the USB cable is removed from the speaker / device after charging finishes.

- Do not use excessive force when inserting or removing the cable from the speaker to avoid damage to the socket or your devices.
- Do not modify, disassemble, open, drop, crush, puncture or shred the product.
- Keep the unit away from all metal objects (e.g. coins, keys, hair pins, etc.) and terminals (e.g. such as a hair pin) as this could result in short circuiting the product internally.



Safety Instructions and Information

Please read all instructions prior to using this product for the first time.

Failure to read and follow these safety and usage instructions could result in fire, electric shock or other hazard that could potentially cause property damage or even fatal injury.

- The product shall be connected to a USB interface of version USB2.0 or higher.
- Please use provided USB cable to charge this product. Using an incompatible cable could result in the product malfunctioning.
- Do not expose the device to liquids.
- Keep the product away from any heat sources and direct sunlight to prevent heat build-up.

The operating temperature of the EUT can't exceed 55°C, and shouldn't be lower than -20°C

- Keep away from children and ensure that all persons who use the product read and follow these instructions and warnings.
- No naked flame sources, such as lit candles should be placed on the apparatus;
- To help prolong the speakers use life and your health, please don't listen to music in the long time, high volume environment, in order to avoid damage to your hearing.
- When a fault occurs, please immediately turn off the power switch, unplug the USB plug, prevent speaker and other components damaged.
- A power shortage will affect the Bluetooth distance, please charge in time.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type by professional.
- Battery should not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environment aspects of battery disposal;
- The use of apparatus in moderate climates.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna,
- Increase the separation between the equipment and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help.