
130*190MM

Sound Machine With Bluetooth Speaker

MODEL NO.: H220 Instruction Manual Location of Controls

- 1. White noise sounds
- 2. Fan sounds
- 3 Water sounds
- Zen sounds
- 5. Nature sounds
- 6. Other sounds
- 7 Power
- 8. Timer
- 9. Volume
- 10. Bluetooth LED indicator
- 11. Speaker
- 12. LED Indicator Light
- 13. Type C USB Port
- 14. Main Power ON/OFF Switch
- 15. Built-In Rechargeable Battery
- 16. Type C USB Cable

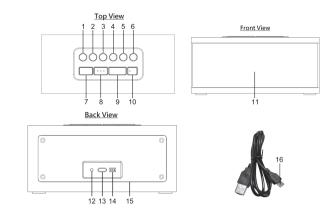

WHITE NOISE	FAN	WATER	ZEN	NATURE	OTHER
Brown noise 1	Fan 1	Ocean 1	Flute 1	Forest	Helicopter
Brown noise 2	Fan 2	Ocean 2	Flute 2	Summer night	Hairdryer 1
Brown noise 3	Fan 3	Ocean 3	Flute 3	Crickets	Hairdryer 2
Brown noise 4	Fan 4	Ocean 4	Flute 4	Frogs	Dryer
Brown noise 5	Fan 5	Rain 1	Lions roar	Birds 1	Crowd
Pink noise 1	Fan 6	Rain 2	Wind chimes 1	Birds 2	Train 1
Pink noise 2	Fan 7	Rain 3	Wind chimes 2		Train 2
Pink noise 3	Fan 8	Thunder			Fireplace
Pink noise 4	Fan 9	Brook			Campfire
White noise 1	Fan 10	Shower 1			Vacuum 1
White noise 2	Fan 11	Shower 2			Vacuum 2
White noise 3	Fan 12	Waterfall			Snoring
	Fan 13				Airplane cabin
	Fan 14				Hush little baby
					Rock-a-bye
					Twinkle
					Lullaby
					Are you sleeping
					Heartbeat

OPERATION

The white noise machine can operate while plugged in or operate on the rechargeable battery. If the white noise machine is not producing sound, this is an indication that the unit needs to be recharged. Plug the USB into a power source with DC 5V 1A output or above, then plug the Type C USB into the unit (13). The battery charger indicator light (12) will illuminate during charging. The indicator light will turn off when the unit is fully charged.

****Main Power ON/OFF Switch (14): PUSH THE MAIN POWER SWITCH TO ON BEFORE USE. Push the main power switch to OFF if the machine will not be used for a long period of time.***

POWER

Press power button for 1-2 seconds to turn on or off the unit.

SOUNDS

There are 70 sounds. Press one of the sound buttons. After the last sound you will hear a swoosh noise. This indicates that you are starting back at the first sound. The sound machine will recall the last sound and volume level.

TIMES

Press the timer button once for 30 minutes, twice for 60 minutes, a third time for 120 minutes and a fourth time to turn the timer off.

VOLUME -/+

Press volume -/+ button to adjust the volume level you want. You can press and hold the volume button to speed up for adjusting volume level.

BLUETOOTH (VERSION 5.3)

This unit has a built-in Bluetooth Receiver which allows you to play music from an external source through the built-in speaker of this unit. The range is approximately 10 meters.

- 1. Press the Power button (7) and press the Bluetooth (BT) LED indicator button (10). The BT LED indicator (10) is flashing in blue color meaning it's in Bluetooth pairing mode. You will also hear the connected sound of Bluetooth.
- 2. Turn on the Bluetooth function of the device you want to link to and enable the search or scan function to find the system.
- 3. Select "H-200 BT Spkr" from the device list when it appears on your device screen.
- 4. After successfully pairing the unit with your Bluetooth device. The BT LED indicator (10) will stop flashing and remain lit.
- 5. Now you can play music from your Bluetooth device wirelessly to the unit.
- 6. If you want to disconnect the unit with another Bluetooth device, off the Bluetooth from your first device. Repeat steps 2 to 4 if you want to pair another Bluetooth device.
- *The timer function is only valid for playing 70 sounds only. Timer function is not valid for Bluetooth playback function
- **While playing music a call comes in, the Bluetooth playback function will be paused, and the mobile phone will ring. Please answer the call with your mobile phone. The Bluetooth speaker will not transmit your voice. After hanging up the phone, the Bluetooth speaker will automatically continue playing the music just now. Directly press the sound button when you want to listen any of the 70 sounds.

BUILT-IN LITHIUM-ION BATTERY

- * The machine contains a non-removable 3.7V 2200 mAh lithium-ion battery.
- * Full charging time is approximately 4-6 hours.
- * The battery run time is approximately 38-42 hours at 50% volume level after fully charged based on playing provided 70 sounds.

NOTE: Please do not try to remove/replace internal lithium-ion battery as it is danger.

BATTERY DISPOSAL

This device contains a non-removable lithium-ion battery. Contact your local waste agency for details regarding recycling and/or disposal options

CARE/MAINTENANCE

- 1. Store unit in a cool, dry place.
- 2. Before cleaning, unplug machine from outlet.
- 3. Clean machine with a soft, slightly damp cloth, Never use liquids. Do not immerse in any liquid to clean.

WARNING

- 1. Do not place speaker close to ears. May cause hearing damage.
- Do not place or store product where it can fall or be pulled into a tub or sink. Do not reach for an appliance that has fallen into water. Unplug it immediately.
- 3. Do not place or drop in water or any other liquid. Do not use on a wet surface.
- 4. This product is not a toy and is not intended for use or play by child. Do not place unit or cord within your child's reach.

 For adult use only.
- 5. Do not leave product unattended when in use.
- 6. Do not attempt to repair or modify the product.
- 7. Do not cover product when in use. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 8. Discontinue use if product or power cord is damaged.
- 9. Use this product only for its intended use as described in this manual.
- 10. Keep unit and cord away from heated surfaces.
- 11. Never drop or insert any object into any opening.
- 12. The product is designed for indoor use only.
- 13. Do not lift, carry, hang or pull the product by the power cord.

READ MANUAL BEFORE USE. SAVE THESE INSTRUCTIONS.

FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. "These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

MADE IN CHINA

Prolinx GmbH
Brehmstr.56,40239 Duesseldorf

UK REP

Prolinx Global LTD 27 Old Gloucester Street London,WC1N 3AX,UK

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.