

# RAINUS

---

## INFORTAP-R13A

## USER MANUAL

Version 1.3

2019

## ESL Introduction

Electronic Shelf Label System (ESL) provides product information by replacing series of task which is printing attaching price, and merchandise information in paper to electronic display.

### Manual Content

#### 1. InforTab-Ready Preparation

**1- 1** InforTab-Ready Composition Check ...**p.3**

**1- 2** Network, UI Setting ...**p.4**

**1- 3** Confirm InforTab Assign ...**p.6**

#### 2. InforTab Update

**2- 1** Confirm InforTap Layout ...**p.7**

**2- 2** Update Product Information ...**p.8**

**2- 3** Confirm InforTap Update Result  
...**p.9**

### 3. InforTab De-Assign, and Re-Assign

**3- 1** InforTab De-Assign ...p.10

**3- 2** InforTab Re-Assign ...p.10

**Appendix** ...p.11

## 1. InforTab-Ready Preparation

In order to set and monitor InforTab-Ready, Personal computer with network is required.

### 1-1 InforTab-Ready Composition

Compositions of InforTab-Ready are,

- 13.3 Inch InforTab(R13A) 1EA
- Gateway 1EA, Antenna 4EA
- 5V Power cable 1EA, LAN cable 1EA
- Remote Controll 1EA, UnlockTool 1EA



## 1-2 Network, UI setting

### ■ PC Network setting


For connecting Gateway and User.

Gateway IP is set by 192.168.220.236 in advance.

Setting a PC network fixed IP is required. For instance, 192.168.220.45 can be set as PC network IP.

To change PC network IP,


Control Panel > Network Internet > Network settings > Ethernet Properties > Internet Protocol version 4(TCP/Pv4) > Use following IP > Confirm

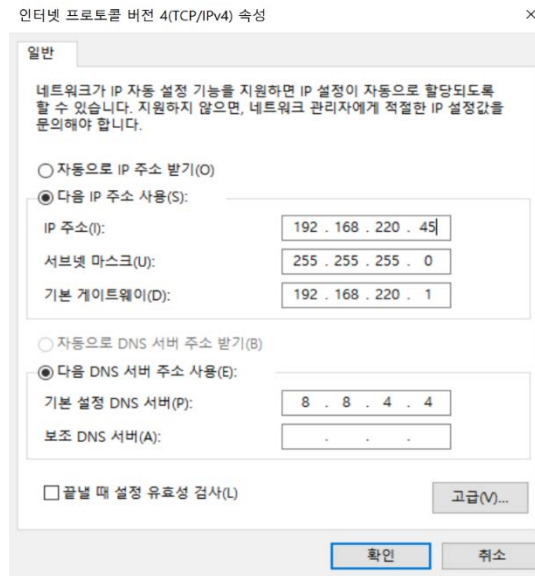

■ **Connect InforTap UI**

- 1 Plug in Gateway with power cable, and connect to PC by LAN cable. If all of these connected properly, Red, Green, and Blue lights will go on.

- 2 Run internet browser in PC, and write Gateway fixed IP (192.168.220.236) on address bar.
- 3 If connected properly, InforTab UI screen will appear.
- 4 Change Password in Menu 'Account Setting'. Initial ID is 'admin' and password is '1234'.

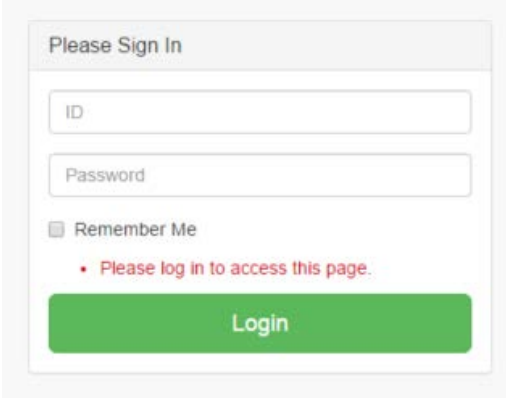

Please Sign In

ID

Password

Remember Me

• Please log in to access this page.

Login

## 1-3 InforTab Assign

InforTab and specific product work together showing the product information. This system is operated by 'Assign' process.

■ **Assign confirmatory**

InforTab-Ready's 4 InforTabs are already assigned.

Assigned InforTab in Gateway can be verified by

'Status > Tag' in UI.

	Tag MAC	Store Code	Gateway IP	Operation	Result	Battery	Temperature	RSSI
1	78E980FFFE004DD2	store-1	localhost:8080	UPDATE	ok	32	26	-40
2	78E980FFFE004DD9	store-1	localhost:8080	UPDATE	ok	30	25	-46
3	78E980FFFE004DE4	store-1	localhost:8080	UPDATE	ok	32	25	-37
4	78E980FFFE004DES	store-1	localhost:8080	UPDATE	ok	30	26	-45
5	78E980FFFE004DE7	store-1	localhost:8080	UPDATE	ok	32	25	-37
6	78E980FFFE004DE9	store-1	localhost:8080	UPDATE	ok	30	25	-40

*Assign: Connect InforTab and Product in Gateway.*

*Update: To change product information with Assigned InforTab*

*De-Assign: Disconnect InforTab and Product in Gateway.*

■ **InforTap Mac Address check**

InforTab Mac address is displayed as barcode when you press '>' or '<' buttons of remote controller in front of tag.


Delete 2 digits and leave 4 digits from the back in order to search Mac address in UI.

For further more explanation, if Mac address is '78E980FFFE004C4B', can be searched by '004C'.


## 2.InfoTab Update

### 2-1 Confirm InfoTab Layout

InforTap Layout can be found at 'Product Update' menu.

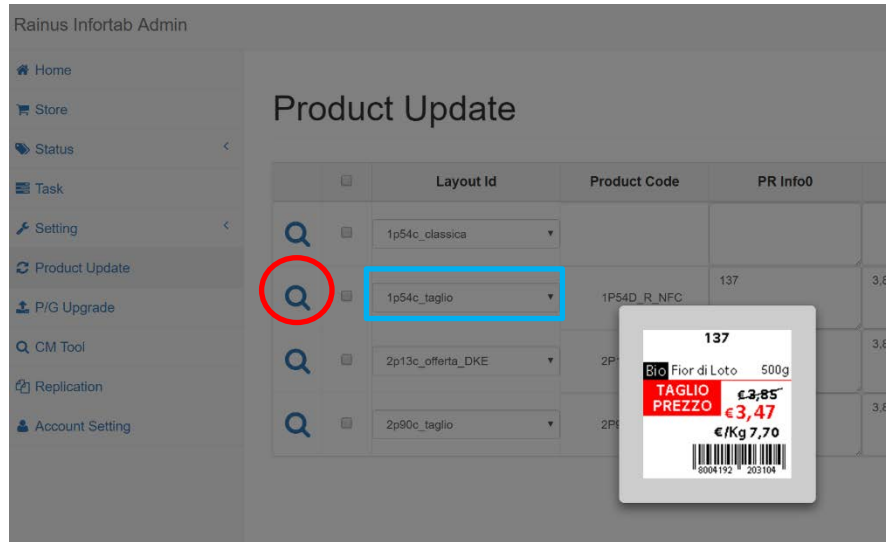

 Layout choice

 Layout look preview


Layout is location of information and design which shows in tag display. It can be adjusted in 'Layout Designer'.

We provide 'Layout Designer Manual' in addition which guides how to use 'Layout Designer'.




## 2-2 Product information Update

Product Update window is as below picture.

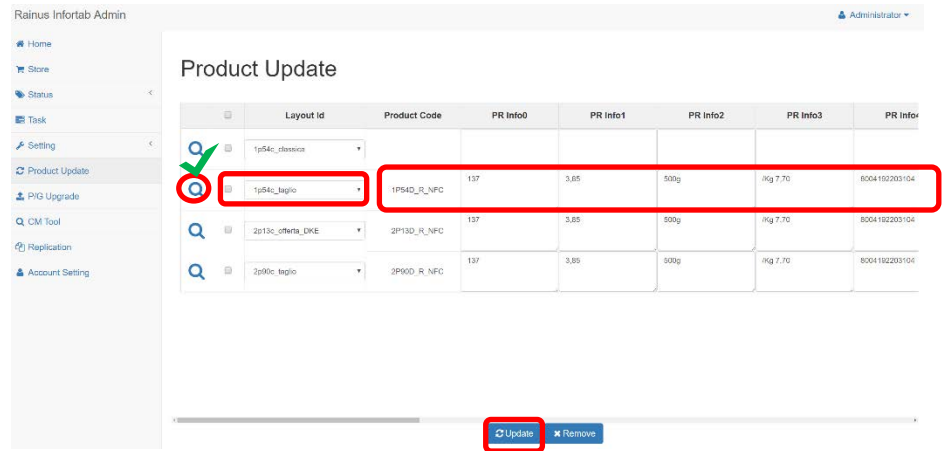

- 1 Choose proper Layout and put appropriate InforTab information.
- 2 Check the square box in the right side and click 'Update' in the bottom side of page.

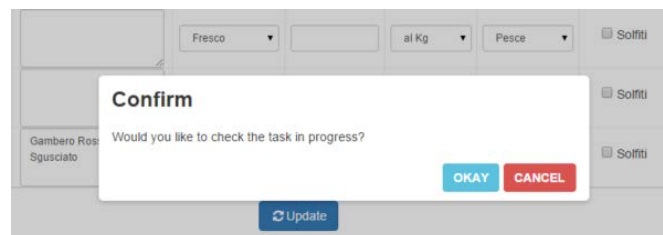

- 3 Press 'Okay' to confirm the procedure.

## 2-3 Confirm InfoTab Update Result

After the update, the page automatically moves to 'Task' menu in UI and it is available to check update status in real time.



Task ID	Store Code	Operation	Progress(%)	Start Time	End Time	Detail
1442551553	'store-1'	UPDATE		2015-09-18 16:39:13	in progress	<a href="#">Detail</a>
	None	LAYOUT	100%	2015-09-18 16:36:30	2015-09-18 16:39:13	<a href="#">Detail</a>
	None	LAYOUT	100%	2015-09-18 16:35:41	2015-09-18 16:36:30	<a href="#">Detail</a>
	None	LAYOUT	100%	2015-09-18 16:10:10	2015-09-18 16:10:46	<a href="#">Detail</a>
	None	LAYOUT	100%	2015-09-18 16:09:35	2015-09-18 16:09:45	<a href="#">Detail</a>
1442558472	'store-1'	UPDATE	100%	2015-09-18 15:41:12	2015-09-18 15:41:37	<a href="#">Detail</a>
	'store-1'	ASSIGN	100%	2015-09-18 15:41:12	2015-09-18 15:41:12	<a href="#">Detail</a>

InforTab update generally completes in 5 minutes, but time it can be delayed by network circumstance.


To make InforTab update on purpose, Remote Controller.

After flicker light, update process will be operated when press the 'R' button of remote controller.

### 3. InforTab De-Assign, Re-Assign

#### 3-1 InforTab De-Assign

‘De-Assign’ is process that to de-assign InforTab and product from Gateway. De-assigned InforTab cannot be updated unless re-assign it back.

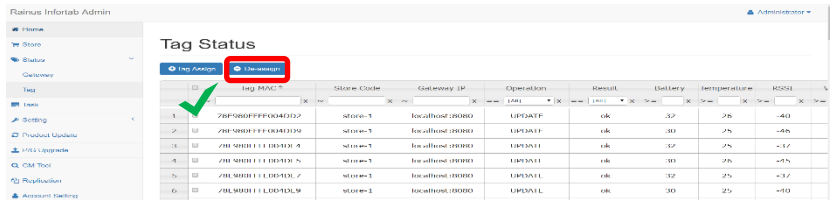

For de-assign, select ‘Status > Tag’ menu in UI and press ‘De-assign’.

#### 3-2 InforTab Re-Assign

If need to update back, ‘Re-Assign’ work is required. Choose ‘Status > Tag’ Menu in UI and click ‘Assign’.

### Tag Assign

After click 'Assign' button, write down the InforTab Mac address and product code. Then press the 'Save' to make procedure complete.

## Appendix

### Wireless Network Circumstance

InforTab system uses two channels of wireless 2.4GHz, so that it can effect updating speed of InforTab according to wireless network environment.

- **Wireless Channel**

According to wireless circumstance, InforTab system may not

Rainus Infortab Admin Administrator

**Inf**

- Home
- Store
- Status
- Task
- Setting
  - Server Config
  - Store Config
  - Gateway Config
  - Embedded Font Config
  - Product Update

### Gateway Config

Gateway MAC	Store Code	GW Index	Gateway IP	Netmask	Default GW	DNS IP	ESL Server IP	ESL Server Port	Data Channel	Event Channel	Radio Power	OP Mode	Note	Channel Mask	Radio Baud	GMP Version	GRM Version	Updated
70:2C:1F:03:1A:21	store-1	0	localhost:8080	255.255.255.0	192.168.220.1	203.248.252.2	localhost	80	13	14	100	norm	Note something	12	250	2.1.0	4	2016-11-08 02:38:28

be operated properly by influence with other wireless instruments. In this case, changing channel is required.

In order to change channel, click 'Gateway Config' menu in UI and press 'Setting' Icon in right side of the page.

## Gateway Config

Gateway Config Update

Gateway MAC: 70:2C:1F:03:1A:21

Store Code: store-1

GW Index: 0 (must be a unique value in a store)

IP Address: localhost.8080 (Gateway IPv4 address)

Netmask: 255.255.255.0

Default GW: 192.168.220.1 (Default GW IPv4 address)

DNS IP: 203.248.252.2

ESL Server IP: localhost (ESL Server IPv4 address)

ESL Server Port: 80

**Data Channel: 13 (IEEE 802.15.4 channel(11~26))**

**Event Channel: 14 (channel(11~26), should use one value for all gateways in a store)**

Radio Power: 100 (Radio power in percentage(1~100))

OP Mode: norm (Use "Normal Operation")

Channel Mask: 12 (Calculated by system on data channel change)

Radio Baud: 250 (Gateway Ethernet MAC)

GMP Version: 2.1.0 (Gateway Main Processor Version)

GRM Version: 4 (Gateway Radio Module F/W Version)

Note: Note something

Submit Reset

Date channel, Event channel are composited with 11~26 channels..

Begin with 11 channel and go up until finding a proper one.

Press 'Save' button to confirm the channel.

### ■ Using NFC

By activating and tagging the mobile phone NFC function, you can access the information of goods stored inside the NFC IC mounted inside the R13A.

The NFC IC inside the R13A can only store information about the product and then help the user access the information through the mobile phone.

### **FCC Warning statement**

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,

and

(2) This device must accept any interference

received, including interference that may cause

undesired operation.

### **FCC RF Radiation Exposure Statement**

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Any changes or modifications (including the antennas) to this device that are not expressly approved

by the manufacturer may void the user's authority to operate the equipment.