

FCC ID: 2AMLWHAYK-33

Telecontrol of generator Manual

1, remote start:

Press the start button on the remote control board (Kai Suojian), the host control output 12V start signal, the start time is 4 seconds (12V start signal output to stop immediately note: after a successful start, at the same time), the stepper motor rotation, will gradually open the door to the full open position.

2, remote control flameout:

According to the key remote control board flameout (Guan Suojian), the host will control line grounding power off, the generator into the off state, after flameout state duration is 8 seconds, the stepper motor rotation, the throttle rapidly rotated to the closed position.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has

been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.