



Graceland-XXL

Jukebox
Gramola

US-10028536

auna

www.auna-multimedia.com

**ICH BIN
EIN BERLINER***

* John F. Kennedy on June 26, 1963 in his speech in Berlin, on the occasion of the 15th anniversary of the Berlin Airlift.

Dear Customer,

Congratulations on purchasing this device. Please read the following instructions carefully and follow them to prevent possible damages. We assume no liability for damage caused by disregard of the instructions and improper use. Scan the QR code to get access to the latest user manual and more product information.



CONTENT


- Warning 4
- FCC Rules 5
- Safety Instructions 6
- Technical Data 7
- Warranty 8
- General Overview 9
- Front View 10
- Functions of the Jukebox 11
- Functions of the Remote Control 13
- Radio Operation 15
- CD/USB/SD card Operations 15
- BT control 17
- AUX IN and LINE OUT Operations 18
- Troubleshooting 20



PRODUCER


Made in China

Berlin Brands Group Inc.
101 Montgomery Street, Suite 2050
San Francisco, CA 94104
www.berlin-brands-group.com

WARNING

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK AND SERIOUS PERSONAL INJURY, DO NOT REMOVE ANY COVER. NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.</p> <p>TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER, RAIN OR MOISTURE.</p>		

	<p>Triangle with lightening plus explanation as follows: DANGEROUS VOLTAGE: The lightening flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>Triangle with exclamation point plus explanation as follows: ATTENTION: The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.</p>

	<p>CAUTION To reduce the risk of electric shock do not use this plug with an extension cord or receptacle.</p>
---	---

FCC RULES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.



These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

SAFETY INSTRUCTIONS

FAILURE TO CAREFULLY FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO YOUR PRODUCT.

General instructions

- DANGER. NOT FOR USE BY CHILDREN UNDER THE AGE OF 18.
- For home and personal use only. Any other usage shall be construed as a misuse as set forth herein.
- For indoor use only. Outside usage shall be construed as a misuse as set forth herein.
- Read, keep and follow the instructions carefully.
- Heed all warnings.
- Electrical equipment should never be kept or stored in rain or damp environments. Storage of the Product under the aforementioned conditions shall be construed as neglect as set forth herein
- Unplug the product during lightning storms or when unused for long period of time. Any actions to the contrary shall be construed as a neglect as set forth herein.
- When servicing only use identical replacement parts, as specified by the manufacturer. Usage of any other parts shall be construed as an alteration as set forth herein.
- Do not expose to direct sunlight and do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produces heat. Conducting any of the foregoing shall be construed as a misuse as set forth herein.
- Before first use clean the Product. Failure to clean Product prior to its initial usage
- shall be construed as neglect as set forth herein.
- DO NOT PLUG IN THE PRODUCT UNLESS IT IS TURNED OFF COMPLETELY.
- DO NOT STORE FOOD OR LIQUIDS IN THE PRODUCT.
- DO NOT expose to dripping or splashing water. DO NOT place objects on top of the product. Conducting any of the foregoing shall be construed as a misuse as set forth herein.

Special instructions

- Do not expose this unit to rain.
- Do not place any objects filled with liquids, such as vases, on this unit.
- Only use the recommended accessories.
- Do not attempt to repair this unit yourself.
- Contact qualified service personnel for maintenance.
- Do not drop metal objects into this unit.
- Do not place heavy objects on this unit.
- Clean only with a dry cloth.
- Do not block the ventilation openings.
- Do not install the equipment near sources of heat such as heaters, stoves, ovens, or other hot appliances (such as amplifiers, etc.)

TECHNICAL DATA

Unit Specifications	
Item number	US-10028536
Power supply	110-240 V ~ 50/60 Hz
Power consumption	65 W
Power amplifier channel type	2.0 channel
Output power	20+20 W
Remote control battery	CR2025 3V Lithium Battery
Compatible USB Devices Or SD Cards	
USB flash drive	Supports USB2.0 or USB1.1.
File system	FAT16/32 (NTFS file system is not supported)
Maximum files	< 999
Important note	External HDD, card readers and locked devices are not supported.
Playable File Requirements	
Maximum folders	< 99
File extensions	mp3 or wma

WARRANTY

Berlin Brand Group (the "Company") warrants to the original retail purchaser of this Product that should this Product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within twelve (12) months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned Product (at the sole discretion of the Company) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the Product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address provided herein.

 
This warranty, as set forth above, may be extended for an additional six (6) months for a total warranty period of up to eighteen (18) months by registering the Product with the Company. In order to register the Product, the original retail purchaser must complete and return the registration documents provided along with the Product to the Company or register online at www.auna-multimedia.com/warranty within ninety (90) days of the days of the original purchase

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.


THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES OR LIABILITIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

GENERAL OVERVIEW

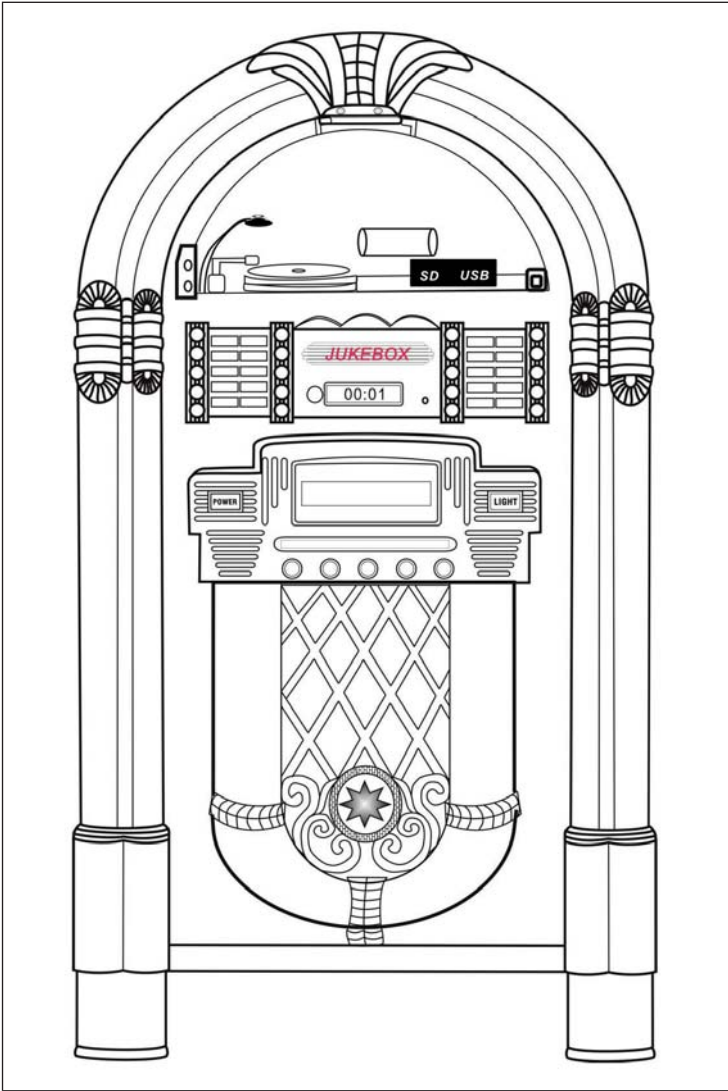

FRONT VIEW

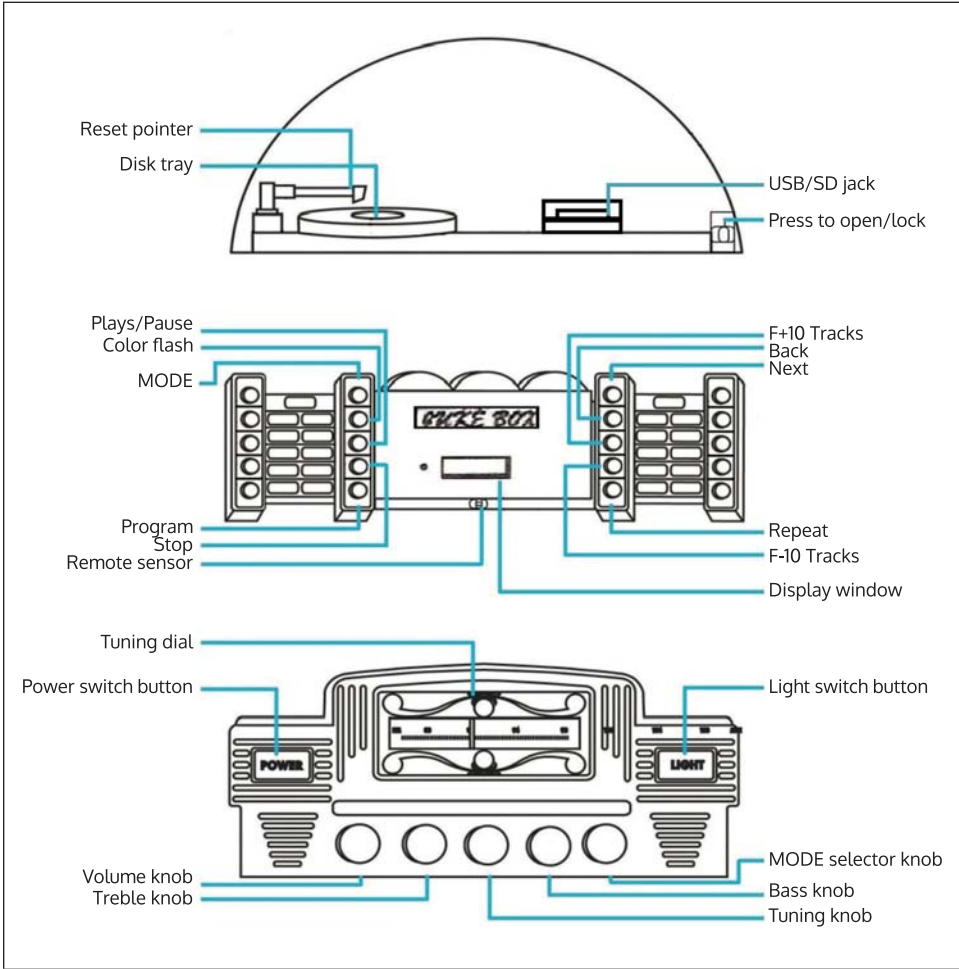 


FUNCTIONS OF THE JUKEBOX

POWER	Power control switch of machine main control panel.
LIGHT (Light Button)	To Turn on/off the Led Lighting.
VOLUME (Volume control knob)	Turn the knob to increase or decrease volume.
TREBLE	Turn the knob to increase or decrease treble.
BASS	Turn the knob to increase or decrease bass.
MODE button	CD/USB/SD card--- when selected, you can playback from either CD, USB or SD memory card. To select between CD, USB or memory card, press the MODE button on the jukebox or on the remote control.
TUNING	For use when in FM radio mode. Turn the know left or right to tune to different radio stations. See the tuning dial above the controls to see the band.
MODE a knob (FM/CD.USB.SD/BT-AUX)	<p>A 3 position knob for 3 different functions:</p> <ul style="list-style-type: none"> • FM radio: When selected, use the tuning knob to tune to different FM stations. • CD/USB/SD card: When selected, you can playback from either CD, USB or SD card. To select between CD, USB SD card, press the CD-MP3, USB SD mode button on the juke box or on the remote control. • BT-AUX in: When selected, you can playback from a connected Bluetooth or AUX in device.
Play/Pause:	Press to play or pause a track.
Stop	Press to stop a track. Press the play button to re-start music playback.
Program	Allows you to program only particular songs of your choice to playback from your music source. Further info on this function on page 10.

Next	Press to play the next track.
Back	Press to play the previous track.
F+10	Press to go forwards 10 tracks.
F-10	Press to go back 10 previous tracks.
Repeat	Press to replay one particular song. The word REP will be displayed on the LCD display screen on the jukebox. Press the repeat button again will play the whole contents of the disc, USB stick, SD card . Press the repeat button again to exit the repeat mode (REP will not be displayed on the LCD screen).You can repeat an album (folder) when playing it in MP3 format.

COLOUR FLASH (Colour flash button)	When the lights are displayed (by turning on the main light button on the front of the jukebox), you can press the colour flash button to hold one color on the lights. Press again to resume colour changing.
--	--

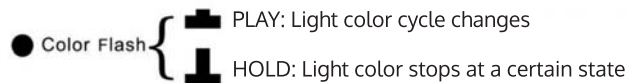

Press the colour flash button once to hold the lights colour. Press it again to resume colour changing. the Colour Changing LED Light Tubes will fade in and out of several different colours continuously, The lights can hold on 7 different colours (light blue, dark blue, green, pink, red, yellow or white). To turn OFF the lighting effects all together simply press the "LIGHT" button once again, and all lighting effects will no longer be illuminated.

Important notes for led lights: The colour changing sequences of the lights are controlled by an IC (Integrated Circuit). The lights may turn off when the light mode is in the HOLD position, this is normal and not a malfunction (need to adjust the switch).

FUNCTIONS OF THE REMOTE CONTROL

WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in a little as 2 hours due to internal burns. If swallowed, go straight to a hospital emergency room. Dispose used batteries immediately.

1	Play/Pause: press to play or pause a track.
2	Mode: press to change the mode of playback, choose from CD/USB/SD card.
3	Next: press to go to the next track.
4	F.F: long press fast forward, press to fast forward through a track. You can then press the playback button to start playback.
5	Back: press to go back one track.
6	F.B (fast back): long press press to rewind back through a track. You can then press the play button to start playback.
7	RAN (Random): press to playback in no particular order.

	PRG (Program): Allows you to program only particular songs of your choice to playback from your music source.
8	a While playing back from a music source, press the stop button.
	b Press the program button to enter the program mode. The word PROG will flash in the bottom left corner of the display screen. A position number will also be flashing on the screen (eg: p01).
	c Press the next or back buttons to select which track you want to program into position. When you have made your selection, press the program button to save it.
	d You can then repeat the same steps to fill in more positions.
	e When done, press play to begin your music playback. You can do this at any stage once you have programmed the amount of tracks you want.
	f At any stage during the program process you can press stop to cancel.
	g FUL will display on the LCD screen when the max amount of positions have been filled.
9	REP (Repeat): press „REP“ once to repeat one song, the REP indication at the top left corner on the led display will flash. Press the „REP“ display „REP FOLDER“ repeat album (MP3 music format). Press „REP“ one more time to repeat all songs in the track and the REP indication at the top left corner on the led display will appear. Press „REP“ again to cancel repeat function.
10	F-10: press to go back 10 previous tracks.
11	F+10: press to go forwards 10 tracks..
12	Stop button: press to stop a track.

 
RADIO OPERATION

Put the mode selector switch to "FM" position respectively. Turn the Tuning knob to select your desire station. Adjust the volume by turning the Volume Control Knob.

CD/USB/SD CARD OPERATIONS


To access the top compartment to load a CD, USB or SD card, gently push in the bottom right corner of the display window. There is a push to open mechanism. You may close the window and push in again to have it shut. Put the mode selector switch to "CD/USB/SD" position. Select the CD mode by pressing the mode selector knob (CD/USB/SD) on the front panel until the display show "CD" Place a CD on to the disc tray. Take care not to touch the CD laser and ensure that the CD label is facing upwards.

Handling the Discs

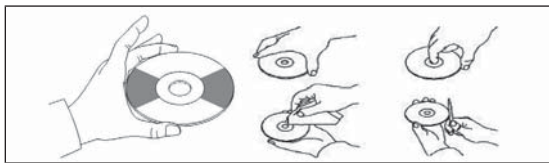

- This unit has been designed specifically for sound reproduction from compact discs bearing the mark. No other discs can be used.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edge.

 Gently move the switch arm so that it is on top of the CD. The CD will then start spinning and play.

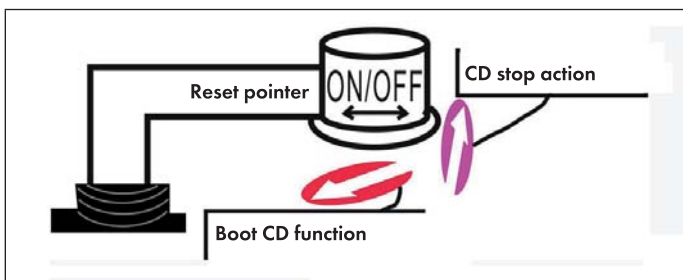

If the message "OP" appears on the juke boxes LCD display screen in the mode for CD playback, the tone arm has not been moved across so it is on top of the CD. The correct position is for the tone arm to be angled to the right and be on top of the CD.

To play a USB/SD card

- Set the mode selector switch to "CD/USB/SD" position.,
- Select the USB/SD card mode by pressing the mode selector knob (CD/USB/SD) on the front panel until the display show "USB or SD"Then, insert your USB or SD card into the respective slot.
- Once the tracks is showing on the display, press "Play/Pause" button to start playback.
- Press one more time to enter Pause mode. Press again to resume playing.
- Press Stop to stop playback
- Program Button: allows you to program only particular songs of your choice to playback from your music source.
- Next Button: Allow to play/select the next track
- Back Button: Allow to play/select the previous track
- F+10: Allow to go forward 10 tracks
- F-10: Allow to go backward 10 tracks

- Repeat: Allow to replay one particular song:
 - (1) Press „REP“ once to repeat one song, the REP indication at the top left corner on the led display will flash.
 - (2) Press the „REP“ display „REP FOLDER“ repeat album (MP3 music format.
 - (3) Press „REP“ one more time to repeat all songs in the track and the REP indication at the top left corner on the led display.
 - (4) Press „REP“ again to cancel repeat function.

Remark: Because of non-standardised format definition/production of an USB flash drive or SD card, playback quality and performance are not guaranteed. The manufacturer is not responsible for playability of an USB flash drive or SD card due to recording conditions, such as PC performance, writing software, media ability, etc. The manufacturer is not responsible for any loss or damage of data. To avoid malfunction on both of your devices, make sure the jukebox is turned off before you insert or remove a USB device or SD card.

Please note: If the disc is seriously scratched or too dirty, the disc may not start. If an improperly centred disc is played, noise can be heard in the mechanism. The use of such discs should be avoided.

Notes on CD-R/RW

 
Because of non-standardised format definition/production of CDR/RW, playback quality and performance are not guaranteed. The manufacturer is not responsible for playability of CDR/RW due to recording conditions, such as PC performance, writing software, media ability, etc. Do not attach or deal a label to either side of the CDR/RW disc as it could cause a malfunction.

BT CONTROL



- Put the mode selector switch to "BT-AUX" position.,
- Adjust your settings on the Bluetooth device and ensure that Bluetooth connection is turned on.
- The LED light will be flashing on the Bluetooth indicator on the juke box. Pair your device with the jukebox. The device will be displayed as "JUKEBOX".
- When the red LED light begins to flash slowly, device and Bluetooth pairing has been successful and you can now begin your music playback.


Note: If pairing of red LED does not blink, turn the selector switch off the "Bluetooth position" and try again. Also ensure the "AUX" in switch on the back of the jukebox is in the off position. It's on the back board of the machine.

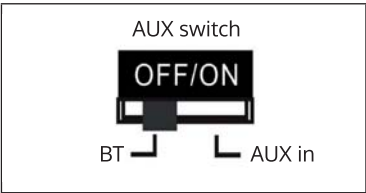

BT operation

- Press the PLAY button for music playback, press again during music playback to pause music playback. Pressing the PLAY/PAUSE button when music is paused will resume music playback.
- DOWN: Press to play the next track.
- UP: Press to play the previous track.
- Vol-: Press to decrease volume.
- Vol+: Press to increase volume.

 AUX IN AND LINE OUT OPERATIONS

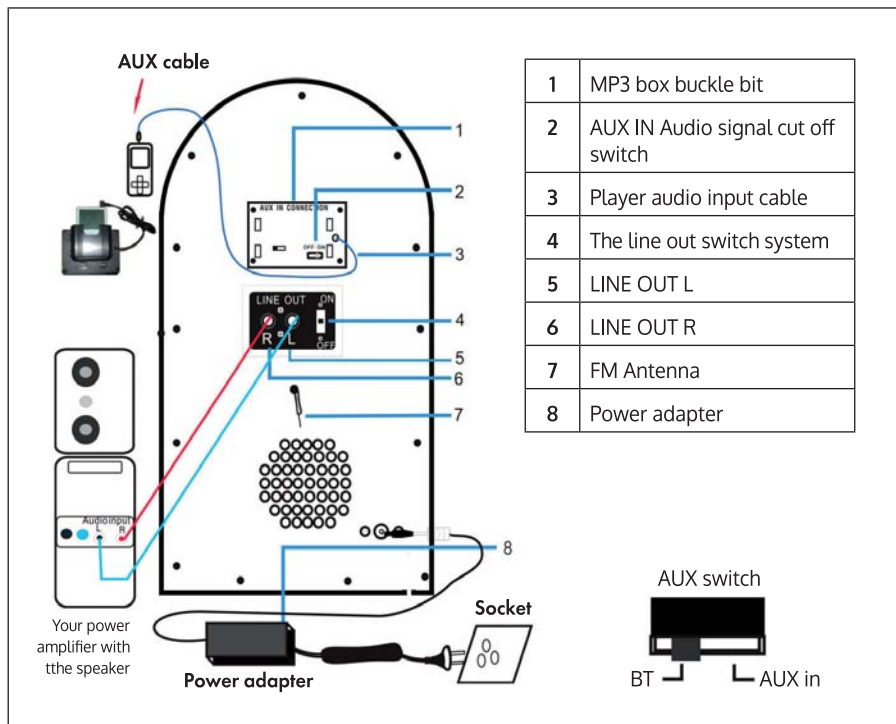

Put the mode selector switch to "AUX-BT" position. AUX IN Audio signal cut-off switch to the „ON" position, after the completion of playback please set the switch to the " OFF" position. Ensure the function knob on the front of the jukebox is turned to AUX in position, the last setting on the knob.

 
Plug the AUX in lead at the back of the jukebox into your mobile phone or iPhone/iPod or other MP3 device. The AUX lead needs to be plugged into the earphone socket of your iPhone/iPod or other MP3 device.

You can then begin playback from your mobile phone or iPhone/iPod or MP3 device. If you cannot hear anything, turn up the volume on the jukebox.

LINE OUT Jack with SPEAKER SWITCH

You have the option to use the line out ports to connect an external amplifier device, and the option to connect your own external speakers. „LINE OUT" switch system selection „ON". When LINE OUT audio is output to external power amplifier and speaker, the internal speaker of this product there is no sound.

If you do not connect anything to line out ensure the LINE OUT SWITCH is in the OFF position to playback through the jukebox.

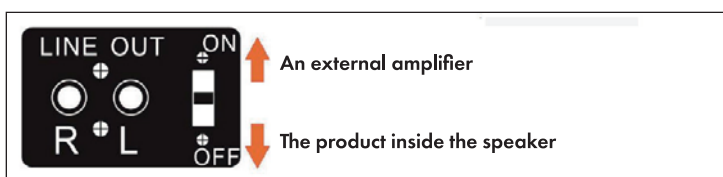

TROUBLESHOOTING

Problem	Possible causes and and remedies
Radio reception	
No radio reception	The MODE selector has not been set to the correct position.
	Adjust the VOLUME knob.
	Rotate the TUNING knob to find a radio station.
	Switch the LINE OUT jack to "OFF"
CD player operation	
Disc does not play Or sound skips	Reload the disc with the label side up
	Clean the disc.
Sound skips	Change the installation location.
	Press the Reset button (RESET POINTER).
Unit is not working.	Press the STOP button and then program the tracks.
General problems	
Programmed disc play will not function.	The AC power cord is not connected to an AC wall outlet. Check that the power cord is connected firmly.
	Push the power button from the "OFF" position to the "ON" position.
No sound output.	Turn VOLUME knob clockwise.
	Press the Reset button. Switch the AUX IN jack to "OFF" and remove the RCA cord.
	The LINE OUT SWITCH is in the OFF position.
Severe hum or noise.	The TV or VCR is too close to the stereo system. Separate from the TV or VCR.
Display garbled, non-functional.	Turn Off the power to restart.

Caution:

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

This radio transmitter (identify the device by certification number or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.