



# Instruction Manual

10033215



Please read this instruction manual carefully before usage and save it for future reference.

# CONTENTS

WARNING .....	3
COMPLIANCE WITH FCC REGULATIONS .....	4
SAFETY PRECAUTIONS .....	5
INTRODUCTION .....	6
INTRODUCTION .....	7
USB/SD CARD OPERATION .....	8
BLUETOOTH OPERATION .....	9
AUX OPERATION .....	9
TROUBLE SHOOTING .....	10
SPECIFICATIONS .....	10

## WARNING



Do not share the power socket unit with other electrical appliances.



Pull off the power plug to save power in case the machine is not being used.



Do not dismantle the machine and try to repair it or reassemble it by yourself.



Be careful of the wire and keep proper maintenance.  
Do not press, twist, pull, lengthen or push the cable to avoid electrical hazards and damage to the cable.



Do NOT connect the speaker to voltages below 100V or above 240V.  
When the voltage is below 100V, the machine may not work and its useful life period will be affected adversely. When the voltage is above 240V, the machine may be burned down or cause fire.



Do not clean or wash with water or use in the bathroom to avoid the possibility of accidents or problems.  
To prevent suffering an electrical shock or another accident, do not operate the appliance in a rainy or humid environment.



This symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical parts.

# COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1.This device may not cause harmful interference, and
- 2.This device must accept any interference received, including interference that may cause undesired operation.

## **FCC WARNING**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Caution:**

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## SAFETY PRECAUTIONS

### Satellite tower speaker assembly

- ① Speaker box.
- ② Screw
- ③ Metal pillar.
- ④ Base
- ⑤ Washer
- ⑥ Screw

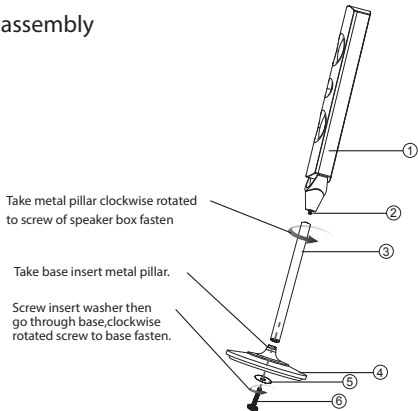

### Installation location

Leave sufficient space around the speaker of at least 5cm from any wall/obstacle to ensure proper ventilation and prevent the speaker from overheating. The following places are not suitable installation locations for the speakers.

- An unstable location
- a location near a heat source or in direct sunlight.
- In a wet or dusty environment

### Warning

To prevent suffering an electrical shock or another accident, do not operate the speaker in a rainy or humid environment.

### Cleaning and maintenance

Use a soft cloth or cotton dipped in a neutral solution for cleaning the surface of the speaker. Do not use the type of cloth that you use for washing dishes or aggressive chemical agents.

 
### Storm

If the speaker is not working properly during a storm, please disconnect the plug from the power socket and reinsert it after a minute.

### Do not drop small items or a liquid into the speaker

In the event that you find small items or a liquid inside the speaker, you see smoke or smell an odour, immediately disconnect the speaker from the power grid. Send the speaker to an authorised service centre.

# INTRODUCTION

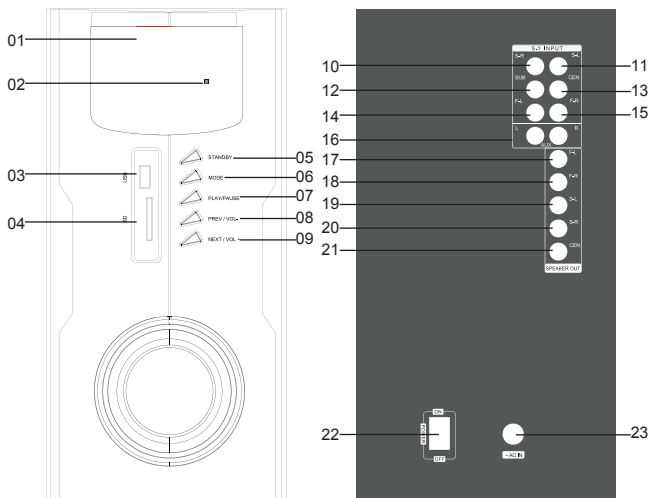

01. DISPLAY WINDOW

02. REMOTE RECEIVER WINDOW

03. USB

04. SD

05. STANDBY

06. MODE

07. PLAY/PAUSE

08. PREV/VOL-

09. NEXT/VOL+

10. 5.1CH SURROUND RIGHT INPUT

11. 5.1CH SURROUND LEFT INPUT

12. 5.1CH SUBWOOFER INPUT

13. 5.1CH CENTER INPUT

14. 5.1CH FRONT LEFT INPUT

15. 5.1CH FRONT RIGHT INPUT

16. AUX

17. SPEAKER FRONT LEFT OUTPUT

18. SPEAKER FRONT RIGHT OUTPUT

19. SPEAKER SURROUND LEFT OUTPUT

20. SPEAKER SURROUND RIGHT OUTPUT


21. SPEAKER CENTER OUTPUT

22. POWER

23. AC IN


# INTRODUCTION
 
## Remote Control

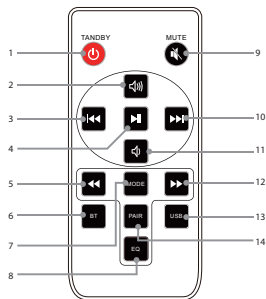


1. STANDBY : Switch to standby mode
2. Press to increase the volume level
3. Skip to the previous track
4. Press for play and pause function
5. Fast rewind button
6. Press for bluetooth mode
7. Press to switch modes
8. Press to switch EQ mode
9. Press to mute audio playback
10. Skip to the next track
11. Press to decrease the volume level
12. Fast forward button
13. Press to switch USB input
14. Press to unpair a connected bluetooth device

## Remote Control Use Ready

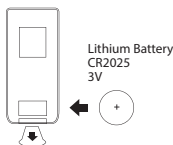 

Within approximately  
6 Meter

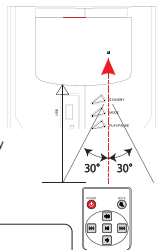 








### NOTE:

Before first use ,please put the insulation piece out.  
The remote control can be normal use.







## USB/SD CARD OPERATION

Select "POWER" to "on" to turn on unit or to "OFF" to turn off unit.

	Press to select between Bluetooth/AUX/USB/SD CARD modes, please press to select to USB/SD CARD.
	Press to select equalizer mode.
	Press to skip to previous track.
	Press to temporarily pause a playback, press it again to resume the playback.
	Press to skip to next track.
	Hold to seek fast rewind.
	Hold to seek fast forward.



## BLUETOOTH OPERATION



	Press to select between Bluetooth/AUX/SD CARD modes, please press to select to Bluetooth. Please connect your cellphone or Bluetooth device with unit.
	Press to select equalizer mode.
	Press to skip to previous track.
	Press to temporarily pause a playback; press it again to resume the playback. Hold to enter pairing mode
	Press to skip to next track.
	Press to dis-connect Bluetooth function with your mobile phone.

The model of the unit is “Areal Nobility”, press [MODE] button to switch to the corresponding signal source (Bluetooth), use your enabled mobile device to search and pair the the unit by selecting The unit will synchronize play songs with your mobile device after connected successfully. Disconnect the Bluetooth connection by holding [PLAY/PAUSE] on the front panel or the remote control.

**NOTE:**

In Bluetooth mode, [PLAY/ PAUSE], [NEXT] and [PREVIOUS] buttons are also active.

## AUX OPERATION

	Press to select between Bluetooth/AUX/SD CARD modes, please press to select to AUX mode.
	Press to select equalizer mode.

**NOTE:**

In tuner mode, [VOLUME +/-], and [MUTE] buttons are also active.

## TROUBLE SHOOTING

Malfunction	Inspection and action
No sound or sound weak	<ul style="list-style-type: none"><li>● Turn "VOLUME" to up volume.</li></ul>
Playback of USB/SD/CARD, no sound or hissing	<ul style="list-style-type: none"><li>● If the recordings are made in various formats in combination with the MP3/WMA format and stored on the same USB/SD CARD. The unit can play various recording formats (apart from MP3/WMA) with hissing or it may not be able to play them at all.</li><li>● Check whether all the files on the USB/SD are in MP3/WMA format. Skip the file and try to play different files.</li></ul>

## SPECIFICATIONS

Frequency response	40 Hz -20KHz
Bluetooth version	BT3.0+EDR
Bluetooth range	>10 meters
S /N ratio	>75dB
USB/SD audio format	MP3/WMA
Output power	120W

## USERS ADVICES



Based on legislative decree no. 49 dated 14th March, 2014 "Execution of Directive 2012/19/UE about electrical and electronic equipment waste (WEEE)".

This marking indicates that this product should not be disposed with other household wastes, but it should be disposed separately from other wastes. Therefore, the user should bring the product with all essential components to recycling centers for electrical and electronic wastes, or return to retailer before to buy a new product as equivalent type, in the ratio of 1 to 1, or 1 to 0 for products that have larger side lesser of 25cm. Correct disposal of your old appliance will help to prevent potential damage to the environment and to human health and support materials recycling. The unlawful disposal of the product should involve for users administrative sanctions based on Legislative Decree no.49 dated 14th March, 2014.



The device contains battery covered by European Directive 2013/56/EU and it cannot be disposed together with domestic wastes. Please inform yourself about local rules on separated disposal for batteries: a correct disposal helps to avoid negative consequences for the environment and health.



Double  
Insulation



Made in P.R.C

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.