

SPK770 User Manual

Dear customer,

Thank you for purchasing the outdoor Bluetooth speaker G30. To ensure correct operation, please read this user manual carefully before operation.

Important Safety Instructions

- ◆ Do not use the speaker in special cold and hot environments.
- ◆ Please avoid the speaker dropping or hitting with a hard object, it may cause other hardware damage.
- ◆ Take care when charging the speaker, excessive prolonged charging will damage the battery lifetime. Charge the speaker to full capacity when using for the first time.
- ◆ When battery low, the indicator light will flash and voice prompt "battery low", please charge speaker in time.
- ◆ If does not use this speaker for long time, please charge at least once within onemonth, in order to prevent the lithium battery from causing and damaging because of excessive consumption.
- ◆ Adjust the volume to appropriate level to avoid disturbing others.

Features

- Bluetooth Music
Bluetooth 5.0 stereo music playing
- USB Music playing
At MP3/WAV music format
- Water-resistance at IPX4
- Voice guide
The speaker will prompt the working mode and status for easy operation.


Technical Data

Driver: 43mm Driver *1 + Passive radiator *1
Bluetooth Version: JLAC6925B BLUETOOTH 5.0
Output: 5W
Built-in Battery: 2000mAh
Size: 98*49.1*75.2mm
Playing Time: 8 hours at 50% volume
Net Weight: 190g

Package Contents

Bluetooth Speaker, TYPE-C Cable, User Manual

Slot and Keys

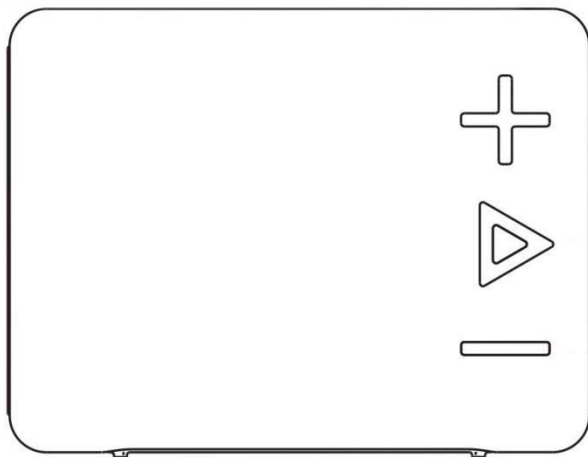

Power On&Off / Mode Switching



Play / Pause



Next Track / Volume +



Previous Track / Volume -




Charging slot




USB Slot

Operation Instructions



1. Power on/off

Long press  button: Power on/off the speaker







Long press  button: Switch the working mode for Bluetooth mode, USB music playing mode.

(The default working mode is Bluetooth mode.)

2. Bluetooth

- 1) Short press the  button to switch Bluetooth working mode.
- 2) Turn on the Bluetooth of your phone, search for nearby devices. The G30 will be found on your mobile pairing list, please connect it. When connected, the speaker will prompt "Device paired" and the LED indicator will stop twinkle in blue.
- 3) Please turn on your phone's music player, and speaker will play the selected music.
- 4) The speaker will pair with the latest used Bluetooth device automatically. Long press the  button to disconnect the current Bluetooth connection. The speaker will prompt "Device disconnected". Then other Bluetooth devices can find and pair with the speaker.

3. TWS(True Wireless Stereo) function (only works in Bluetooth mode)

- 1) Power on 2pcs G30(ensure both speakers are in Bluetooth waiting to pair status).
- 2) Press and hold the  button and  button for 3 seconds sync on either one speaker can turn on/turn off TWS function.
- 3) Once two speakers paired, the speaker  button light indicator flashing in blue is the master speaker, the other one  button light off is the slave speaker. Under the TWS mode, all the keys of the master speaker can be operated, except for the mode key of the slave speaker, all the other keys can be operated.
- 4) Use your phone to pair the master speaker G30, and play Bluetooth music on both speakers.
- 5) Press and hold the  button and  button for 8 seconds sync to clear the TWS pairing memory.


Note:

- 1) Two speakers for True Wireless Stereo connection, and should be waiting for Bluetooth pair.
- 2) Under TWS mode, if you turn off one of the speaker, then another speaker will be turned

off automatically.





3)The two speakers will be reconnected automatically after first connection once in connection range (except for clear the TWS pairing memory)

4. USB Music Playing

Inserting the USB Flash Disk into the speaker, short press the  button to enter the USB mode , the speaker will prompt “USB mode”, Then the speaker will play the USB music directly.

Please Note: The USB Flash Disk supporting memory up to 32G, and support the audio format at MP3, WAV.

5. Button functions in Bluetooth/USB mode:

Buttons	Music Functions
	Long press for previous track Short press to decrease the volume
	Long press for next track Short press to increase the volume
	Short press for play/pause/Mute
	Long press to power on/off Short press to switch the working mode

6. Intelligent power saving function

The speaker will be automatically powered off in below cases:

(1) Under Bluetooth mode, the speaker is waiting to pair for more than 10minutes.

(2) Under USB mode , if press the  button to pause/mute for more than 10 minutes.

Note: Please long press  button again to power on the speaker

7. Charging

When speaker with low battery capacity, the speaker will prompt “**battery low**”, please charge the battery via a USB adaptor immediately. During charging, the LED indicator will remain on orange. When fully charged, the LED indicator will be off.

Note:

Please use the good quality adaptor to charge the speaker.

We suggest use the adaptor specification at 5V/1A

When speaker with low battery capacity, please charge the speaker immediately

The speaker can be charged by different charging current, if using the computer to charge the speaker, as the current only at 500 mA, the charging time will be very long.

Troubleshooting


1. What should I do if the speaker can not pair with the Bluetooth device and play music accordingly?

(1) Please check the specification/ the manual of the Bluetooth device (your mobile or computer), and check if the device can support the A2DP stereo audio transmission. If yes, please turn on the A2DP stereo mode.

(2) Ensure the speaker is under the Bluetooth pairing status, if there are many Bluetooth devices nearby, the G30 will not easy to be found. Please turn off other Bluetooth devices.

2.What should I do if the speaker get stuck and all the button can not work.

The speaker's inner system may be wrong with some inappropriate operation. Please try

to long press the  button and hold for 8 seconds to reset the speaker's software.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 0mm between the radiator & your body.