

## User Manual

Thank you for choosing the smart anti-lost products iTAG based on Bluetooth. iTAG is a kind of Bluetooth Low-energy product which based on the newest Bluetooth 4.0 version. It can chain user's easy-lost & valuable belongings (such as keys, handbags etc.), kids or pets together with smart phones through specified App software within a setting Bluetooth connection distance. In the effective distance it can realize the functions of anti-lost, looking for smart phones, self-portrait and voice recording.

The effective distance of iTAG is 75 Feet in open range without barrier. With this device, your belongings, kids and pets won't leave your attentions any more.

iTAG uses CR2032 Lithium Coin Battery which is easy to get from markets, and it works for almost half a year.

本产品适用MP3 iSearching or iTracing,使用方法如下:

1. 单机系统可以APP Store或百度应用商店安装即可  
2. 安卓系统用户（除中国大陆用户）可到Google play中搜索iSearching or iTracing或安装即可。中国大陆用户可以百度安卓市场中搜索即可。

The product is used for the APP: iSearching or iTracing use method as follows:

1. Apple system can search the iSearching or iTracing in the App Store then can be used after installation.

2. Android users (except Chinese mainland users) can search the iSearching or iTracing in the Google play, then can be used after installation.

Chinese mainland users can baidu search the android market.

The showed product photo is for your reference only. Please refer to actual product.

Switch on/off

Switch on: Press and hold the button on iTAG for 3 seconds until you heard the Beep twice.

Switch off: Press and hold the button on iTAG for 5 seconds until the log "Beep" sound.

1. The iTag will automatically connect to the smart phone when powered on. To find your iTag just press the "alarm" button and the tag will ring.

2. If it shows "Disconnected", click the "Q" button to find more connectable iTag devices, such as car keys, bags, etc. (Note: Click on the arrow icon to bring you to the submenu)



3. To delete the iTag, go to the device list then slide the device to the left and then push delete.

### Do Not Disturb Mode

To turn off all device alerts go to the settings tab and then switch "no disturbing" on.



### Individual iTag Settings

To access the individual iTag settings go into the device list and press the "Q" arrow...then press the anti loss button. In this menu you can toggle the tracking feature by enabling the anti loss option, light flash (LED light), alarm distance setting, and mobile alarm volume.



### To Find Your Missing Phone

1. Double click the button on your iTag to trigger the alert on your phone.
2. On the device screen, click the red flashing button to stop the phone alert.



### Cell Phone Remote Shutter

To enter the camera mode press the "photograph" tab. Press the button on the iTag to take photos. 1. To choose your flash settings push the upper left flash icon. The right arrow icon toggles between the front and back camera.



2. To access burst shooting and the interval timer shooting press the settings gear icon on the lower right.



### Location

As shown in the image



Location List: When you park your car, press the button on the iTag and it will tag the location on the map. To recall where you parked press the location tab at the bottom and then the "location list" button to show its location.



Lost History: If the iTag is lost, a pin drop will be automatically marked on the map to show you where the item was lost. To find where the item was lost press the location tab at the bottom and press "lost history" to show the last known location. To delete the location tag, just swipe left and then press delete.



Settings: In the settings tab there are many features of your iTag to customize:

APP Passcode: "Turn Passcode on" or "Change Password"  
Map Switch: "Use Google Map" or "Use Baidu Map" or "GAODE Map"  
Double Click Setting: "Alarm Mode" or "Record Mode"  
Record History: The recorded voice would be stored under this state



### Voice Recording

1. To access the recordings click on the "Record List" in the settings tab.
2. To play the recordings just press play/pause.
3. To delete the recording, swipe left and then press delete.

### Battery replacement

Battery is in the back of the tag. Use a coin as a key and twist it to right to open the battery cover, then replace the battery. The CR2032 cell is easy to get. After replacement put the cover back and close it to left.



### FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.