


ART DEPARTMENT		Product Line	
Date of Review	2018-05-22_3L_TopRCBoxingRobots_BB-ToyCity	Product Name	Sharper Image
Created By	Jack Wu / Luna Qin/Nick Xue	Product Code	12 2P Lx 10 10 82P H x 8.8P W / 32.51cm Lx 26.90cm H x 22cm W
Checked By	David Manganella / Luke Manganella	Color (Spot or CI)	# of Colors 4
File Format	Adobe Illustrator CC (R4)CS4 (DL)	Prints	Comments
Printing Process / Finishing	Make to Order	2D / 3D / Color / Material / Note	
Make to Order			

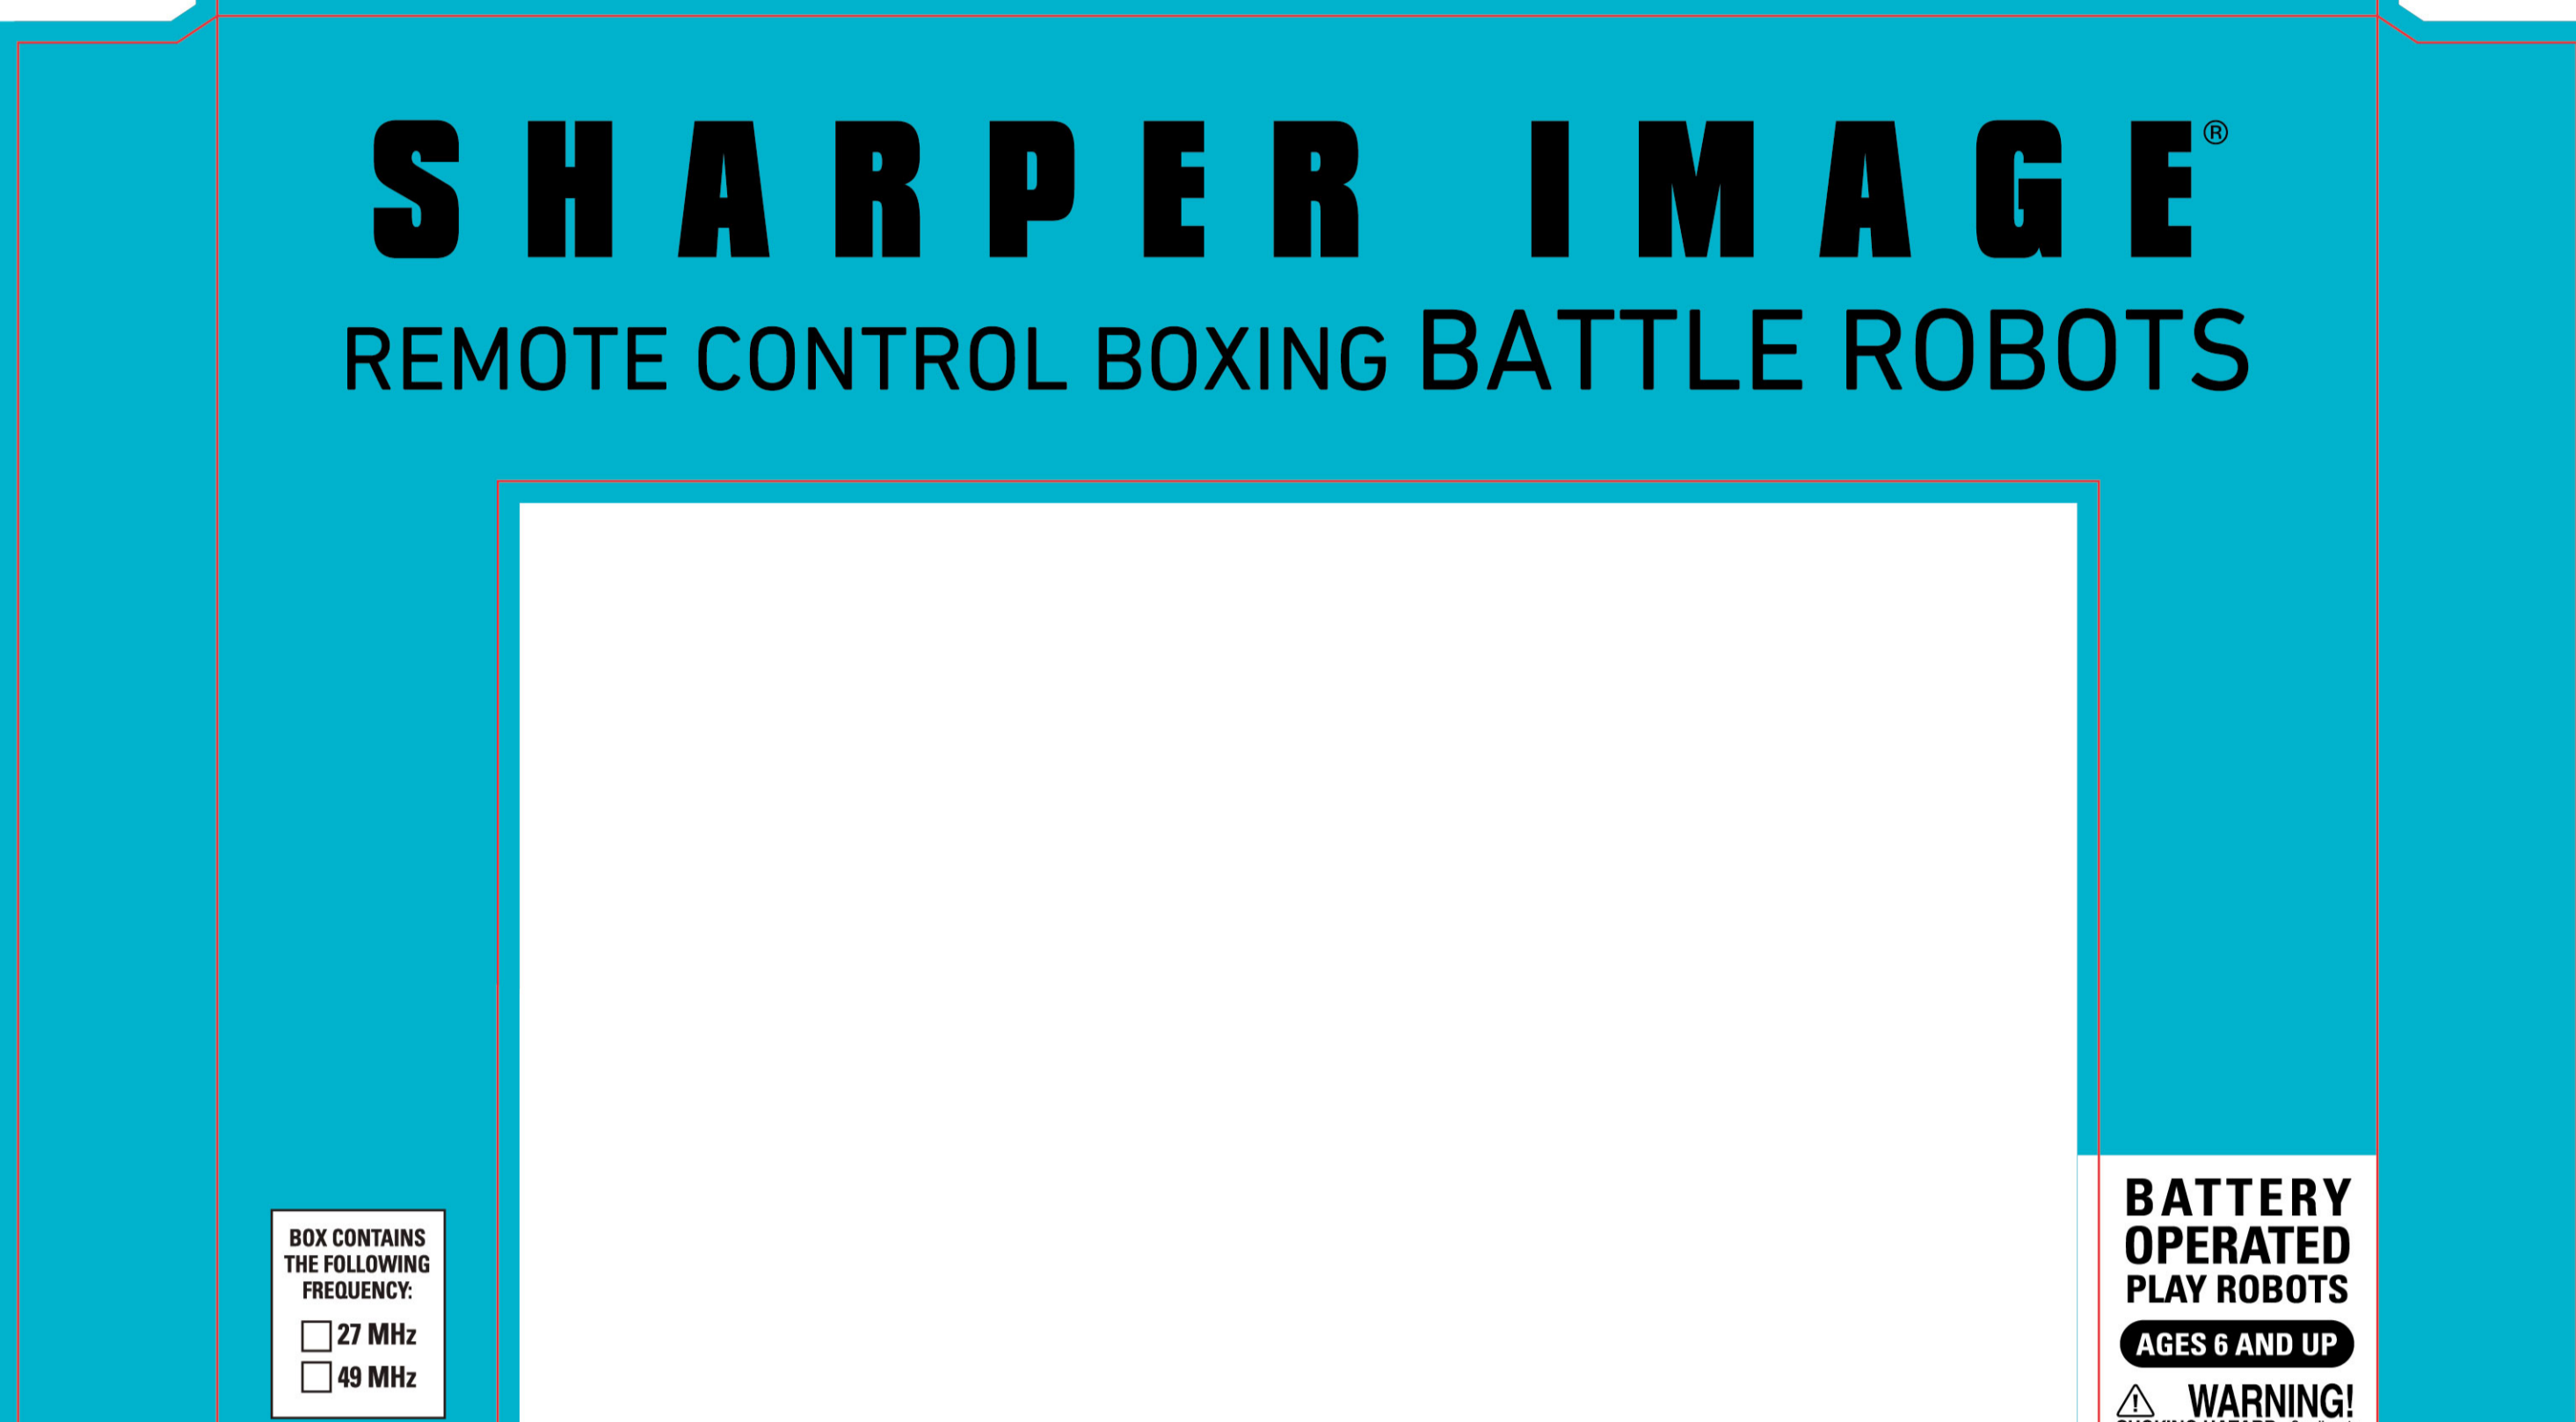

BOX CONTAINS THE FOLLOWING FREQUENCY:

2.4 MHz


49 MHz

BATTERY OPERATED PLAY ROBOTS

AGES 6 AND UP

WARNING!

CHOKING HAZARD - Small parts. Not suitable for children under 3 years.

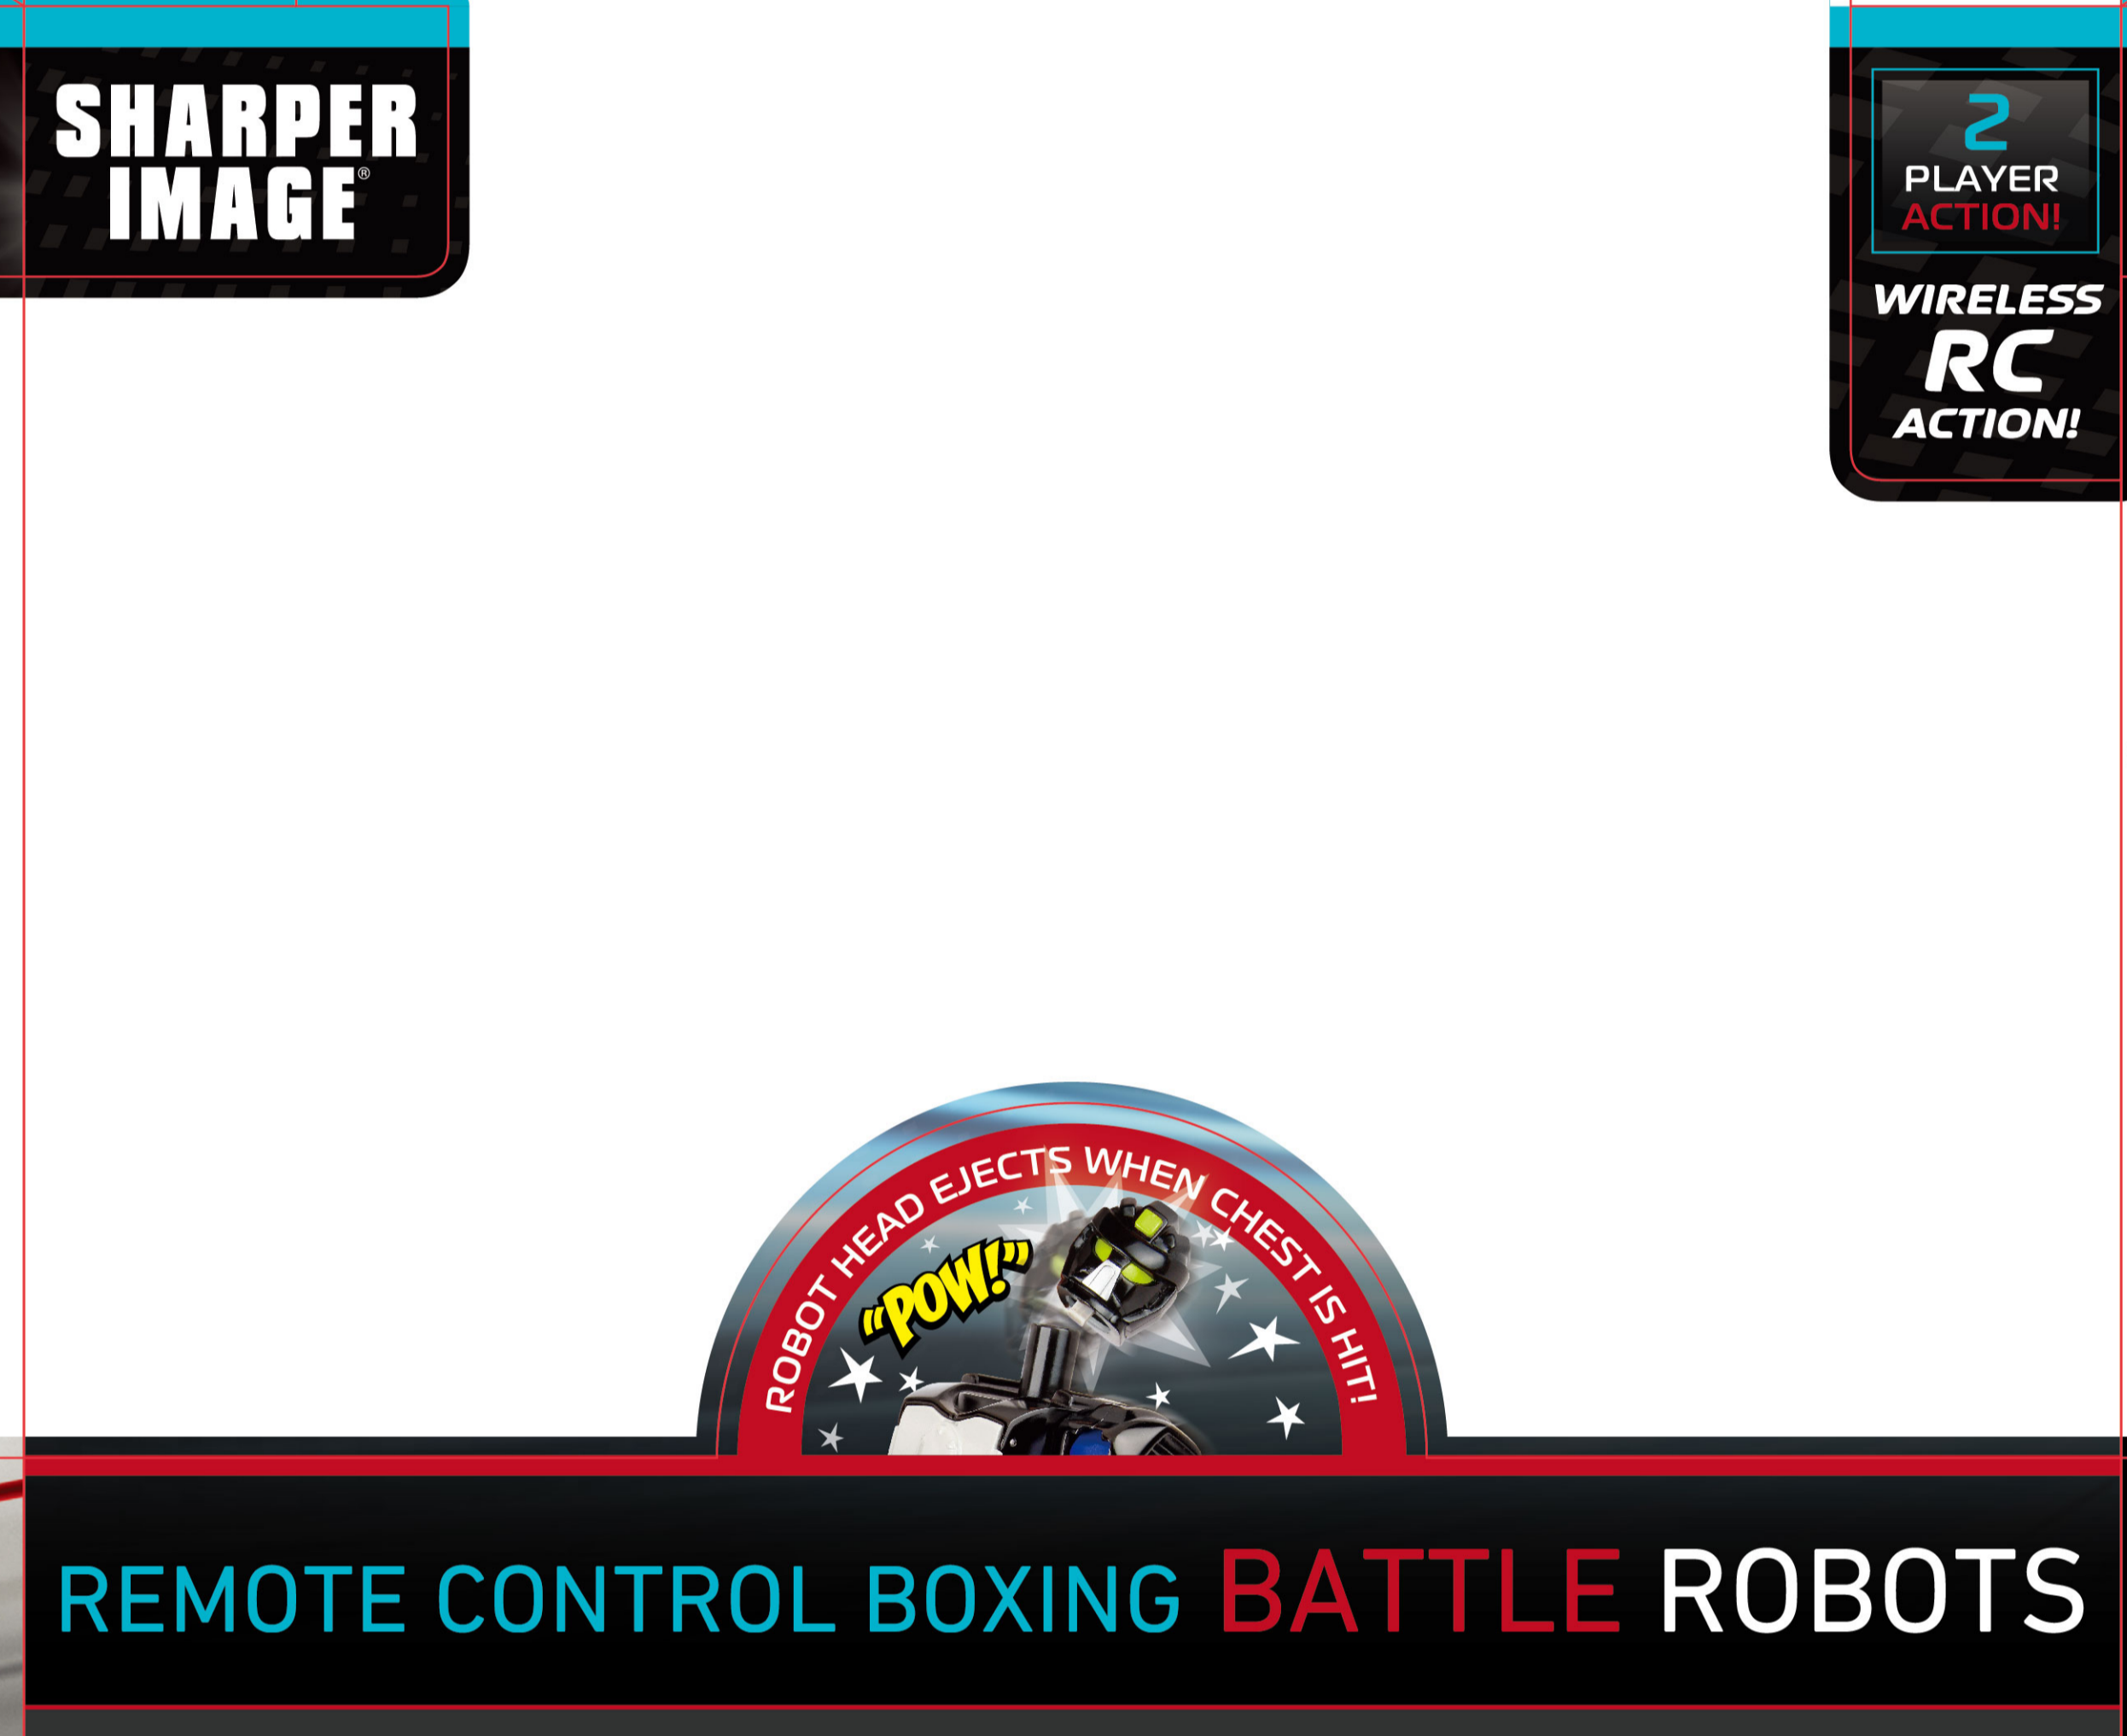

REMOTE CONTROL BOXING BATTLE ROBOTS

SAFETY PRECAUTIONS:

- Do not use the product near small children or animals, the detachable head can pose a choking hazard.
- Adult supervision is recommended at all times.
- Always point cord and power wires away from windows, never drape any portion of the product in water.
- Never place the product near sources of heat, lower direct sunlight or outside overnight as this is harmful to internal components.

BATTERY WARNING:

- Do not use any cell or type of battery.
- Do not use any alkaline, standard (carbon-zinc), or rechargeable batteries.
- Always insert only the correct polarity for the correct number of cells as specified.
- Remove batteries when not in use. Recharge or dispose of uncharged batteries according to Federal, State, and local laws. Do not dispose of batteries in the fire, as they may cause a fire.
- Use only the manufacturer's charger.
- Always use, recharge, and recharge (if applicable) batteries under adult supervision.

OPERATING INSTRUCTIONS:

Robot's head detaches when chest is hit. When charging station, auto-recharge is stopped. Do not use the robot in the performance.

- Remove the robot from the package.
- Insert the 2 AAA batteries into the battery compartment. Do not insert AA or C cells.
- Check to make sure the robot's head is properly seated. This does not set on its own.
- Insert the robot's head into the robot's body. Do not force it on.
- Push the battery cover and light covers.
- Each robot and control station is to be used in the "ON" position. The power switch is located on the side of the robot.

NOTE: Make sure you adjust the robot's head to have good contact with the ground before use. Use as a head, flat surface for best results.

OPERATING CONTROLS:

- Left joystick
- Right joystick
- Power button
- Light covers
- Head cover

HOW TO PLAY:

There are sensors located beneath each robot's chest plate. The object of the game is to touch the opponent's head off by using contact with the chest plate using the robot's head. To remove the head, place a finger between the robot and gently press down until it clicks the piece.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

©2018 Sharper Image. Sharper Image, Sharper Image, and Battle Robots are registered trademarks of Sharper Image, LLC. Sharper Image, LLC, Irvine, CA 92618. All rights reserved.

For customer support, please call 1-800-528-2774.

Printed in China. 30 2018 05 22 10 10 82P H x 8.8P W / 32.51cm Lx 26.90cm H x 22cm W.

Model No. 12 2P Lx 10 10 82P H x 8.8P W / 32.51cm Lx 26.90cm H x 22cm W.

Model No. 12 2P Lx 10 10 82P H x 8.8P W / 32.51cm Lx 26.90cm H x 22cm W.