

X18

Wireless Speaker Instructions

BT Portable Speaker

USER GUIDE



X18

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES:

- 1.IPX6 Portable Speaker with Stereo Sound;
- 2.Wireless version 5.1,with TWS function,connection to 2 same speakers at the same time, enjoy the stereo effect;
- 3.USB-disk,TF card,FM Radio,Aux-in,Wireless ect multiple working modes;
- 4.Wired microphone support, karaoke anywhere;
- 5.With RGB running light;
- 6.With Type-C charging port;
- 7.Built-in lithium rechargeable battery 3000mAh;
- 8.Stable and easy to carry straps.

Accessories:

Charge cable,User manual.

SPECIFICATION:

- 1.Wireless version: 5.1, Support A2DP and AVRCP profile.
- 2.Wireless range: up to 10 meters(without obstacles)
- 3.Speaker: Horn Size: 3 inch*2;
power: 20W*2.
- 4.Connections: USB; Aux-in 3.5mm jack connection.
- 5.OFF/ON supply: Built-in rechargeable lithium battery 3000mAh(3.7V)
(4 hours playtime with max volume and RGB light)
- 6.Recharge OFF/ON: DC 5V 1A (Type-C charging cable included)
- 7.Product size: 369*136*188MM
- 8.Frequency response: 100HZ-12KHZ

TWS Function:

- 1.Turn on the two identical speakers you want to be paired, please noted they must be the same BT pairing name, both under Wireless mode.(Only need to set up one of the two Speakers)
- 2.Short press the "TWS" button for around 2 seconds once, "di" once indicate that two Speakers are going to connecting; "di" three times indicate that two Speakers have been connected.
- 3.Under TWS function playing mode, short press the "TWS" button for around 2 seconds once, "di" once indicate that two Speakers are going to disconnecting; "di" twice indicate that the two Speakers have been disconnected.
- 4.Using Audio Cable or an external device's Wireless connect one of two Speakers which already Wireless paired, then music plays, one is in left channel while the rest one in right channel.

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES:

- 1.IPX6 Portable Speaker with Stereo Sound;
- 2.Wireless version 5.1,with TWS function,connection to 2 same speakers at the same time, enjoy the stereo effect;
- 3.USB-disk,TF card,FM Radio,Aux-in,Wireless ect multiple working modes;
- 4.Wired microphone support, karaoke anywhere;
- 5.With RGB running light;
- 6.With Type-C charging port;
- 7.Built-in lithium rechargeable battery 3000mAh;
- 8.Stable and easy to carry straps.

Accessories:

Charge cable,User manual.

SPECIFICATION:

- 1.Wireless version: 5.1, Support A2DP and AVRCP profile.
- 2.Wireless range: up to 10 meters(without obstacles)
- 3.Speaker: Horn Size: 3 inch*2;
power: 20W*2.
- 4.Connections: USB; Aux-in 3.5mm jack connection.
- 5.OFF/ON supply: Built-in rechargeable lithium battery 3000mAh(3.7V)
(4 hours playtime with max volume and RGB light)
- 6.Recharge OFF/ON: DC 5V 1A (Type-C charging cable included)
- 7.Product size: 369*136*188MM
- 8.Frequency response: 100HZ-12KHZ


TWS Function:

- 1.Turn on the two identical speakers you want to be paired, please noted they must be the same BT pairing name, both under Wireless mode.(Only need to set up one of the two Speakers)
- 2.Short press the "TWS" button for around 2 seconds once, "di" once indicate that two Speakers are going to connecting; "di" three times indicate that two Speakers have been connected.
- 3.Under TWS function playing mode, short press the "TWS" button for around 2 seconds once, "di" once indicate that two Speakers are going to disconnecting; "di" twice indicate that the two Speakers have been disconnected.
- 4.Using Audio Cable or an external device's Wireless connect one of two Speakers which already Wireless paired, then music plays, one is in left channel while the rest one in right channel.

5.Short press "Play/Pause" button on the devices or on Mobile phones to play/stop the music.

Remark: Under Wireless playing mode, insert USB/TF Card will disconnect the Wireless and switch the playing from USB/TF Card. You can press the "M" button to switch to Wireless mode again.

INSTRUCTION FOR APPEARANCE AND KEY:

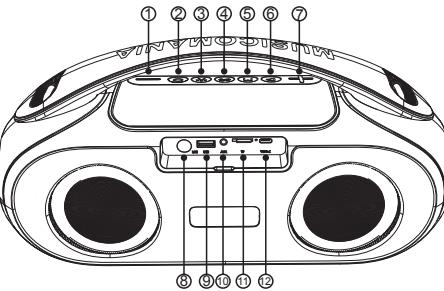

1.Backward(Long press)/ Volume down(Short press)	2.Power On/Off(long/short press)
3.RGB Light button	4.TWS
6.Play/Pause	5.Mode (Switch Wireless, USB, FM and TF)
9.USB Port	7.Forward(Long press)/ Volume up(Short press)
10.Aux-in Jack	8.Wired Mic Input
11.TF Card Port	12.Charging Port

RGB Light Function:

- 1.Short press RGB Light button to switch the modes of light with different colors, cycle switch modes.
- 2.Under FM mode,RGB Light button cannot be used.

USB/TF Card Function:

- 1.Long press "Power button" to power on, the RGB light on and "di" twice.
- 2.Insert USB flash disk/TF Card into slot, the music stored will be played automatically .
- 3.Long press "+" or "-" button to select songs you like,short press "+" or "-" button to adjust volume up and down.
- 4.Short press "Play/Pause" button to play or pause.
- 5.Short press "Power button" to power off, while without use.

Remarks:

- 1.Short press the "M" button to switch the different modes, the order is Wireless, USB , FM radio and AUX-IN.
- 2.Turn "OFF/ON" button to "OFF" to cut off the OFF/ON supply while without use.

FM Radio Function:

- 1.Long press "Power button" to power on, short press the "M" button to switch to FM radio state.
- 2.Under playing mode, long press "Play/Pause" button to auto search the FM Channel and store it automatically.
- 3.Long press "+" or "-" button to change the stored FM channel.
- 4.Short press "+" or "-" button to adjust volume up and down.
- 5.Under FM mode,RGB light will off.

Wireless Function:

- 1.Long press "Power button" to power on, the RGB light on and "di" twice.
- 2.Activate Wireless of mobile phone and search for device name "X18" then connect it, "di" three times connected successfully.
- 3.Long press "+" or "-" button on the devices or on Mobile phones to select songs you like.
- 4.Short press "+" or "-" button to adjust volume up and down. Or adjust the mobile phones' volume.

AUX-IN Function:

- 1.For other compatible music devices or your MP3/MP4 players, use the supplied Audio Cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "M" button to switch to AUX-IN state.
- 2.When using an external device, all functions will be controlled by the external device except the "Play/Pause" button, "+" or "-" button .
- 3.Short press "+" or "-" button to adjust volume up and down. Or adjust the mobile phones' volume.
- 4.Short press "Play/Pause" button on the devices or on Mobile phones to play/stop the music.

How to charge:

- 1.The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device, and we are not responsible for any damage caused by using other charger.
- 2.Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with DC 5V output (Not included), the red charging indicator keep lighting.(When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume)
- 3.Charge time should be about 2.5 hours. (When charging full, the indicator light will switch OFF)
- 4.In order to prolong the life of battery, please do not charge more than 8 hours.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.