

COBY®

True Wireless Party Speaker



Instruction Manual
CPA800



Read Me	3
English	4
Introduction	4
Package Contents.....	4
Product Overview	5
Powering on/off the speaker	6
True Wireless Pairing	6
Connecting Via Bluetooth®	7
Music Controls	7
Light Modes	8
Radio	8
Karaoke Mode.....	9
AUX, Memory Card & USB Mode	9
Specifications	9
Español	10
Introducción.....	10
Contenidos del paquete	10
Descripción del producto.....	11
Encender / apagar el altavoz	11
Verdadero emparejamiento inalámbrico	12
Conexión a través de Bluetooth®	13
Controles de la música.....	13
Modos de luz	14
Radio	14
Modo Karaoke.....	15
AUX, tarjeta de memoria y modo USB	15
Especificaciones.....	16
SUMMIT ELECTRONICS LLC ONE YEAR LIMITED Warranty	16
Contact Us.....	19

Read Me

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.
Do not use this apparatus near water.
Clean only with dry cloth
Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other

apparatus (including amplifiers) that produce heat.
Protect the power cord from being walked

on or pinched particularly at plugs, and the point where they exit from the apparatus.
Only use attachments/accessories specified by the manufacturer.
Unplug this apparatus during lightning storms or when unused for long periods of

FCC Notice to Users

FCC ID: 2AMSOCPA800

Caution: Changes or modifications not expressly approved by the Party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection Against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, however there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

time.

If repairs are necessary, please use qualified service personnel. Repairs may be necessary if the device has been damaged in any way. Such as the power-supply cord or plug being damaged, the device being exposed to rain or moisture, objects falling into the device, the device does not operate normally, or has been dropped.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for Help.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Summit Electronics LLC is under license. Other trademarks and trade names are those of their respective owner.

FCC Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

English

Introduction

Thank you for purchasing the CPA800. This instruction manual is intended to help you better understand and use your Bluetooth® Speakers. Terms covered in this manual will become more familiar to you as you use your speaker.


Before using this device for the first time, please fully charge the battery by plugging the provided Micro USB cable into the port of your speaker and plugging the other end into a local power source. The Power LED indicator will light red to indicate that the speaker has begun charging and will turn off when the speaker is fully charged.

Note: The speaker must be charged up to 10% in order for it to work, even while plugged in. Please wait a few minutes after plugging in to charge.

Package Contents

- 1 x CPA800 True Wireless Speaker
- 1 x Charging cables
- 1 x 3.5mm AUX cables
- 1 x User manual

Product Overview

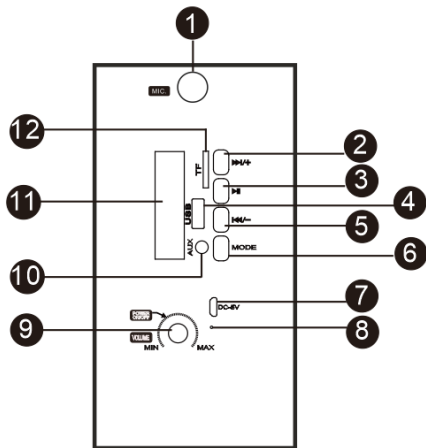

- | | |
|----------------------------------|------------------------|
| 1. Microphone input port | 6. Mode button |
| 2. Next Track/Channel button | 7. Charging port |
| 3. Play/Pause button | 8. Power LED indicator |
| 4. USB input port | 9. Power/Volume button |
| 5. Previous Track/Channel button | 10. AUX In port |
| 11. LED display | 11. LED display |
| 12. TF card slot | 12. TF card slot |

Powering on/off the speaker

To power on the speaker, turn the Power/Volume button clockwise until you hear a click.

To power off the speaker, turn the Power/Volume button anti-clockwise until you hear a click.

True Wireless Pairing

Your CPA800 speaker supports True Wireless Pairing, meaning you may transmit music from your device to two speakers at the same time with no wires connecting the two speakers.

To pair or unpair speakers with each other press and hold the Mode button on either speaker. When your speakers connect to each other you will see the LED indicator on the primary speaker rapidly flashing red, and a solid red on the secondary speaker's LED indicator.

Once the speakers are connected to each other, connect your Bluetooth device as instructed in Connecting Via Bluetooth. .

Note: The speaker that's connected to the Bluetooth® enabled device will become the primary speaker. If the user turns off the primary speaker, both speakers will turn off. True Wireless Pairing only works in Bluetooth® mode.

Connecting Via Bluetooth®

Press the Mode button on the speaker to select Bluetooth mode, The “BLUE” will slowly flash red on the LED display.

Open the Bluetooth settings on a Bluetooth enabled device (phone, tablet, laptop, etc.) Turn on the device’s Bluetooth® functionality and select CPA800 when it appears. You will hear a tone and see the “BLUE” is steady red to indicate that the device has connected successfully.

Note: On some devices you may need to scan for devices or search for devices, please reference your devices user manual on connecting Bluetooth® devices if you are unsuccessful

Music Controls

After you connect your device to the CPA800. music will be playable through your app of choice.

Press Mode button to select Bluetooth mode or AUX mode. The “BLUE” or “AUX” will be steady red on the LED display.

To pause or resume your music in Bluetooth mode, AUX Input mode, USB Input mode and Memory Card Input mode, press the Play/Pause button.

To skip to next track, press Next track/channel button. To skip to previous track, press Previous track/channel button.

Adjust the volume by turn the Power/Volume button clockwise or anti-clockwise. As you adjust the volume you will see the circular LED light display grow or shrink accordingly.

Light Mode

Press and hold the Play/Pause button to turn on the light. The light can also be turned off by pressing and holding the Play/Pause button again.

Radio

Press Mode button to select Radio mode. The “Rad” will be steady red on the LED display.

To begin scanning FM radio stations, press the Play/Pause button this process may take a few minutes so please be patient. Once all the stations are automatically downloaded and stored you will hear the radio begin to play and cycle through stations. When you arrive at the station you want to listen to, press the Play/Pause button again to stop cycling.

Note: if reception is not good you can plug in the included 3.5mm AUX cable to increase signal.

To manually switch FM radio stations, press Previous Track/Channel button and Next Track/Channel button.

Karaoke Mode

Connect a wired microphone (not included) into the Microphone Input port, to allow you to sing along with your favorite songs.

AUX, Memory Card & USB Mode

Use the included AUX cable to connect on non-Bluetooth enabled devices. Connect the other end to the device you wish to play audio from.

Note: When an AUX cable is connected, It will automatically unpair from any actively paired Bluetooth® device.

Insert a memory card or USB flash drive with MP3 files to play music directly on your speaker. See *Music Controls* on page 7 to make adjustments as necessary.

Specifications

Bluetooth® Version	5.0
Bluetooth® Range	33 Feet
Bluetooth® Pairing Name	CPA800
Playtime	Up to 7 Hours
Charge Time	5 Hours
Frequency Response	20Hz - 20KHz
Driver Unit Size	8 Inches
Impedance	4 Ω
USB & Memory Card Storage	Up to 32 GB
FM Radio	87.5 MHz - 108.0 MHz
Battery Capacity	1200mAh
Battery Type	Rechargeable Lithium-ion

Charge Voltage	5V/1A
Output Power	10W

Español

Introducción

Gracias por comprar el CPA800. Este manual de instrucciones está destinado a ayudarlo a comprender y usar mejor sus altavoces Bluetooth®. Los términos cubiertos en este manual le resultarán más familiares a medida que use su altavoz.


Antes de usar este dispositivo por primera vez, cargue completamente la batería enchufando el cable Micro USB provisto en el puerto de su altavoz y conectando el otro extremo a una fuente de alimentación local. El indicador LED de encendido se iluminará en rojo para indicar que el altavoz ha comenzado a cargarse y se apagará cuando el altavoz esté completamente cargado.

Nota: El altavoz debe cargarse hasta un 10% para que funcione, incluso mientras está enchufado. Espere unos minutos después de

Contenidos del paquete

- 1 x Altavoz inalámbrico verdadero CPA800
- 1 x cables de carga
- 1 cables AUX de 3,5 mm
- 1 x manual de usuario

Descripción del producto

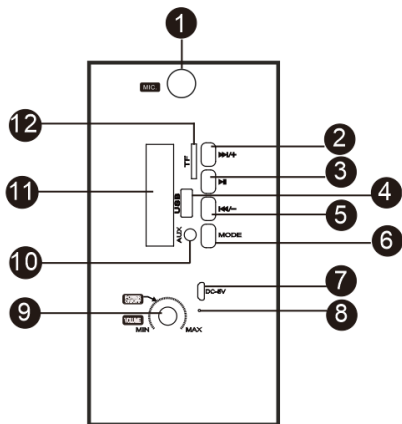

1. Puerto de entrada de micrófono

2. Botón Siguiente pista / canal

3. Botón de reproducción / pausa

4. Puerto de entrada USB

5. Botón de pista / canal anterior

6. Botón de modo

7. Puerto de carga

8. Indicador LED de encendido

9. Botón de encendido / volumen

10. Puerto de entrada AUX

11. Pantalla LED

12. Ranura para tarjetas TF

Encender / apagar el altavoz

Para encender el altavoz, gire el botón Encendido / Volumen en el sentido de las agujas del reloj hasta que escuche un clic.

Para apagar el altavoz, gire el botón Encendido / Volumen en sentido antihorario hasta que escuche un clic.

Verdadero emparejamiento inalámbrico

Su altavoz CPA800 es compatible con True Emparejamiento inalámbrico, lo que significa que puede transmitir música de su dispositivo a dos altavoces en el Al mismo tiempo sin cables que conecten los dos Altavoces.

Para emparejar o desvincular altavoces entre sí presione y mantenga presionado el botón Modo en altavoz. Cuando sus altavoces se conectan a entre sí, verá el indicador LED en el el altavoz principal parpadea rápidamente en rojo y un rojo en el indicador LED del altavoz secundario.

Una vez que los altavoces están conectados a cada Otro, conecte su dispositivo Bluetooth como instruido en Conexión a través de Bluetooth. .

Conexión a través de Bluetooth

Presione el botón Mode en el altavoz para seleccionar el modo Bluetooth. El "AZUL" parpadeará lentamente en rojo en la pantalla LED.

Abra la configuración de Bluetooth en un dispositivo habilitado para Bluetooth (teléfono, tableta, computadora portátil, etc.) Encienda la funcionalidad Bluetooth® del dispositivo y seleccione CPA-800 cuando aparezca. Escuchará un tono y verá que el "AZUL" está en rojo fijo para indicar que el dispositivo se ha conectado correctamente.

Nota: En algunos dispositivos, es posible que deba buscar dispositivos o buscar dispositivos, consulte el manual de usuario de sus dispositivos para conectar dispositivos Bluetooth® si no tiene

Controles de la música

Después de conectar su dispositivo a la música CPA-800, podrá reproducirla a través de la aplicación que elija.

Presione el botón Mode para seleccionar el modo Bluetooth o el modo AUX. El "AZUL" o "AUX" será rojo fijo en la pantalla LED.

Para pausar o reanudar su música en modo Bluetooth, modo de entrada AUX, modo de entrada USB y modo de entrada de tarjeta de memoria, presione el botón Reproducir / Pausa.

Para saltar a la siguiente pista, presione el botón Siguiente pista / canal. Para saltar a la

pista anterior, presione el botón Pista / canal anterior.

Ajuste el volumen girando el botón Encendido / Volumen en sentido horario o antihorario. A medida que ajusta el volumen, verá que la pantalla de luz LED circular crece o se reduce en consecuencia.

Modos de luz

Mantenga presionado el botón Reproducir / Pausa para encender la luz. La luz también se puede apagar presionando y manteniendo presionado el botón Reproducir / Pausa nuevamente.

Radio

Presione el botón Mode para seleccionar el modo Radio. El "Rad" estará rojo fijo en la pantalla LED.

Para comenzar a buscar estaciones de radio FM, presione el botón Reproducir / Pausa. Este proceso puede demorar algunos minutos, así que tenga paciencia. Una vez que todas las estaciones se descarguen y almacenen automáticamente, oírás que la radio comienza a reproducirse y recorre las estaciones. Cuando

llegue a la estación que desea escuchar, presione el botón Reproducir / Pausa nuevamente para detener el ciclo.

Nota: Si la recepción no es buena, puede enchufar el cable auxiliar de 3.5 mm incluido para aumentar la señal.

Para cambiar manualmente las estaciones de radio FM, presione el botón Pista / Canal anterior y el botón Pista / Canal siguiente.

Modo Karaoke

Conecte un micrófono con cable (no incluido) en el puerto de entrada de micrófono, para que pueda cantar junto con sus canciones favoritas.

AUX, tarjeta de memoria y modo USB

Use el cable AUX incluido para conectarse en dispositivos no habilitados para Bluetooth®. Conecte el otro extremo al dispositivo que desea reproducir audíode.

Nota: Cuando se conecta un cable AUX, se desvinculará automáticamente de cualquier dispositivo Bluetooth® activamente

Inserte una tarjeta de memoria o unidad flash USB con archivos MP3 para reproducir música directamente en su altavoz. Consulte Controles de música en la página 5 para realizar los ajustes necesarios.

Especificaciones

Versión Bluetooth®	5.0
Alcance Bluetooth®	33 pies
Nombre de emparejamiento de Bluetooth®	CPA800
Tiempo de juego	Hasta 7 horas
Tiempo de carga	5 horas
Respuesta frecuente	20Hz - 20KHz
Tamaño de la unidad del conductor	8 pulgadas
Impedancia	4 Ω
Almacenamiento de USB y tarjeta de memoria	Hasta 32 GB
Radio FM	87.5 MHz - 108.0 MHz
Capacidad de la batería	1200mAh
Tipo de Batería	Recargable de iones de litio
Voltaje de carga	5V / 1A
Potencia de salida	10W

SUMMIT ELECTRONICS LLC ONE YEAR LIMITED Warranty

WARRANTY SUMMIT ELECTRONICS LLC LIMITED WARRANTY ("Warranty") — For Product Categories Listed in Chart Below (as applicable, "Product") Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully. If you are still having trouble with your Product, please contact Technical Support at support@summitcegroup.com

Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children.

Subject to the terms and conditions herein, SUMMIT ELECTRONICS LLC (hereinafter called "SUMMIT ELECTRONICS LLC") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects"). Warranty Period encompasses,

as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period for one year, to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, SUMMITELECTRONICSLLC will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable) either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/ or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and SUMMIT ELECTRONICS LLC's sole liability for breach of the limited warranty contained herein.

This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than SUMMIT ELECTRONICS LLC or a party authorized in writing by SUMMIT ELECTRONICS LLC; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God. Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use.

In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. SUMMIT ELECTRONICS LLC disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product and agrees to indemnify SUMMIT ELECTRONICS LLC for any damages claimed against SUMMIT ELECTRONICS LLC for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS", AND SUMMIT ELECTRONICS LLC DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL SUMMIT ELECTRONICS LLC BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF SUMMIT ELECTRONICS LLC HAS BEEN

ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, SUMMIT ELECTRONICS LLC'S AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING THE DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, Customer must email SUMMIT ELECTRONICS LLC Technical Support prior to making a Product return. Customer must include with Product return the following items (failure to enclose any of these items may result in a delay in the processing of your Warranty claim): (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full

PRODUCT CATEGORY	SHIPPING* (USD)
Adapters, Converters, Chargers, Headphones, Microphones, Cellular Accessories	\$7.99
Alarm Clocks, Portable CD Players, Radios, Corded Telephones, MP3 Players, Digital Photo Frames (screen size less than 5")	\$7.99
Portable Stereo Systems, Speaker Systems, Cordless Telephones, Home DVD Players	\$14.99
Home Theater DVD Systems, Portable DVD Players, Portable Media Players, Digital Photo Frames (screen sizes 5" to 11")	\$21.99

name, phone number, and return address, and; (iv) a money order made out to SUMMIT ELECTRONICS LLC Electronics Corporation to cover return shipping charges to US destinations only, for the applicable dollar amount shown for the Product in the table above. SUMMIT ELECTRONICS LLC will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to Customer. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim (6 to 8 weeks from November to February).

You must email SUMMIT ELECTRONICS LLC Technical Support prior to making a return. Please ask if you are unsure of which category your product falls under.

*US destinations only.

Contact Us

Contact us at **support@summitcegroup.com** for return information and customer support!

PO No.: 90525
Version No.: V1.1