



Front

<p>Second problem: The music player appears sound breaks. Solution: (1) View the distance between the player and the speaker has not been exceeded effective Bluetooth connection distance 8-12meters. (2) Ensure there is not any obstacle between the play device and speakers. (3) Check the playback device or whether the speaker is in a low power state.</p> <p>Notes before use This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules: 1. Place the speakers in a stable position avoid fall and cause damage or personal injury. 2. Do not drop, disassemble, open, crush, bend, puncture, burn speaker. 3. Do not close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment) where the use of speakers. 4. Please send professional maintenance staff to repair for any reason damage. 5. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet. 6. Health considerations, please adjust the sound to a suitable level.</p>	<p>FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.</p> <p>Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off</p>	<p>and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.</p> <p>FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.</p>	<p>TWS connection 1: Turn on both speakers 2: Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound. 3: Release Play/Pause button. It can take a few more seconds before speakers connect to each other. 4: Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number . . . (it will only display 1 number which is both combined in to one)</p> <p>TWS disconnection 1. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound</p>	<p>Note When speakers are previously paired with each other: If they do not automatically pair with each other when you turn them on, press and hold the Play/Pause button on one of the speakers for about 2 seconds. It can take a few more seconds before the speakers connect to each other. If you are connected to both speakers without the TWS connection between them, then you have to disconnect from one of the speakers.</p>
---	--	--	--	--

Back