

LEGENDS ULTIMATE

INSTRUCTION MANUAL

MODEL NO.: HA8801B, HA8801C, HA8801D, HA8801S



Sign Up For ArcadeNet® !

- ✓ More Games with Instant Play
- ✓ Online Multiplayer and Leaderboards
- ✓ Special Deals for Members
- ✓ And So Much More...



Sign Up at www.arcadenet.net

ATGAMES
www.atgames.net

INDEX

ASSEMBLY GUIDE	P 2
LEGENDS ULTIMATE FEATURES	P 11
QUICK START GUIDE	P 12
HOW TO UPDATE FIRMWARE	P 12
HOW TO SIGN UP AND SIGN IN FOR AN ARCADENET® ACCOUNT	P 13
HOW TO PAIR BLUETOOTH DEVICES	P 14
HOW TO CONNECT ATGAMES BLAST! DONGLES AND CONSOLES TO LEGENDS ULTIMATE	P 15
HOW TO SAFELY POWER OFF ARCADE	P 16
WARRANTY INFO	P 16
FEATURED GAMES	P 17
SAFETY NOTICE, FCC STATEMENT	P 18

ASSEMBLY GUIDE

• **TOOLS NEEDED**
(NOT INCLUDED)

 


Phillips head screwdriver



Straight head screwdriver

PARTS

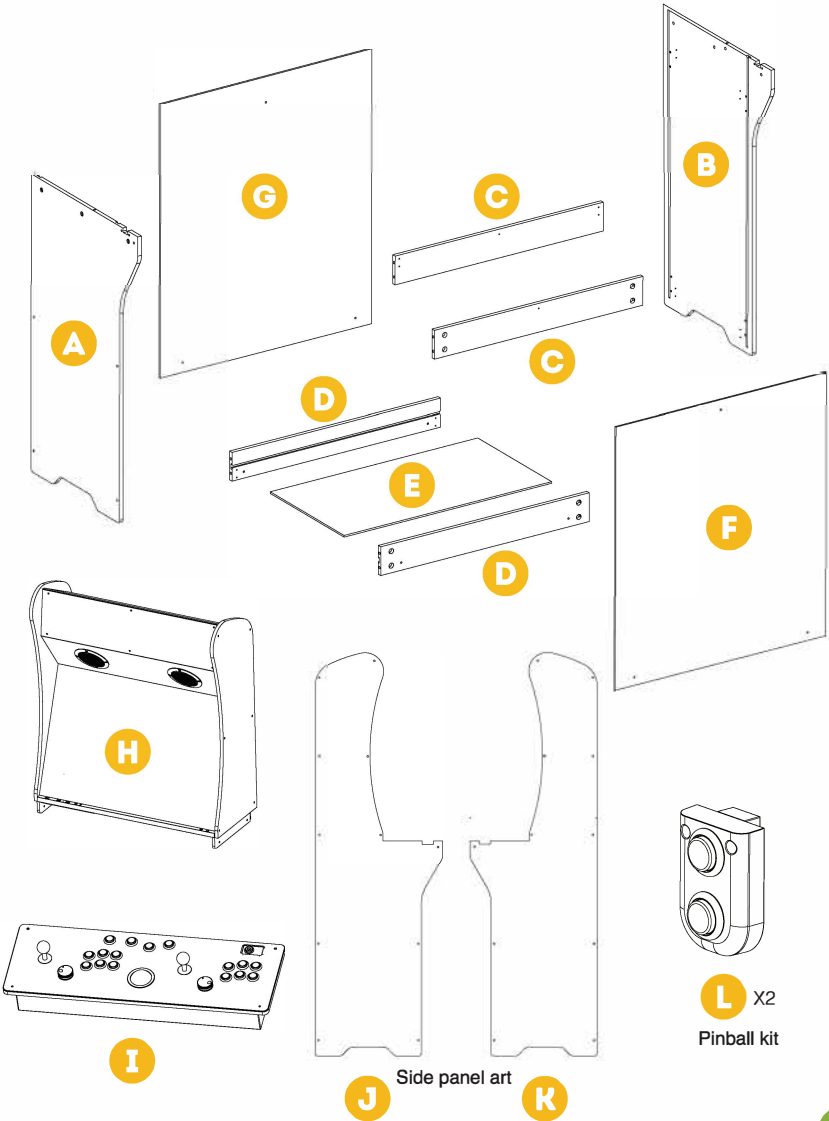

ASSEMBLY GUIDE

SCREWS



S1 X16



S2 X16



S3 X6



S4 X2



S5 X6

 


S6 X22



S7 X4

CORD

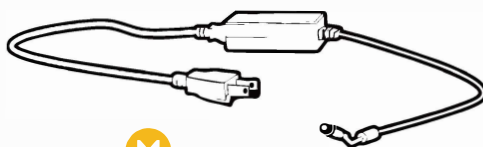

M Power adapter

ANTI-TIPPING KIT



 
N X2



S8 X2



S9 X2




O X2



P Cable tie

ASSEMBLY STEPS

• HOW TO USE THE CAM BOLT KIT

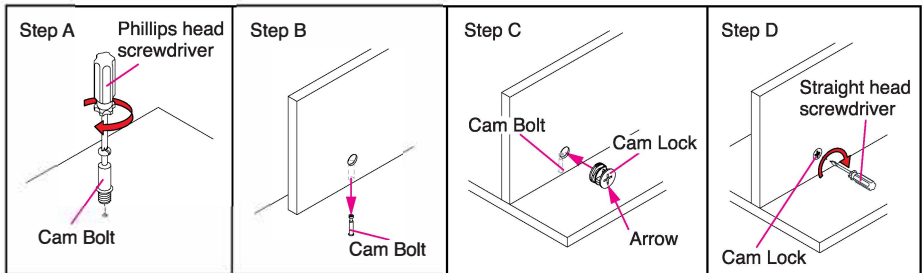


Step A. Use Phillips head screwdriver to fasten the cam bolt onto the panel. To avoid insufficient length to connect the cam lock, please do not overtighten it.

Step B. Attach both panels. Please make sure the cam bolts align with the holes.



Step C. Insert the cam locks to the matching holes.

Step D. Tighten clockwise with straight head screwdriver.

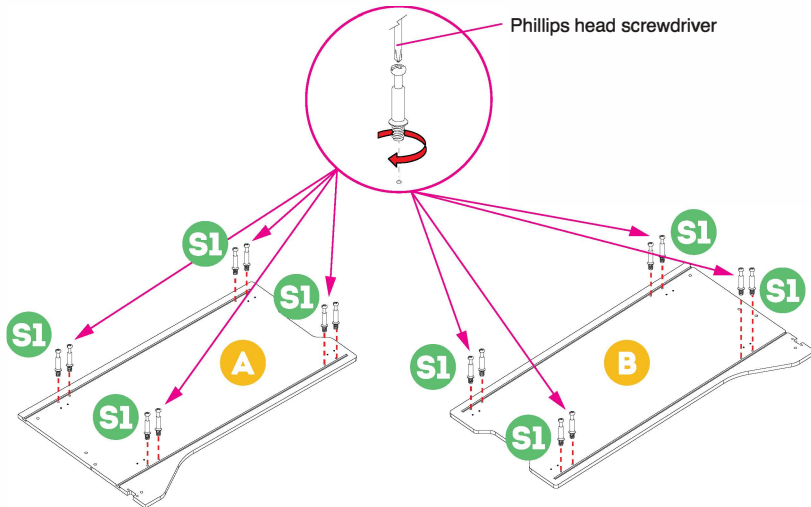


Step 1. Insert the 16 [S1] to the matching holes on [A] and [B] on both panels with Phillips head screwdriver. Please insert and make sure to tighten perpendicular to the board, redo the step as needed. Do not use excessive force or risk breaking the panels.

ASSEMBLY STEPS

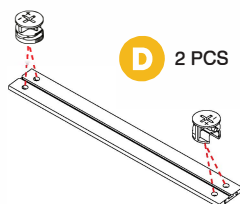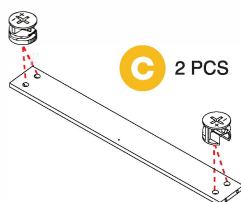


 Step 2. Insert 16 [S2] to the matching holes on the pairs of [C] and [D]. Please note the side with the slotted faces outwards.

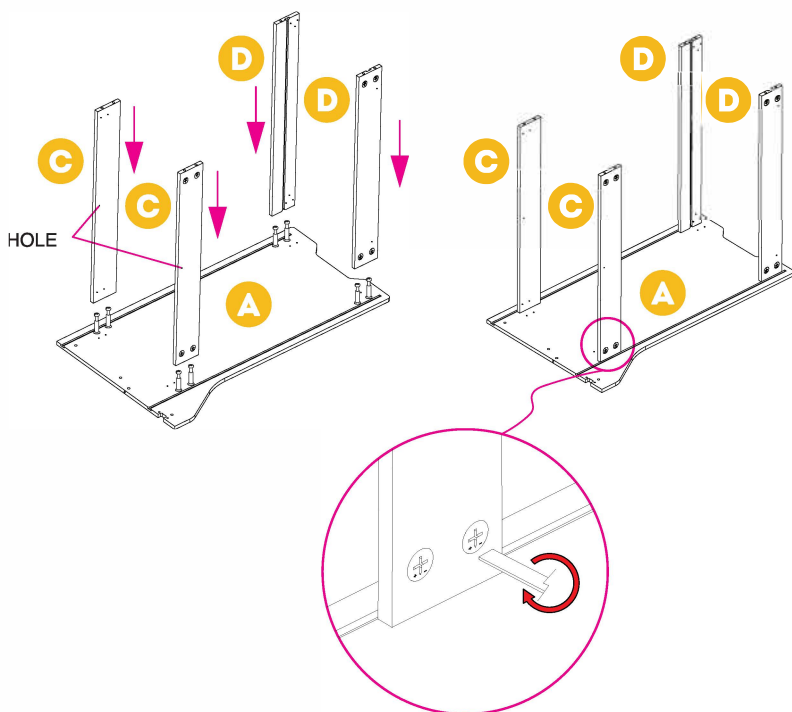


Step 3. Lay [A] aside and take out a piece of [C]. Insert [C] into [A]. Please note the sides with holes face outwards. Use straight head screwdriver to rotate [S2] with mark "+" to tighten. Repeat process for the rest of [C] and [D].

ASSEMBLY STEPS

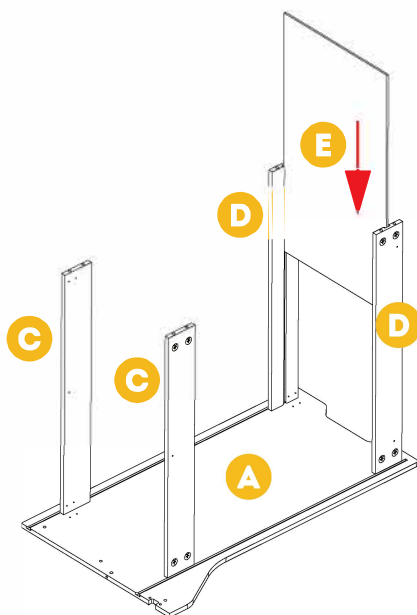


Step 4. Slide [E] into the tracks of the pair of [D].

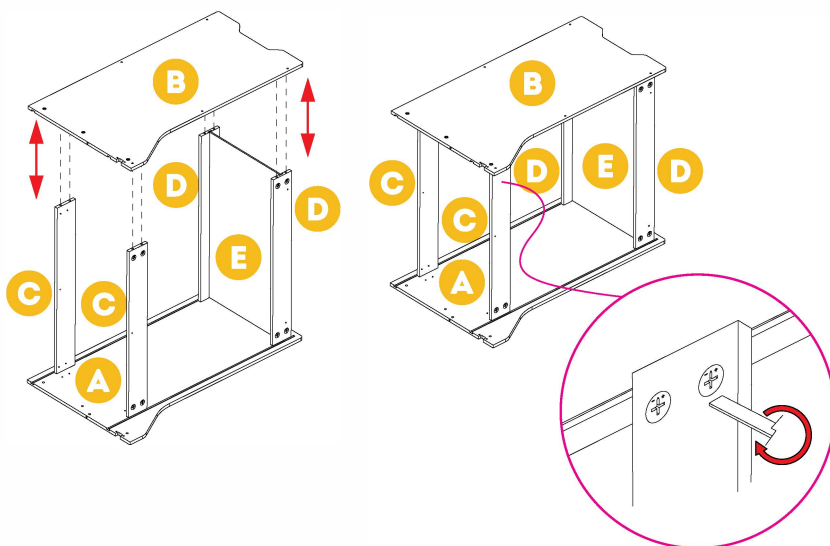


Step 5. Insert [B] to the matching holes on [C] and [D]. Use flat head screwdriver to rotate the 8 [S2] with mark "+" to tighten.


ASSEMBLY STEPS

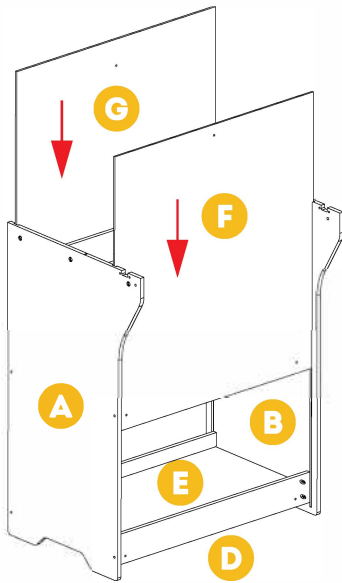

Step 6. Slide [G] and [F] into the tracks of [A] and [B].

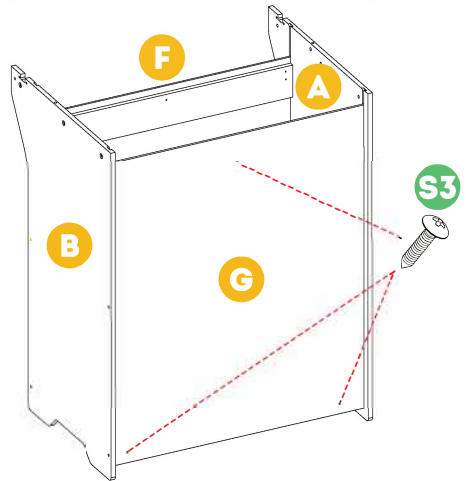


Step 7. Insert [S3] to the matching holes on [G] and [F] with Phillips head screwdriver.

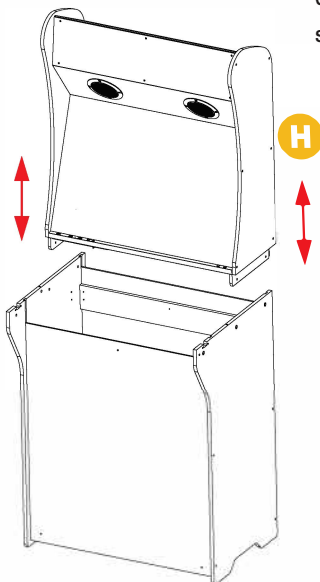


Step 8. Attach bar top [H] to the bottom part of the cabinet.

 ASSEMBLY STEPS

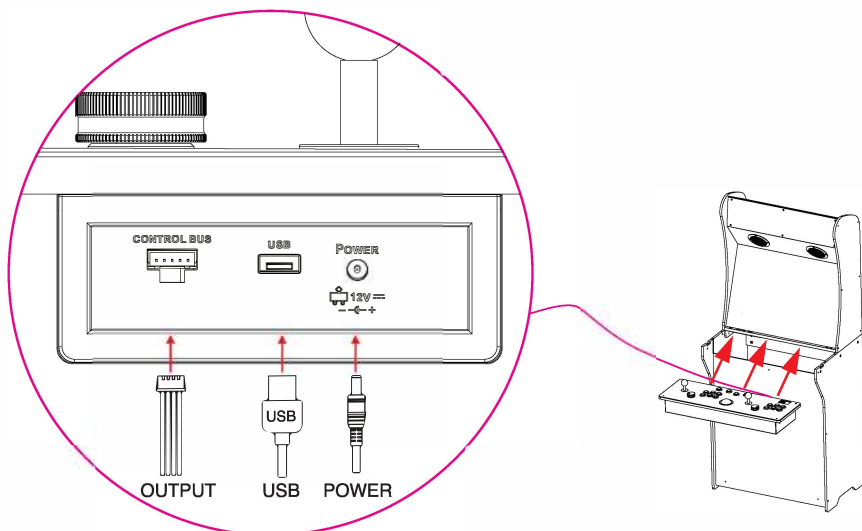


Step 9. Connect the cables to the matching slots on the control panel [I]. Please make sure the slots are aligned. Insert [I] to the cabinet.

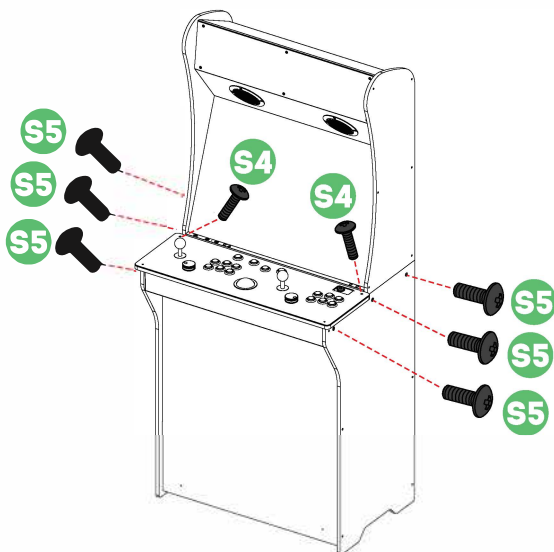


Step 10. Insert a pair of [S4] to the matching holes on [I], and then insert [S5] to 6 matching holes on the sides of the cabinet and tighten.

ASSEMBLY STEPS

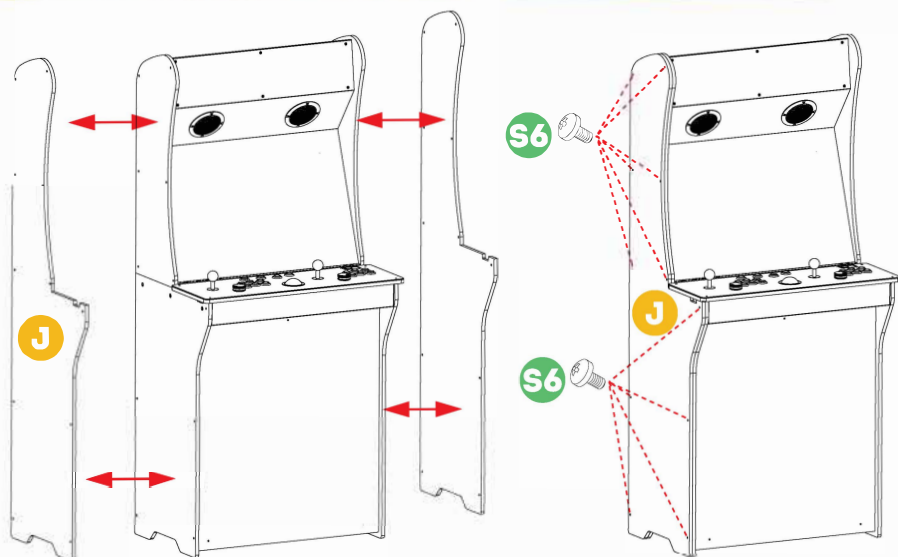


 Step 11. Insert [S6] to 22 matching holes on [J] and [K] and tighten.

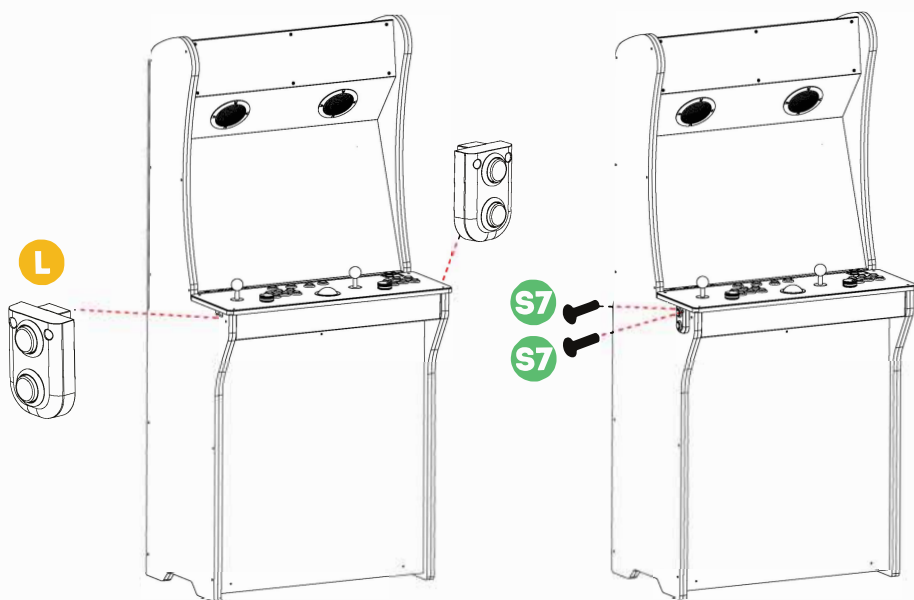


Step 12. Attach [L] to the matching slot on the sides of the cabinet. Insert [S7] to 4 matching holes and tighten.

 
ASSEMBLY STEPS

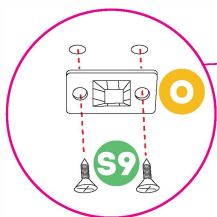



 
Step 13. Tighten [S9] on the bracket [O] against the top back side of the cabinet.

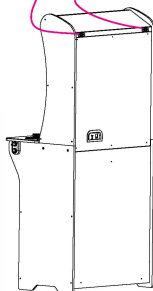

Step 14. Drill holes against the wall and insert plastic anchors [N] into the holes firmly.

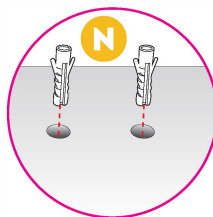

Step 15. Tighten [S3] on the bracket [O] against the wall.

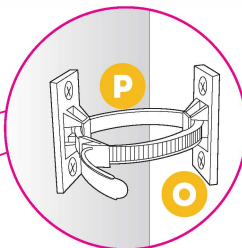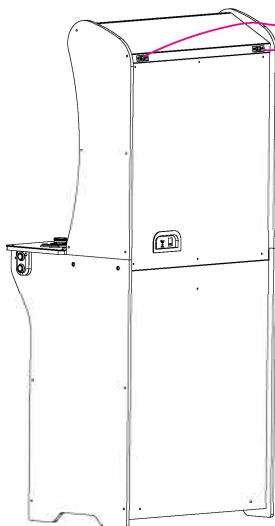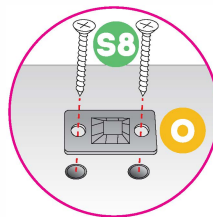

Step 16. Fasten the cable tie [P] to connect both brackets [O] to keep the cabinet from tipping over.



WARNING

 
Serious or fatal crushing injuries can occur from tip-over.

To help prevent tip-over:

- Do not set any heavy objects on top of the cabinet.
- Never allow children to climb or hang on the cabinet.

Use of tip-over restraints may only reduce but not eliminate the risk of tip-over.

LEGENDS ULTIMATE FEATURES

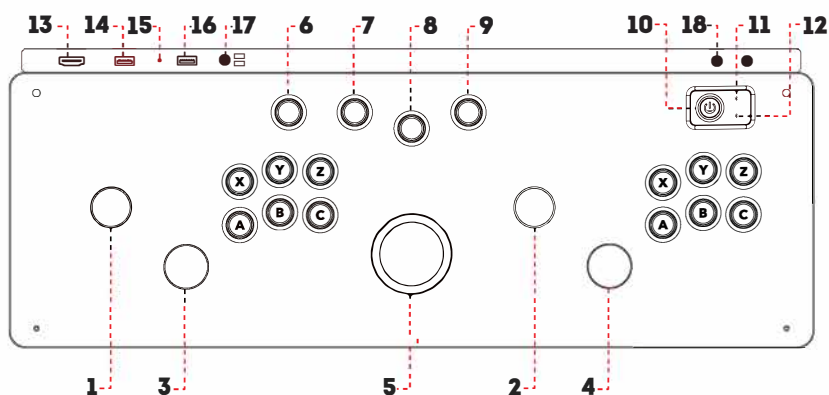

1. JOYSTICK P1

2. JOYSTICK P2

3. SPINNER P1

4. SPINNER P2

5. TRACKBALL

6. RETURN

7. START P1

8. HOME/MENU

9. START P2

10. POWER

11. P1 BLUETOOTH INDICATOR

12. P2 BLUETOOTH INDICATOR

13. HDMI PORT

14. USB 2.0 PORT

 
15. RESET BUTTON

16. USB 3.0 PORT


17. SWITCH BUTTON

18. VOLUME ADJUSTER

•FRONT

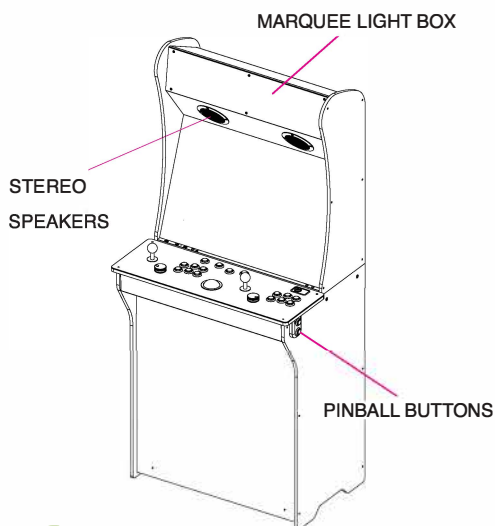





•REAR

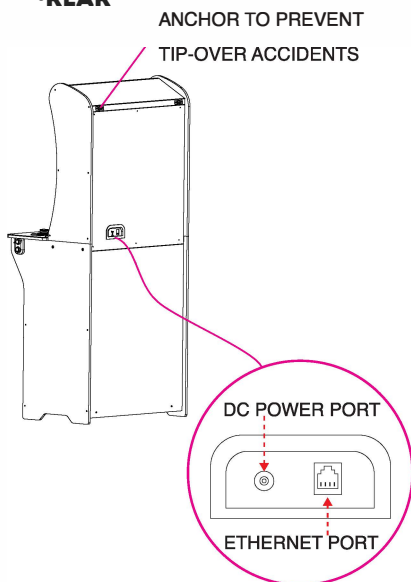 

QUICK START GUIDE

All screenshots shown are for illustration purposes only. Actual screens may vary due to ongoing software enhancements.

1. Plug in AC adapter and press the Power button to turn on.
2. Move the P1 joystick and select from [GAMES] to enjoy 300 pre-loaded games. (Note: Internet connection is not required. The games can be played offline.)
3. To access the internet, connect an Ethernet Cable (not included) or go to [SETTINGS] to connect through Wi-Fi.
4. To connect to a Wi-Fi network:
 - 4-1. Select [Wi-Fi] under the [SETTINGS] page. Select [Wi-Fi] under the [SETTINGS] page.
 - 4-2. Select the Wi-Fi SSID you would like to connect to, and select [Connect]. If prompted, enter the Wi-Fi password using the on-screen keyboard and select [Submit] when done.

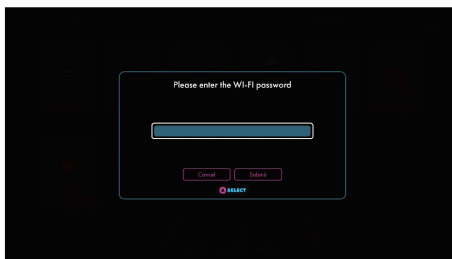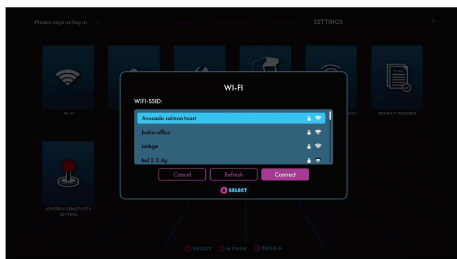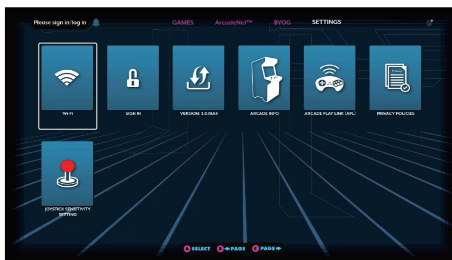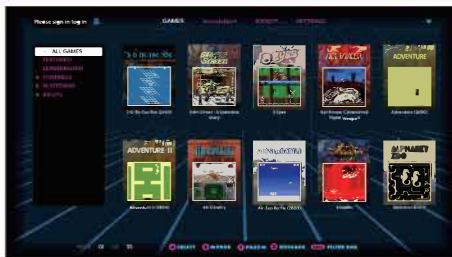

HOW TO UPDATE FIRMWARE

 
 
1. Power on the arcade.
2. Connect via Ethernet or Wi-Fi for internet connection.
3. Go to [SETTINGS] menu and select [Version].
4. If there is a newer firmware version, please follow the instructions to start downloading firmware from the server. (Please make sure the internet connection is stable.)
5. Once the firmware has downloaded without any issue, please select [Upgrade] and the arcade machine will reboot automatically with the new firmware version.

Note: If you encounter any issues on firmware update, please refer to:
<https://www.atgames.net/arcades/release-notes/> or contact support@atgames.net

HOW TO SIGN UP AND SIGN IN FOR AN ARCADENET® ACCOUNT

1. Go to [SETTINGS] page and select [SIGN IN]. You can choose either to sign in with your e-mail or with QR-code. To sign in with your e-mail, enter the e-mail address and password.



2. To sign in with QR-code, a smartphone is required.

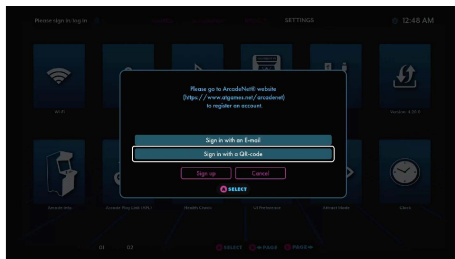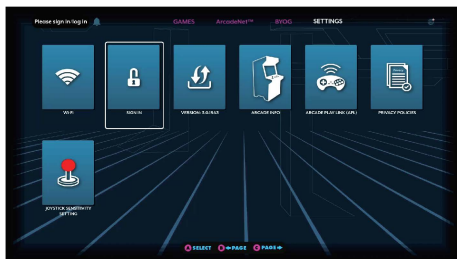

3. Use a smartphone to scan the QR-code on the screen to launch the ArcadeNet® website.



You will be directed to a login page, where you can choose either to sign in with your existing Google/Facebook account or e-mail.

4. You can also sign up for a new account here if you don't have an account already.

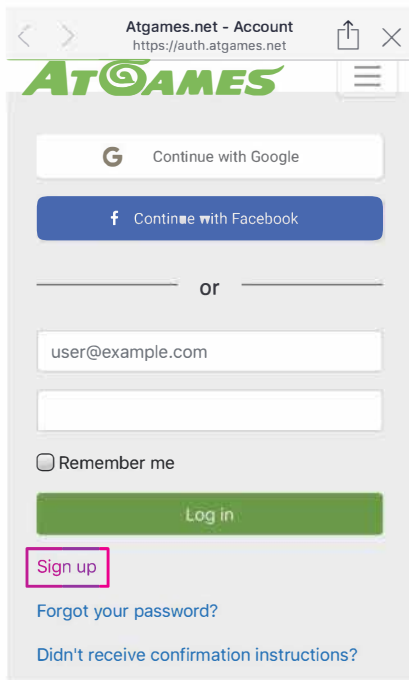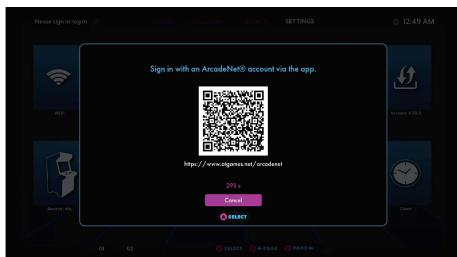

HOW TO SIGN UP AND SIGN IN FOR AN ARCADENET® ACCOUNT

 
5. You will see the authorization notification once complete. Now you can close the window and return to your arcade. A “Success!” message will show on the arcade once signed in.

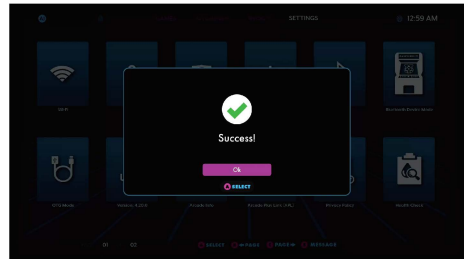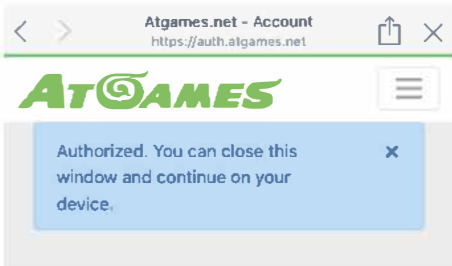



HOW TO PAIR BLUETOOTH DEVICES

• ARCADE MACHINE PAIRING AS HOST

1. Power on the arcade.
2. Go to [SETTINGS] and select [Bluetooth]. Select [Refresh] to search for the device to pair.

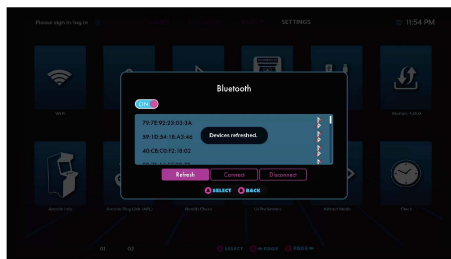


 
3. Select the device you wish to pair and select [Connect].

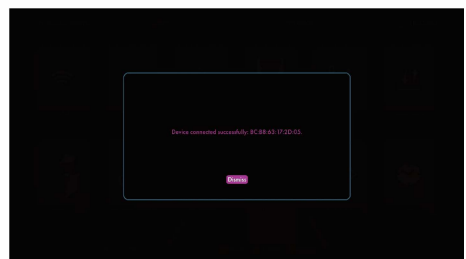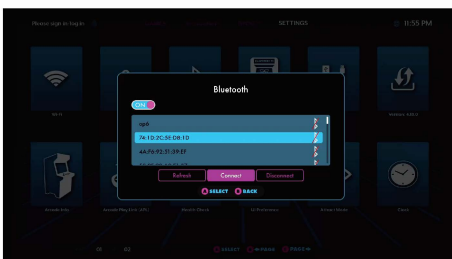




HOW TO PAIR BLUETOOTH DEVICES

• ARCADE MACHINE PAIRING AS DEVICE

  1. Power on the arcade machine.
2. Go to [SETTINGS] > [Bluetooth Device Mode].
3. Select [Discoverable] to make the arcade available to other devices.

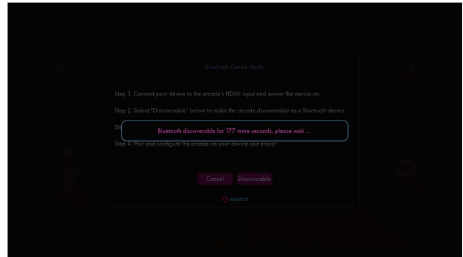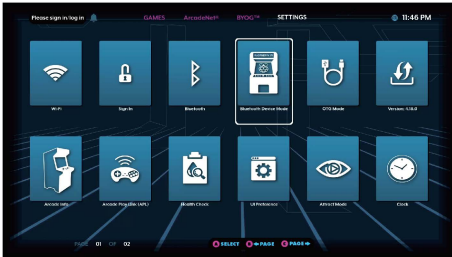

4. Enable Bluetooth on your external device, and pair it to the arcade machine. Look for a device named "HA8800-xxxxxx".

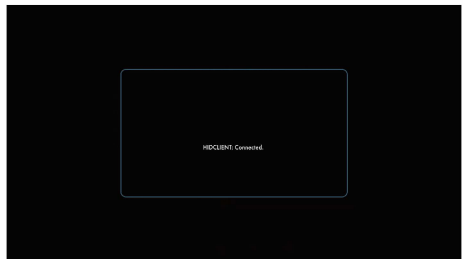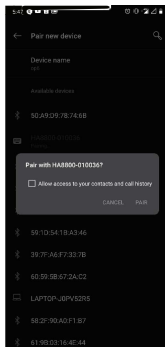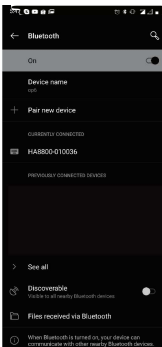

HOW TO CONNECT ATGAMES BLAST! DONGLES AND CONSOLES TO LEGENDS ULTIMATE*

Step 1. Plug the "Blast! dongle" or connect "AtGames console" with HDMI cable in the HDMI PORT, and connect USB power cord.

Step 2. Press HDMI SWITCH button to selected HDMI source.

Step 3. The Games Menu will display on the screen. Select the game you like and play!

*Legends Ultimate supports the following AtGames products:

2019: Legends Flashback (FB8660), Atari Flashback X (AR3060), Bandai Namco Arcade Blast! (WD3305 and WD3305S), Adventure Flashback Blast! (WD3308), Star Flashback Blast! (WD3309).

2018: Activision Flashback Blast! (WD3301), Atari Flashback Blast! Vol.1 (WD3302), Atari Flashback Blast! Vol.2 (WD3303), Legends Flashback Blast! (WD3304), Bandai Namco Flashback Blast! (WD3306).

For 2018 Blast! and 2019 WD3305S, please follow the instructions shown on the screen at SETTINGS to pair the dongle with Legends Ultimate.

HOW TO SAFELY POWER OFF ARCADE

Please avoid powering off the cabinet during the following:

- Firmware update
- Factory reset
- Data cleanup
- Read/write USB drive

This will prevent irreversible data loss and/or damage to your cabinet and USB drives.

WARRANTY INFO

The manufacturer warrants this product to be free and clear of defects in the materials and workmanship, under normal residential use and conditions, for a period of thirty (30) days from the original invoice date. Shipping and handling fees are to be paid for by the customer.

Please also be aware that standard warranty services are valid with receipt from an authorized retailer. Purchases through third-party sellers and resellers do not fall under the standard warranty program. For warranty support, please contact the third-party seller or reseller where you purchased the product.

To make a warranty claim, please submit a service request via email here:
support@atgames.net

FEATURED GAMES

Adventure (2600)
Aladdin
Asteroids® (Arcade)
Bad Dudes vs. Dragon Ninja
Bubble Bobble™
Bubble Symphony™
BurgerTime™ (Arcade)
Burnin' Rubber™ (Arcade)
Cadash™
Centipede® (Arcade)
Chuck'n Pop™
City Connection
Colony 7™
Crystal Castles® (Arcade)
Donald in Maui Mallard
Elevator Action™
Fighter's History Dynamite / Karnov's Revenge
Fix-It Felix, Jr.
Front Line™
Joe & Mac: Caveman Ninja (Arcade)
Karate Champ
Lock 'n' Chase (arcade)
Magical Drop / Chain Reaction
Major Havoc (Arcade)
Millipede® (Arcade)

Missile Command® (Arcade)
Operation Thunderbolt™
Operation Wolf™
Peter Pepper's Ice Cream Factory
Pong® (Arcade)
Qix™
Rastan™
Space Invaders™
Space Invaders DX™
Super Breakout® (Arcade)
Super Burger Time
Super Star Wars
Super Star Wars: Return of the Jedi
Super Star Wars: The Empire Strikes Back
Tempest® (Arcade)
Tetris®
Tetris® Plus
The Jungle Book
The Lion King
Tron
Warlords® (Arcade)
Wild Western™
Yars' Revenge® (2600)
Zombies Ate My Neighbors
Zoo Keeper™

And many more...

© 2020 Atari Interactive, Inc.

Atari and Atari logo are trademarks owned by Atari Interactive, Inc.

All individual Atari game names and logos are trademarks or registered trademarks of Atari Interactive, Inc. or its affiliates.

All other trademarks are the property of their respective owners.



© CITY CONNECTION CO., LTD

DATA EAST and DATA EAST logo(s) are trademarks in United States and other countries or registered trademarks in European Union and Japan of G-MODE Corporation.

© 2020 Disney. All rights reserved.

© 2020 & ™ Lucasfilm Ltd. All rights reserved.

Copyright © Piko Interactive LLC - All Rights Reserved.

SPACE INVADERS™ & © TAITO CORPORATION 1978 ALL RIGHTS RESERVED.

BUBBLE BOBBLE™ & © TAITO CORPORATION 1986 ALL RIGHTS RESERVED.

TAITO, the TAITO logo, SPACE INVADERS™ and BUBBLE BOBBLE™ are trademarks and/or registered trademarks of TAITO CORPORATION in Japan and/or other countries.



Tetris ® & © 1985~2020 Tetris Holding.

Tetris logos, Tetris theme song and Tetriminos are trademarks of Tetris Holding.

The Tetris trade dress is owned by Tetris Holding.

Licensed to The Tetris Company.

Tetris Game Design by Alexey Pajitnov.

All Rights Reserved.



SAFETY NOTICE

- Do not submerge the arcade cabinet in water or expose it to extreme heat or to strong magnetic fields. Doing so may cause permanent damage to your device.
- Always use a dry towel to clean the cabinet and the control top.
- Transformers are suitable for indoor use only. Transformers and power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Game Host

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING

Adult assembly required. Due to the presence of small parts during assembly, keep out of reach of children until assembly is complete.



For additional support please email:
support@atgames.net

ATGAMES

© 2020 AtGames Interactive

www.atgames.net

PO Box 1691, El Segundo, CA 90245

All rights reserved.

*Content and images are for reference only and subject to change.

FCC RF Exposure Information and Statement

This transmitter must not be in co-location or operating in conjunction with any other antenna or transmitter. This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20 centimetres between the device and your body.